




SEAGATE 4000E

Feel Alive.

Please quote by part number, not key number when ordering.
spares@daiwaaustralia.com.au PH: (02) 8644 8644

SEAGATE
4000E/4500E

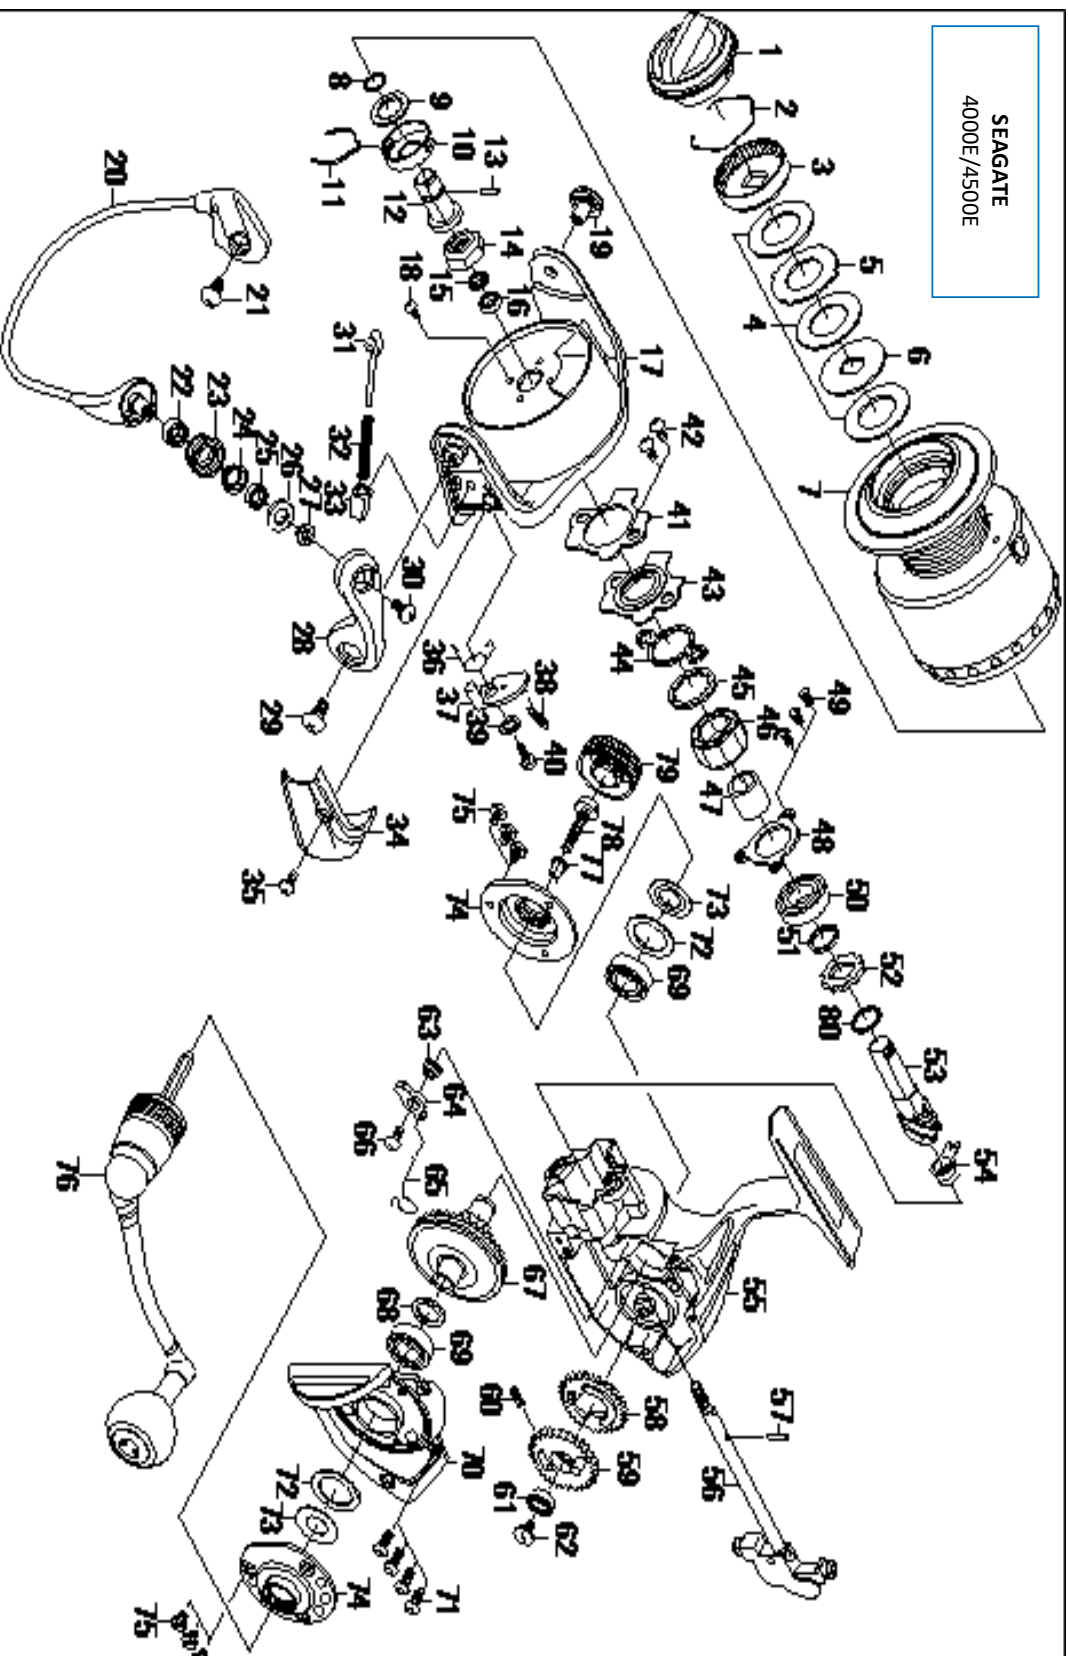

REEL NAME	MGFT CODE	KEY NO	PARTS CODE	DESCRIPTION
SEAGATE 4000E		1	6H277001	Drag knob
SEAGATE 4000E		2	6F710001	Drag washer retainer
SEAGATE 4000E		3	6G165602	Drag knob click plate
SEAGATE 4000E		4	6H247201	Drag washer
SEAGATE 4000E		5	6G165902	Eared washer
SEAGATE 4000E		6	6G162702	DRAG DISC WASHER
SEAGATE 4000E		8	6G163201	"O" ring
SEAGATE 4000E		9	6F137500	Washer (A)
SEAGATE 4000E		10	6E122301	Click leaf spring holder
SEAGATE 4000E		11	6B747701	Spool click leaf spring
SEAGATE 4000E		12	6G203801	Spool metal
SEAGATE 4000E		13	6G224101	Pin (A)
SEAGATE 4000E		14	6H270301	Rotor nut
SEAGATE 4000E		15	6G162501	Packing (A)
SEAGATE 4000E		16	6F055602	Ball bearing (A)
SEAGATE 4000E		17	6H245001	Rotor
SEAGATE 4000E		18	6G627701	Screw (A)
SEAGATE 4000E		19	6H245601	Bail holder nut
SEAGATE 4000E		20	6H245701	Bail assembly
SEAGATE 4000E		21	63516105	Screw (B)
SEAGATE 4000E		22	6H035502	Collar (A)
SEAGATE 4000E		23	6H246101	Line roller
SEAGATE 4000E		24	6G740601	Collar (B)
SEAGATE 4000E		25	6G370905	Ball bearing (B)
SEAGATE 4000E		26	6G740501	Packing (B)
SEAGATE 4000E		27	6H271201	Collar (C)
SEAGATE 4000E		28	6H245401	Bail arm
SEAGATE 4000E		29	6G455601	Screw (C)
SEAGATE 4000E		30	6F608901	Screw (D)
SEAGATE 4000E		31	6H245301	Bail spring shaft
SEAGATE 4000E		32	6H345301	Bail spring
SEAGATE 4000E		33	6H270501	Bail spring holder
SEAGATE 4000E		34	6H245501	Bail spring cover
SEAGATE 4000E		35	6G205101	Screw (E)
SEAGATE 4000E		36	6H264401	Bail trip lever spring
SEAGATE 4000E		37	6H245901	Bail trip lever
SEAGATE 4000E		38	6G194301	Brake shoe
SEAGATE 4000E		39	63753000	Washer (B)
SEAGATE 4000E		40	6G193701	Screw (F)
SEAGATE 4000E		41	6H244201	Roller clutch retainer
SEAGATE 4000E		42	63516101	Screw (G)
SEAGATE 4000E		43	6H244101	Packing (C)
SEAGATE 4000E		44	6H244001	Clutch cam retainer
SEAGATE 4000E		45	6H247601	Clutch cam
SEAGATE 4000E		46	6G314501	Roller clutch
SEAGATE 4000E		47	6H172703	Spacing sleeve
SEAGATE 4000E		48	6H244501	Bearing retainer (A)
SEAGATE 4000E		49	6G557101	Screw (H)
SEAGATE 4000E		50	6G426301	Ball bearing (C)
SEAGATE 4000E		51	6H243901	Collar (D)
SEAGATE 4000E		52	6E262701	Ratchet
SEAGATE 4000E		53	6H243801	Pinion gear
SEAGATE 4000E		54	6H243701	Collar (E)
SEAGATE 4000E		55	6H242702	Body assembly
SEAGATE 4000E		56	6H243401	Main shaft
SEAGATE 4000E		57	6G162801	Pin (B)
SEAGATE 4000E		58	6H243101	Oscillating gear (A)
SEAGATE 4000E		59	6H243001	Oscillating gear (B)
SEAGATE 4000E		60	6G157401	Oscillating gear spring
SEAGATE 4000E		61	6G467102	Ball bearing (D)

