




SEAGATE 6000E

Feel Alive.

Please quote by part number, not key number when ordering.
spares@daiwaaustralia.com.au PH: (02) 8644 8644

SEAGATE
5000E/6000E

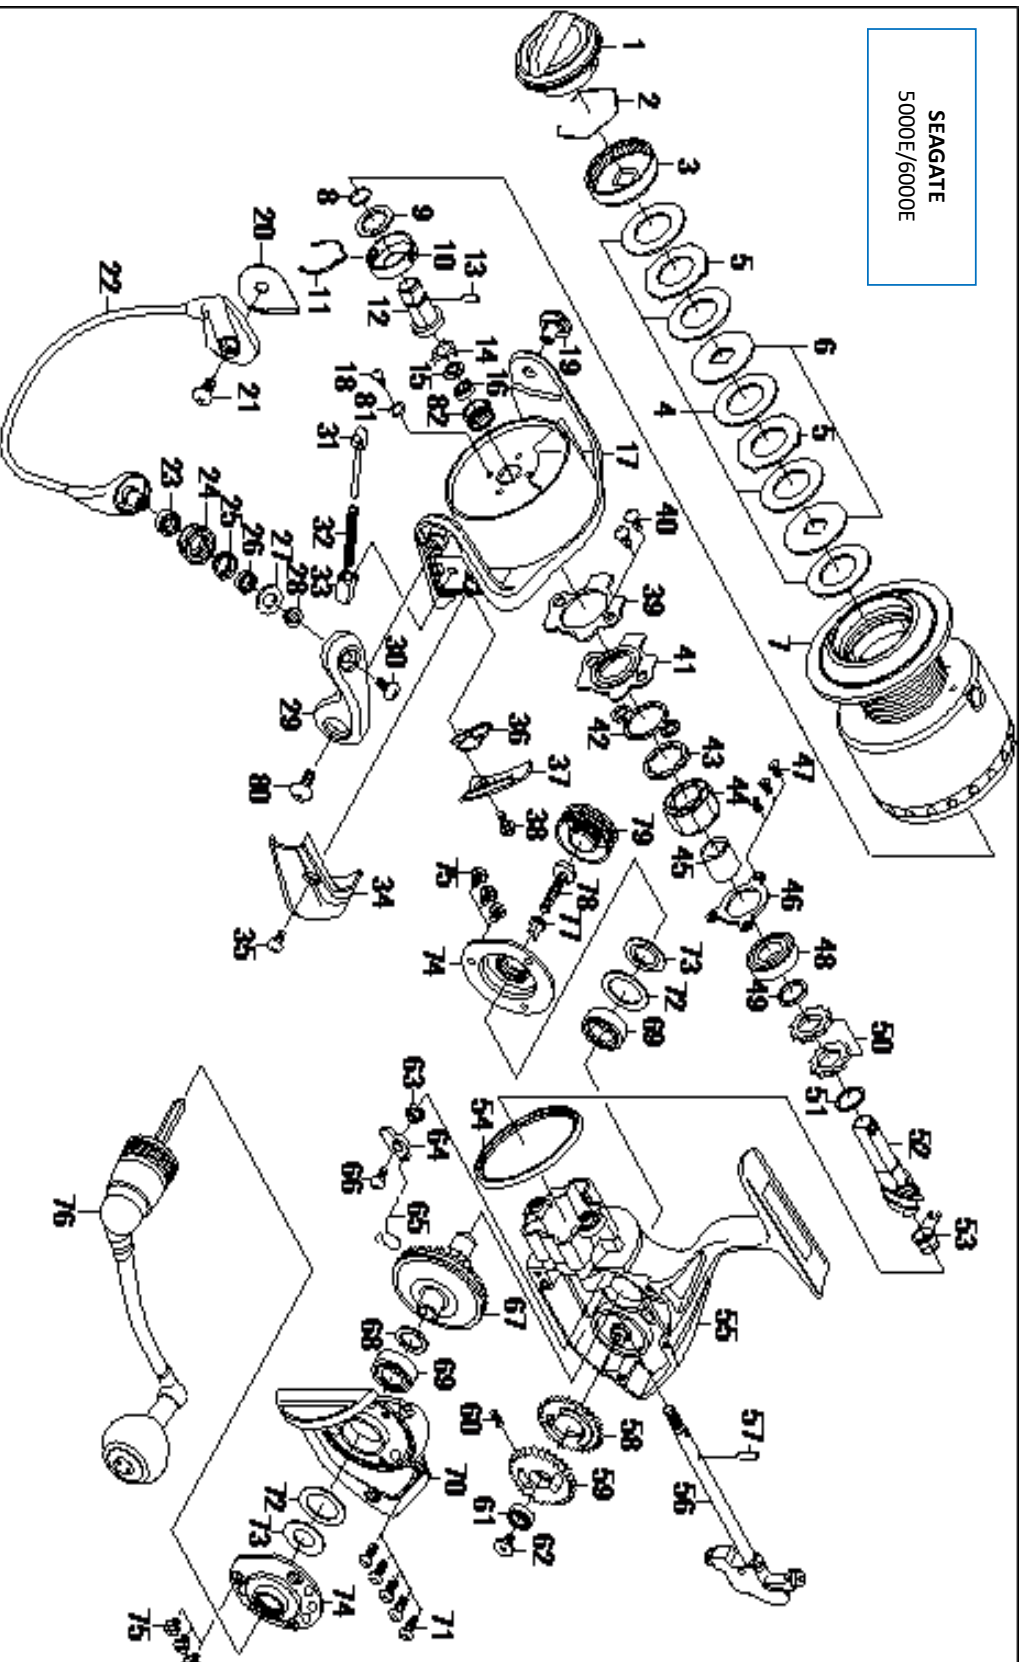

REEL NAME	MGFT CODE	KEY NO	PARTS CODE	DESCRIPTION
SEAGATE 6000E		1	6H438301	Drag knob
SEAGATE 6000E		2	6F710001	Drag washer retainer
SEAGATE 6000E		3	6G165602	Drag knob click plate
SEAGATE 6000E		4	6H247201	Drag washer
SEAGATE 6000E		5	6G165902	Eared washer
SEAGATE 6000E		6	6G162702	DRAG DISC WASHER
SEAGATE 6000E		8	6G339401	"O" ring
SEAGATE 6000E		9	6G341501	Washer (A)
SEAGATE 6000E		10	6G341301	Click leaf spring holder
SEAGATE 6000E		11	6G341401	Spool click leaf spring
SEAGATE 6000E		12	6H378701	Spool metal
SEAGATE 6000E		13	6G339301	Pin (A)
SEAGATE 6000E		14	6H107301	Bearing retainer (A)
SEAGATE 6000E		15	6H107201	Packing (A)
SEAGATE 6000E		16	6G467102	Ball bearing (A)
SEAGATE 6000E		17	6H324403	Rotor
SEAGATE 6000E		18	6E492001	Screw (A)
SEAGATE 6000E		19	6H325002	Bail holder nut
SEAGATE 6000E		20	6H324801	Plate
SEAGATE 6000E		21	63516105	Screw (B)
SEAGATE 6000E		22	6H365302	Bail assembly
SEAGATE 6000E		23	6H035502	Collar (A)
SEAGATE 6000E		24	6H246103	Line roller
SEAGATE 6000E		25	6G740601	Collar (B)
SEAGATE 6000E		26	6G370905	Ball bearing (B)
SEAGATE 6000E		27	6G740501	Packing (B)
SEAGATE 6000E		28	6H271201	Collar (C)
SEAGATE 6000E		29	6H339601	Bail arm
SEAGATE 6000E		30	6F608901	Screw (C)
SEAGATE 6000E		31	6H324701	Bail spring shaft
SEAGATE 6000E		32	6G418101	Bail spring
SEAGATE 6000E		33	6G337501	Bail spring holder
SEAGATE 6000E		34	6H325402	Bail spring cover
SEAGATE 6000E		35	63522510	Screw (D)
SEAGATE 6000E		36	6G337601	Rotor brake spring
SEAGATE 6000E		37	6H324902	Rotor brake spring cover
SEAGATE 6000E		38	63522510	Screw (E)
SEAGATE 6000E		39	6H244201	Roller clutch retainer
SEAGATE 6000E		40	63516101	Screw (F)
SEAGATE 6000E		41	6H244101	Packing (C)
SEAGATE 6000E		42	6H244001	Clutch cam retainer
SEAGATE 6000E		43	6H247601	Clutch cam
SEAGATE 6000E		44	6G314501	Roller clutch
SEAGATE 6000E		45	6H172703	Spacing sleeve
SEAGATE 6000E		46	6H244501	Bearing retainer (B)
SEAGATE 6000E		47	6G557101	Screw (G)
SEAGATE 6000E		48	6G426301	Ball bearing (C)
SEAGATE 6000E		49	6H243901	Collar (D)
SEAGATE 6000E		50	6E262701	Ratchet
SEAGATE 6000E		51	6E339701	Washer (B)
SEAGATE 6000E		52	6H323601	Pinion gear
SEAGATE 6000E		53	6H323501	Collar (E)
SEAGATE 6000E		54	6G337101	Brake ring
SEAGATE 6000E		55	6H437401	Body assembly
SEAGATE 6000E		56	6H437501	Main shaft
SEAGATE 6000E		57	6G338901	Pin (B)
SEAGATE 6000E		58	6H323101	Oscillating gear (A)
SEAGATE 6000E		59	6H323001	Oscillating gear (B)
SEAGATE 6000E		60	6G157401	Oscillating gear spring
SEAGATE 6000E		61	6B861704	Ball bearing (D)

