




# TERRA LT 2500D

Feel Alive.

Please quote by part number, not key number when ordering.  
spares@daiwaaustralia.com.au PH: (02) 8644 8644

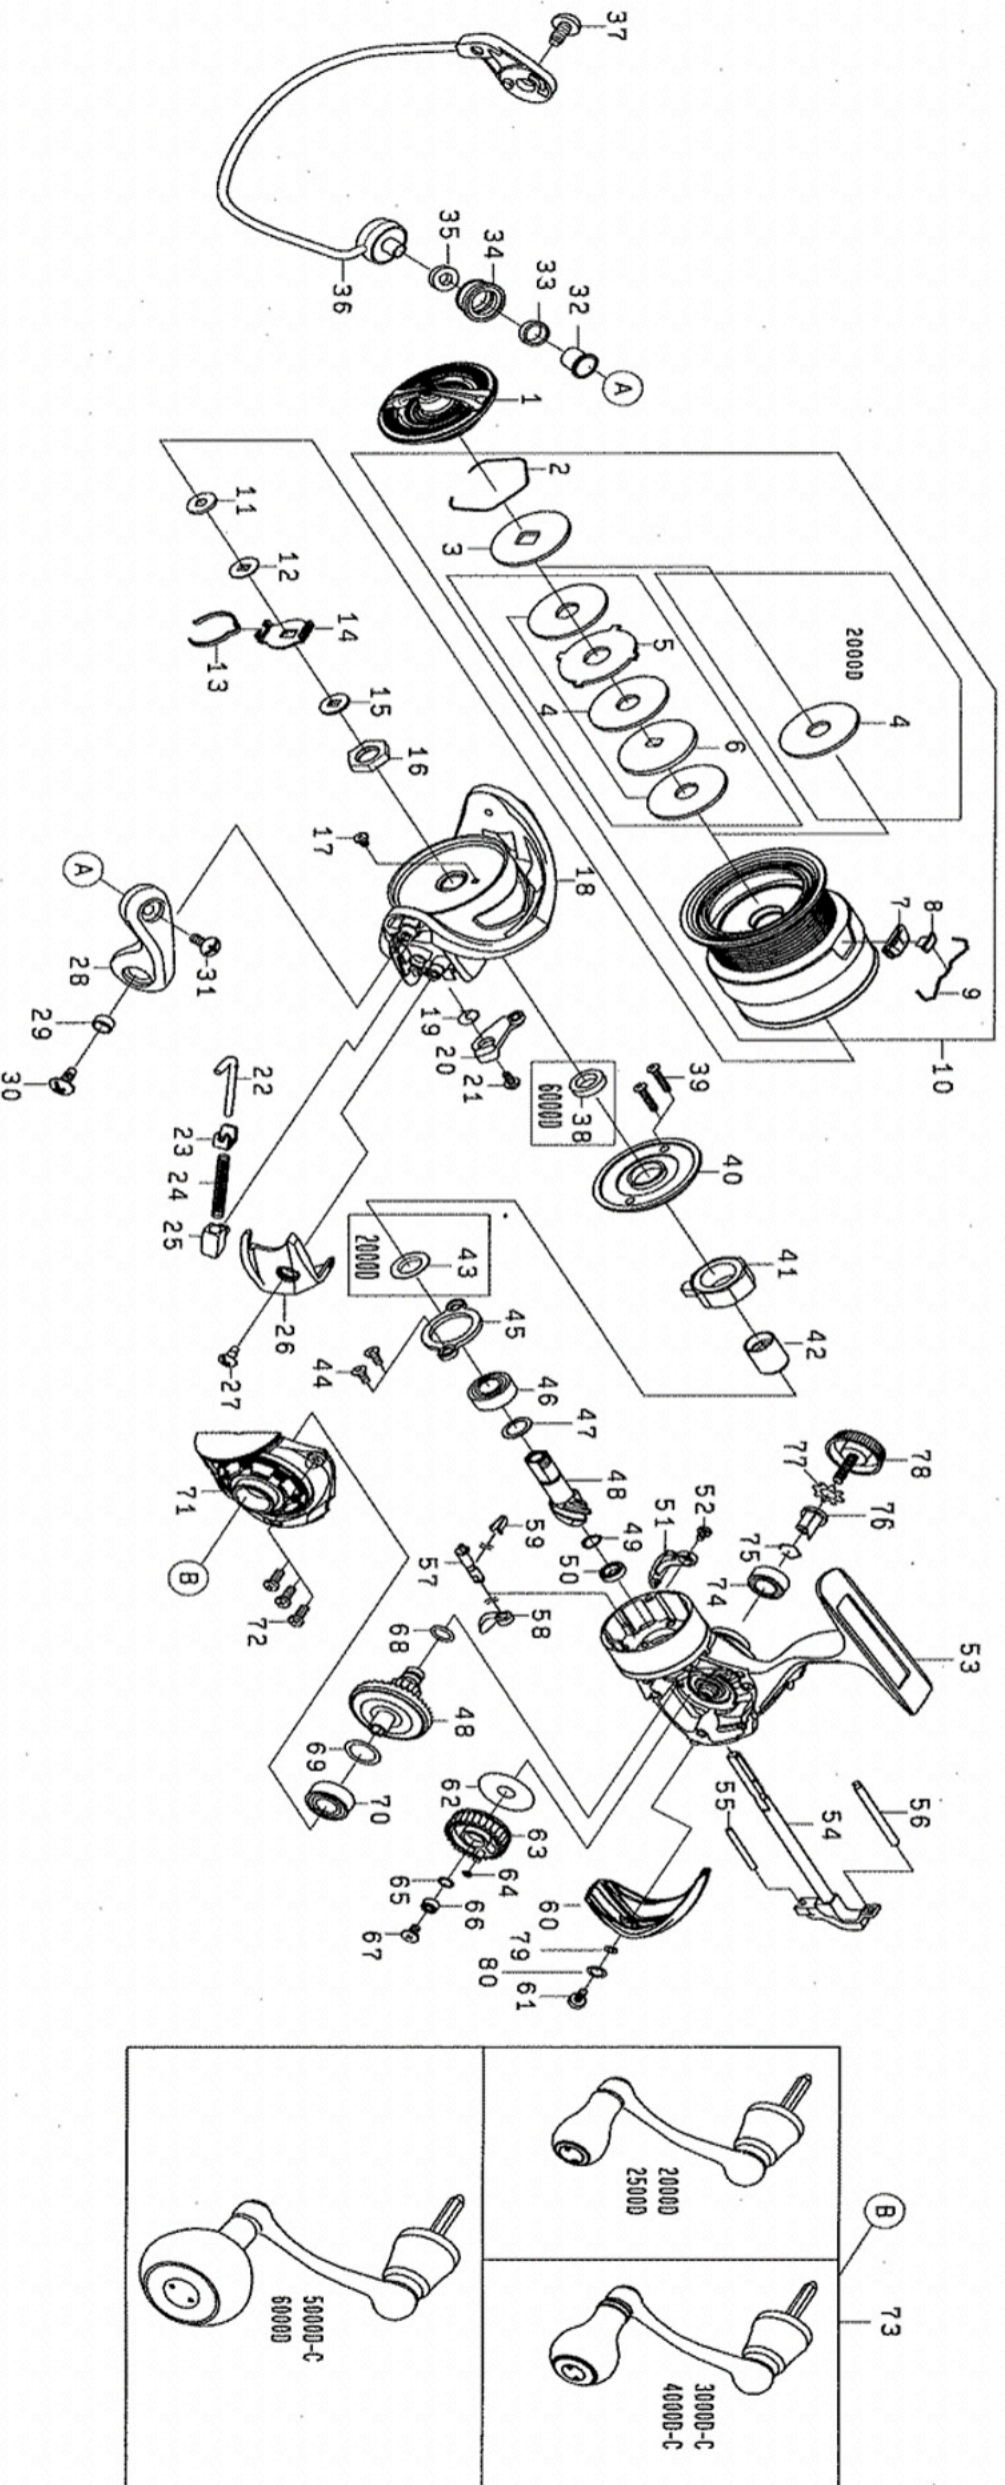

REEL NAME	MGFT CODE	KEY NO	PARTS CODE	DESCRIPTION
TIERRA LT 2500D	S46417D	1	6J697603	DRAG KNOB
TIERRA LT 2500D	S46417D	2	6J547101	DRAG RING
TIERRA LT 2500D	S46417D	3	6J547001	DRAG DISC WASHER(A)
TIERRA LT 2500D	S46417D	4	6J546801	DRAG WASHER
TIERRA LT 2500D	S46417D	5	6J546902	DRAG LIP WASHER
TIERRA LT 2500D	S46417D	6	6J547001	DRAG DISC WASHER(B)
TIERRA LT 2500D	S46417D	7	6J558101	LINE STOPPER PLATE
TIERRA LT 2500D	S46417D	8	6J558001	LINE STOPPER
TIERRA LT 2500D	S46417D	9	6J314801	LINE STOPPER SPRING
TIERRA LT 2500D	S46417D	10	6J938501	SPOOL ASSY
TIERRA LT 2500D	S46417D	11	6E398003	SPOOL WASHER (A)
TIERRA LT 2500D	S46417D	12	6E467101	SPOOL WASHER (B)
TIERRA LT 2500D	S46417D	13	6J953201	CLICK LEAF SPRING
TIERRA LT 2500D	S46417D	14	6J546201	CLICK SPRING HOLDER
TIERRA LT 2500D	S46417D	15	6J703101	SPOOL WASHER (C)
TIERRA LT 2500D	S46417D	16	6J001901	ROTOR NUT
TIERRA LT 2500D	S46417D	17	6H022701	ROTOR NUT SCREW
TIERRA LT 2500D	S46417D	18	6J545310	ROTOR
TIERRA LT 2500D	S46417D	19	6H413601	KICK LEVER SPRING
TIERRA LT 2500D	S46417D	20	6J545401	KICK LEVER ASSY
TIERRA LT 2500D	S46417D	21	6H417701	KICK LEVER SCREW
TIERRA LT 2500D	S46417D	22	6J545601	ARM LEVER SHAFT
TIERRA LT 2500D	S46417D	23	6H576101	ARM LEVER SHAFT PLATE
TIERRA LT 2500D	S46417D	24	6J642801	ARM LEVER SHAFT SPRING
TIERRA LT 2500D	S46417D	25	6H414301	ARM LEVER SHAFT HOLDER
TIERRA LT 2500D	S46417D	26	6J545701	ARM LEVER SP COVER
TIERRA LT 2500D	S46417D	27	6G270801	ARM LEVER SP COVER SCREW
TIERRA LT 2500D	S46417D	28	6H728929	ARM LEVER
TIERRA LT 2500D	S46417D	29	6H962401	ARM LEVER SCREW COLLAR
TIERRA LT 2500D	S46417D	30	6G205001	ARM LEVER SCREW
TIERRA LT 2500D	S46417D	31	6G195602	ROLLER SCREW
TIERRA LT 2500D	S46417D	32	6G195501	ROLLER COLLAR(A)
TIERRA LT 2500D	S46417D	33	6G220701	ROLLER COLLAR(B)
TIERRA LT 2500D	S46417D	34	6J089901	LINE ROLLER
TIERRA LT 2500D	S46417D	35	6G874201	ROLLER COLLAR(C)
TIERRA LT 2500D	S46417D	36	6J844002	BAIL ASSY
TIERRA LT 2500D	S46417D	37	6G205001	BAIL HOLDER SCREW
TIERRA LT 2500D	S46417D	38	-	-
TIERRA LT 2500D	S46417D	39	6J001601	SEALED CAP SCREW
TIERRA LT 2500D	S46417D	40	6J022701	SEALED CAP
TIERRA LT 2500D	S46417D	41	6J388401	ONEWAY CLUTCH
TIERRA LT 2500D	S46417D	42	6J001403	CLUTCH RING
TIERRA LT 2500D	S46417D	43	-	-
TIERRA LT 2500D	S46417D	44	6J000901	PINION BEARING PLATE SCREW
TIERRA LT 2500D	S46417D	45	6H442201	PINION BEARING PLATE
TIERRA LT 2500D	S46417D	46	6G467302	PINION BALL BEARING (A)
TIERRA LT 2500D	S46417D	47	63758502	PINION BEARING WASHER (B)
TIERRA LT 2500D	S46417D	48	6Z025209	PINION + DRIVE GEAR SET
TIERRA LT 2500D	S46417D	49	6H931701	PINION BEARING SPRING WASHER
TIERRA LT 2500D	S46417D	50	6H959601	PINION BALL BEARING (B)
TIERRA LT 2500D	S46417D	51	6J022601	BAIL KICK COLLAR
TIERRA LT 2500D	S46417D	52	6G940402	BAIL KICK COLLAR SCREW
TIERRA LT 2500D	S46417D	53	6J937701	BODY ASSY
TIERRA LT 2500D	S46417D	54	6J140702	MAIN SHAFT
TIERRA LT 2500D	S46417D	55	6J084801	OSCILLATING POST (A)
TIERRA LT 2500D	S46417D	56	6H614301	OSCILLATING POST (B)
TIERRA LT 2500D	S46417D	57	6H595501	STOPPER CAM
TIERRA LT 2500D	S46417D	58	6H595401	STOPPER LEVER
TIERRA LT 2500D	S46417D	59	6H697801	STOPPER CAM LEAF SPRING
TIERRA LT 2500D	S46417D	60	6J492601	REAR CAP
TIERRA LT 2500D	S46417D	61	6J001801	REAR CAP SCREW
TIERRA LT 2500D	S46417D	62	6H595701	OSCILLATING GEAR WASHER
TIERRA LT 2500D	S46417D	63	6H629101	OSCILLATING GEAR
TIERRA LT 2500D	S46417D	64	6H770601	OSCILLATING GEAR O-RING
TIERRA LT 2500D	S46417D	65	6H129201	OSCILLATING GEAR BEARING WASHER
TIERRA LT 2500D	S46417D	66	6G469005	OSCILLATING GEAR BALL BEARING
TIERRA LT 2500D	S46417D	67	6G940402	OSCILLATING GEAR SCREW
TIERRA LT 2500D	S46417D	68	6G670501	DRIVE GEAR O-RING
TIERRA LT 2500D	S46417D	69	63758502	DRIVE GEAR WASHER
TIERRA LT 2500D	S46417D	70	6G467302	DRIVE BALL BEARING (A)
TIERRA LT 2500D	S46417D	71	6J937901	BODY COVER ASSY
TIERRA LT 2500D	S46417D	72	6G332904	BODY COVER SCREW
TIERRA LT 2500D	S46417D	73	6J938001	HANDLE ASSY
TIERRA LT 2500D	S46417D	74	6G522706	DRIVE BALL BEARING (B)
TIERRA LT 2500D	S46417D	75	6G472401	DRIVE BALL BEARING (B) RING
TIERRA LT 2500D	S46417D	76	6F721001	HANDLE COLLAR
TIERRA LT 2500D	S46417D	77	61608401	HANDLE WASHER
TIERRA LT 2500D	S46417D	78	6H613302	HANDLE CAP
TIERRA LT 2500D	S46417D	79	6F037404	REAR CAP WASHER (A)
TIERRA LT 2500D	S46417D	80	6B411703	REAR CAP WASHER (B)