



Vent A Hood – Pro Pack

Contents and Instructions


Contents: Blower housing dampeners X2 (P1031), white blower wheel (P1305), black blower wheel (P1306), T Handle Allen Wrench (AW101), microfiber cloth, latex gloves (not pictured)



1. Remove the grease tray from your Vent A Hood
2. Remove the blower housing by unlatching the blower housing buckles on the left and right side
3. Find the set screw on the existing blower wheel (a flashlight is very helpful)
4. Insert the 1/8" T handle wrench through the fins of the blower wheel, into the set screw, and loosen by turning the wrench to the left. These set screws may be very tight.



5. Once the set screw is loose, using both hands, pull the blower wheel away from the blower motor. Be sure to apply even pressure on both sides of the blower wheel. Do NOT pull upward or downward, this will damage the motor shaft.
6. When installing the new blower wheel, it is important the set screw on the blower wheel is inline with the FLAT spot on the motor shaft. (A flashlight is very helpful)

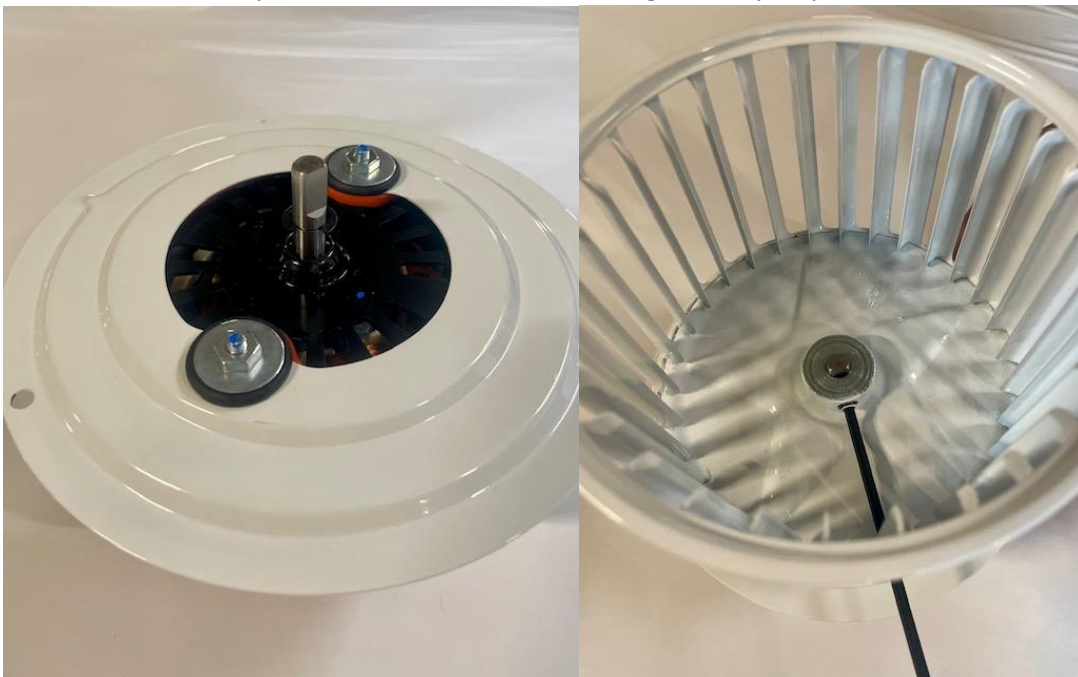

7. Once blower wheel is properly on the blower motor shaft, insert T handle Allen Wrench through the fins and tighten set screw onto the flat spot of the motor shaft.