


TOP-MOUNT FREEZER

CONSERVATOR®

REFRIGERATOR

Model No:GRH1482TW

OWNER'S MANUAL

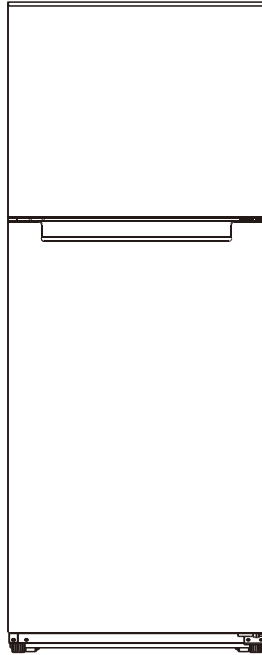

Please read this Owners's Manual carefully before using the product

1. IMPORTANT SAFETY WARNINGS



R600a

Caution: Risk of fire
Attention, risque d'incendie

WARNING CONCERNING R600a REFRIGERANT

DANGER - RISK OF FIRE OR EXPLOSION. FLAMMABLE REFRIGERANT USED. DO NOT PUNCTURE REFRIGERANT TUBING.

DANGER - RISK OF FIRE OR EXPLOSION. FLAMMABLE REFRIGERANT USED. THE UNIT IS TO BE REPAIRED ONLY BY TRAINED SERVICE PERSONNEL. DO NOT PUNCTURE REFRIGERANT TUBING.

CAUTION - RISK OF FIRE OR EXPLOSION. FLAMMABLE REFRIGERANT USED. CONSULT THE USER'S MANUAL / OWNER'S GUIDE BEFORE ATTEMPTING TO SERVICE THIS PRODUCT. ALL SAFETY PRECAUTIONS MUST BE FOLLOWED.

CAUTION - RISK OF FIRE OR EXPLOSION. DISPOSE OF PROPERTY IN ACCORDANCE WITH FEDERAL AND/OR LOCAL REGULATIONS. FLAMMABLE REFRIGERANT USED.

CAUTION - RISK OF FIRE OR EXPLOSION DUE TO PUNCTURED REFRIGERANT TUBING. FOLLOW HANDLING INSTRUCTIONS CAREFULLY. FLAMMABLE REFRIGERANT USED.

WARNING! DO NOT STORE OR USE GASOLINE OR OTHER FLAMMABLE VAPORS AND LIQUIDS IN THE VICINITY OF THIS OR ANY OTHER APPLIANCE. READ PRODUCT LABELS FOR FLAMMABILITY.

CAUTION - THE UNIT MUST BE POSITIONED AND INSTALLED PROPERLY FOLLOWING THE INSTRUCTIONS CONTAINED IN THIS MANUAL, UNDER THE SECTION "INSTALLATION". WHEN USING AN ELECTRICAL APPLIANCE, YOU SHOULD ALWAYS OBSERVE BASIC SAFETY PRECAUTIONS TO REDUCE THE RISK OF ELECTRIC SHOCK, FIRE OR PERSONAL INJURY.

1. **WARNING** - Keep the ventilation openings in the enclosure free of obstructions. Do not cover the appliance.
2. **WARNING** - Be careful not to damage the refrigerant tubing.
3. **WARNING** - Do not use electrical appliances inside food storage compartments.
4. **WARNING – DANGER:** Risk of trapping children! Before discarding of your old appliance:
 - Take the doors off.
 - Leave the shelves in place to prevent children from climbing easily into the refrigerator.
5. Always unplug the appliance before cleaning and/or servicing.
6. Please make sure that all persons who will use with this appliance are familiar with its operation and safety precautions. It is very important to install the appliance correctly and to follow all safety instructions.

This appliance may not be used by persons (including children) with reduced physical, sensory or mental capacities or lack of experience and knowledge unless instructed by a person responsible for their safety. Children must not play with this unit.
7. If the power cord is damaged, it must be replaced by the manufacturer, its service center or a qualified electrician to avoid incidents.

1. IMPORTANT SAFETY INSTRUCTIONS (continued)

8. Please dispose of the appliance according to local regulations since the appliance uses flammable refrigerant and gas. Before discarding the appliance, remove the doors to prevent children from climbing inside the appliance.
9. This appliance is intended for home use only. Any other use will void the warranty.
10. Do not use this unit to store explosive materials such as aerosol containers with a flammable propellant.
11. Do not use extension cords or 2-prong adapters to connect this appliance to an electrical outlet.

DANGER



IT IS DANGEROUS FOR ANY PERSON OTHER THAN AUTHORIZED SERVICE PERSONNEL TO MAKE REPAIRS ON THIS APPLIANCE.




DO NOT ATTEMPT TO REPAIR THE APPLIANCE YOURSELF. IT IS DANGEROUS TO MODIFY THE SPECIFICATIONS OF THIS PRODUCT OR CHANGE IT IN ANY MANNER. ANY DAMAGE MAY RESULT IN A SHORT-CIRCUIT, FIRE OR ELECTRIC SHOCK.

12. **DANGER** - Risk of fire or explosion. Flammable refrigerant used. To be repaired only by authorized personnel. Do not puncture refrigerant tubes.
13. **DANGER** - Risk of fire or explosion. Flammable refrigerant used. All safety measures must be followed.
14. **DANGER** - Risk of fire or explosion if refrigerant tubes are perforated. Follow the precautionary instructions. Flammable refrigerant used.

2. PRODUCT OVERVIEW

** All images appearing in this instructions manual are for referential purposes only.
For more detailed information, please refer to your appliance.

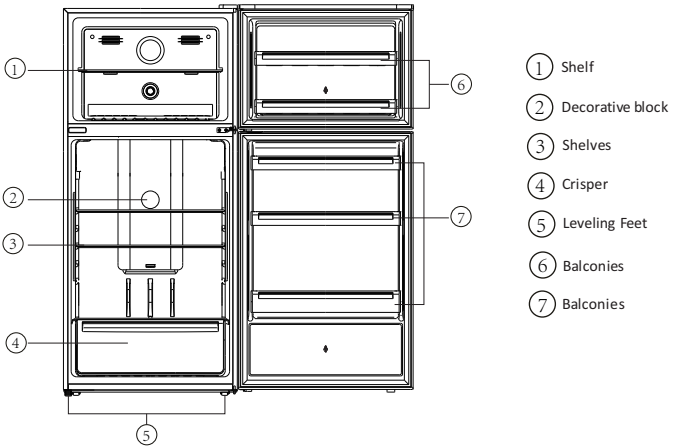

3. INSTALLATION INSTRUCTIONS

RECOMMENDATIONS



WARNING

BEFORE CONNECTING THE APPLIANCE

You should make sure that you have a properly grounded outlet that is compatible with the 3-prong plug on this appliance.

BEFORE STARTING THE APPLIANCE

We recommend that you wait at least two (2) hours before connecting the unit to allow the refrigerant to flow back to the compressor.

BEFORE USING YOUR APPLIANCE

1. Before placing food in your appliance, plug it in and wait 24 hours to ensure it is working properly and that it reaches the correct temperature. Your appliance should not be overfilled.
2. Do not place bottled or sealed liquid products such as beer and soft drinks in the freezer as they may explode.
3. Do not store or place dry ice in refrigerator.
4. It is recommended to place the appliance in a place where the ambient temperature is between 16° C and 32° C. The unit may not operate properly if it remains at a temperature above or below the indicated range.
5. Install your appliance in a dry place, avoid highly humid locations.
6. Do not expose the unit to direct sunlight, rain or frost.
7. Do not install the appliance near heat sources such as stoves, fireplaces or radiators.
8. The appliance requires power supply of 115V / 60Hz AC.
9. Do not use the appliance if the power cord is damaged or the plug is worn.
10. Do not place flammable, explosive, volatile and highly corrosive objects in the appliance as they may cause damage or even fire.
11. Do not place flammable objects near the appliance.
12. This product is a household appliance and should only be used for food storage. According to National standards, refrigerators should not be used for any other purposes, such as storing blood, medicines or biological products.
13. The location of the power outlet must be accessible when installing the appliance and must be grounded.
14. When connecting to an electric outlet, do not use extension cords or power bars as they may overload the system and cause a fire.
15. Plug your appliance into a stand-alone electrical outlet with a voltage matching what is indicated on the rating plate. Do not plug other appliances on the same outlet.
16. Make sure the plug is not flattened or damaged. Failure to do so could result in a short circuit, electrical shock or fire.



3. INSTALLATION INSTRUCTIONS (continued)

3.1 Positioning

When selecting a position for your unit, you should make sure the floor is flat and solid so as to support the load and that the room is well ventilated. Avoid locating your unit near a heat source, e.g. stove, boiler or radiator. Also avoid direct sunlight as it may increase the electrical consumption. Extreme cold ambient temperatures may also cause the unit to not perform properly. This unit is not designed for use in a garage or outdoors. Do not drape the unit with any covering. When installing the unit, ensure that 3 inches of free space is left at both sides, 1 inch at the rear and 1 inch at the top of the unit. This will allow cool air to circulate around the refrigerator and improve its efficiency.


3.2 Door Space Requirements

- Select a location without direct exposure to sunlight;
- Select a location with enough space for the refrigerator doors to open easily;
- Select a location with level(or nearly level)flooring;
- Allow sufficient space to install the refrigerator on a flat surface;
- Allow clearance to the right,left,back and top when installing,This will help reduce power consumption and keep your energy bills lower.

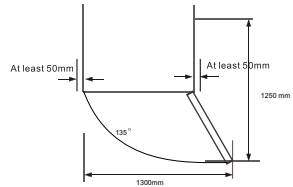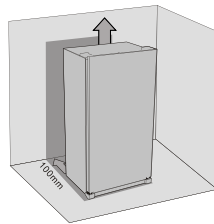

3.3 Levelling the Unit

To make this adjustment, use the two levelling feet at the front of the unit. If the unit is not level, the door and magnetic seal alignments will not meet up properly. Drop down from the top, clockwise and counterclockwise, loosening or tightening.

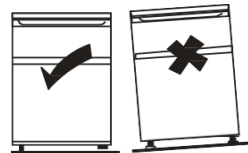

3.4 Cleaning before use

Wipe the inside of the unit with a light solution of baking soda and water. Then rinse with warm water using a wrung-out sponge or cloth. Wash the shelves and vegetable crisper bins in warm soapy water and dry completely before replacing in the unit. Clean the exterior of the unit with a damp cloth. If you require more information refer to the CLEANING section.

3.5 Interior Accessories

Various glass shelves and/or plastic storage bins are included with your appliance - different models have different combinations.

You should always slide one of the full-sized glass storage shelves into the lowest set of guides, above the fruit and vegetable bins and keep it in this position. To do this, pull the storage shelf forward until it can be moved upwards or downwards and then removed. Do the same in reverse if you wish to insert the shelf at a different height.

In order to make full use of the volume of the fresh food storage compartment and of the frozen-food storage compartment, the user can remove one or more shelves and/or drawers out of the appliance, to better suit your needs.


4. REVERSING THE DOORS

Tool required: Philips screwdriver, flat bladed screwdriver, hexagonal spanner.

- Ensure the unit is unplugged and empty.
- To take the door off, it is necessary to tilt the unit backwards. You should rest the unit on something solid, so that it will not slip during the door reversing process.
- All parts removed must be saved to do the reinstallation of the door.
- Do not lay the unit flat as this may damage the coolant system.
- It's better that 2 people handle the unit during the assembly.

FREEZER DOOR

1. Unscrew the top hinge cover (see figure 1).
2. Remove the top hinge cover.
3. Loosen the top hinge screws with Phillips head screwdriver.
4. Adjust the door or put a spacer in between and then tighten the screws.
5. Replace the top hinge cover.
6. Move the hinge from left side to right side.

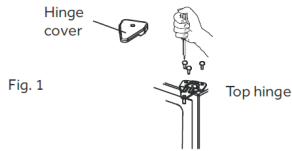


REVERSING THE DOOR SWING

Left/right door opening method:

This product allows you to reverse the door opening from left to right and back. You can select your preference of door opening by following the procedure to make the change.

Dismantling (see figures 1 and 2):

1. Close shut the refrigerator and freezer doors with adhesive tape on both sides to hold the doors in place.
2. As shown in figure 1, remove the hinge cover screw on the upper part of freezer door with a Phillips head screwdriver. Then remove the three screws that hold the hinge. Take out the hinge by pulling it vertically and set it aside in a safe place.
3. Remove the adhesive tape on freezer door, lift and take off the door and carefully set it aside.
4. Remove all the screws of the middle hinge, lift and take off the middle hinge and keep all hinge parts in a safe place.

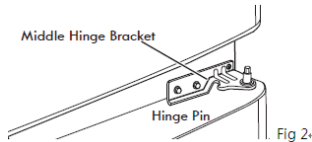

4. REVERSING THE DOORS (continued)

REVERSING THE DOOR SWING (continued)

5. Move the hinge hole covers from left side to right side.

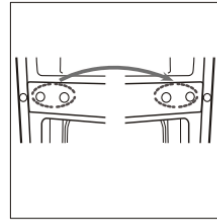


Fig3

6. After removing the refrigerator door hinge, remove the screw cover from the upper left side of refrigerator door frame, then insert the cover into the hinge hole on the right of door frame.
7. Remove the adhesive tape on refrigerator door, lift and take off the door then carefully set it aside.
8. Tilt the refrigerator on a 45-degree angle to have access to the bottom front.
9. Remove both left and right front feet from bottom. Then remove all screws on the bottom door hinge. Set aside the screws and leveling legs in safe place.



Fig 4

REINSTALLATION

1. Take a new bottom hinge from the user's manual bag. Align the holes in the bottom hinge to the corresponding holes on the left side of the cabinet. Insert and tighten the screws. Reinstall both front feet. Install the short leveling leg on the left side and the long leveling leg on the right side.
2. To install the refrigerator door: Line up the left bottom hole of the refrigerator compartment door over the bottom hinge pin. Move door forward to make sure it is straight and aligned with the bottom hinge. Ensure the door is aligned horizontally and vertically so that the seal is closed on all sides before finally installing and tightening the middle hinge. Install and tighten the middle hinge again and turn the hinge axle until it completely enters the door body. Secure it with the screws.

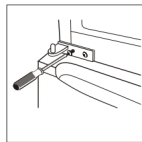


Fig 5


3. To install freezer door: Line up the left bottom hole of the door over the center hinge's middle pin. Move door forward to make sure it is straight and aligned with the freezer compartment. Ensure the door is aligned horizontally and vertically so that the seal is closed on all sides before finally tightening the top hinge. Take the new upper hinge from the user's manual bag, turn the hinge axle until it completely enters the door body. Screw the top hinge.
4. Install the top cover and screw it to the top of unit.

5. OPERATION

Keys Operation


5.1 Freezer compartment Temperature Setting

- Plug on your appliance. The internal temperature is controlled by a sensor. There are 3 settings: SUMMER, RECOMMENDED and WINTER.
- The appliance may not operate at the correct temperature if it is in a particularly hot or if you open the door often.

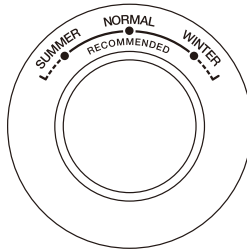

5.2 Fridge compartment Temperature Setting

- Plug on your appliance. The internal temperature is controlled by a sensor. There are 4 settings: OFF, COLD, COLDER and COLDEST. COLD is warmest setting and COLDEST is coldest setting, OFF is off.
- The appliance may not operate at the correct temperature if it is in a particularly hot or if you open the door often.
- Neither fridge or freezer compartment works when the setting is OFF.

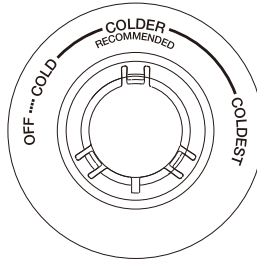

6. CLEANING

6.1 Defrosting

This appliance does not require defrosting as it is specially equipped with a 'Frost-free' type cooling system. The defrost water is routed into a pan located near the compressor where it then evaporates.

6.2 Cleaning the Interior and the Exterior of the Unit

- ◆ Remove all the shelves and the produce bins. To remove the produce bins, first remove the lower door shelf.
- ◆ Clean the inside of the unit with a mild solution of baking soda and water and then rinse with warm water using a wrung-out sponge or cloth. Wipe completely dry before replacing the shelves and the produce bins.
- ◆ Use a damp cloth to clean the exterior then wipe with a standard furniture polish. Make sure that the door is closed to avoid the polish getting onto the magnetic door seal or inside the unit.

6.3 Cleaning Tips

Condensation may appear on the outside of the unit. This may be due to changes in room temperature. Wipe off any moisture residue with a clean cloth. If the problem persists, please contact a qualified technician for assistance.

7. MAINTENANCE

7.1 Changing the Internal Light

We do not recommend that you change the LED light yourself. Please contact an authorized service center.

7.2 Care When Handling / Moving Your Unit

Hold the unit around its sides or its base when moving it. Under no circumstances should it be lifted by holding the top end and edges.

The condenser is located at the bottom of the refrigerator; please be careful. Keep the bottom end dry during use, processing and handling.

Before moving the unit, make sure that the surface on which it will rest is perfectly flat and as level as possible and solid enough to hold the weight of the unit and its contents.

7.3 Servicing

The unit should be serviced by an authorized technician and only genuine spare parts should be used. Under no circumstance should you attempt to repair the unit yourself. Repairs carried out by inexperienced persons may cause injury or serious malfunction. Contact a qualified technician.

7.4 Switching Off Unit for Long Periods of Time

When the unit is not in use for a long period of time, disconnect it from the main source of power supply, empty out its contents and clean the appliance, leaving the door ajar to allow air out and to help prevent odor.

8.TROUBLE SHOOTING

The following issues can be handled by the user. Please call the after-sale service department only if they are not resolved.

Non operational	Check if the appliance is plugged and connected to power; Low voltage; Failure power or tripping circuit.
Odors	Odorous foods should properly wrapped; Check if foods are spoiled; Check if the interior needs cleaning.
Long-term operation of compressor	It is normal that the appliance operates for a longer period of time in summer when the ambient temperature is higher; Do not store too much food in the appliance at one time; Do not store cooked foods until they are well cooled; Frequent opening of the door will cause compressor to start.
Light does not work	Check if the appliance is connected to power; Check if light is damaged.
The refrigerator door does not close properly	The door is blocked by food packages; The compartments are overstuffed; Appliance is not level.
Loud noises	Check if food is properly set flat; Check if the appliance is level; Check if the parts are properly installed.

8.1 Tips

- ◆ It is a normal for the refrigerator enclosure to give off heat during operation especially in summer; this is caused by emissions from the compressor.
- ◆ Condensation can be detected on the exterior surface and door seals of the freezer when the ambient humidity is high; this is a normal phenomenon and the condensation can be wiped off with a dry towel.
- ◆ Humming sounds can be generated by a functioning compressor especially when starting up or shutting down.

WARRANTY

REFRIGERATOR WARRANTY

Your refrigerator is protected by this warranty

	WARRANTY PERIOD	THROUGH OUR AUTHORIZED SERVICERS, WE WILL:	THE CONSUMER WILL BE RESPONSIBLE FOR:
FULL ONE-YEAR WARRANTY	One year from original purchase date	Pay all costs for repairing or replacing any parts of this appliance which prove to be defective in materials or workmanship. Excludes original and replacement Ice & Water filter cartridges (if equipped). Original and replacement cartridges are warranted for 30 days (parts only).	Costs of service calls that are listed under NORMAL RESPONSIBILITIES OF THE CONSUMER. *

In the U.S.A., your appliance is warranted by Crosley Group, Inc. We authorize no person to change or add to any of our obligations under this warranty. Our obligations for service and parts under this warranty must be performed by an authorized Crosley Group, Inc. servicer. In Canada your appliance is warranted by Crosley Canada Corp.

*NORMAL RESPONSIBILITIES OF THE CONSUMER

This warranty applies only to products in ordinary household use, and the consumer is responsible for the items listed below:

- 1 Proper use of the appliance in accordance with instructions provided with the product.
- 2 Proper installation by an authorized servicer in accordance with instructions provided with the appliance and in accordance with all local plumbing, electrical and/or gas codes.
- 3 Proper connection to a grounded power supply of sufficient voltage, replacement of blown fuses, repair of loose connections or defects in house wiring.
- 4 Expenses for making the appliance accessible for servicing, such as removal of trim, cupboards, shelves, etc., which are not part of the appliance when it was shipped from the factory.
- 5 Damages to finish after installation.
- 6 Replacement of light bulbs and/or fluorescent tubes (on models with these features).

EXCLUSIONS

This warranty does not cover the following:

- 1 CONSEQUENTIAL OR INCIDENTAL DAMAGES SUCH AS PROPERTY DAMAGE AND INCIDENTAL EXPENSES RESULTING FROM ANY BREACH OF THIS WRITTEN OR ANY IMPLIED WARRANTY.
NOTE: Some states do not allow the exclusion or limitation of incidental or consequential damages, so this limitation or exclusion may not apply to you.
- 2 Service calls which do not involve malfunction or defects in workmanship or material, or for appliances not in ordinary household use. The consumer shall pay for such service calls.
- 3 Damages caused by services performed by servicers other than Crosley Group, Inc. Crosley Canada Corp. or its authorized servicers; use of parts other than genuine Crosley Group, Inc. parts, obtained from persons other than such servicers; or external; causes such as abuse, misuse, inadequate power supply or acts of God.
- 4 Products with original serial numbers that have been removed or altered and cannot be readily determined.

IF YOU NEED SERVICE

Keep your bill of sale, delivery slip, or some other appropriate payment record. The date on the bill establishes the warranty period should service be required. If service is performed, it is in your best interest to obtain and keep all receipts. This written warranty gives you specific legal rights. You may also have other rights that vary from state to state. Service under this warranty must be obtained by contacting Crosley Group, Inc. or Crosley Canada Corp.

This warranty only applies in the 50 States of the U.S.A., in Puerto Rico, and in Canada. Product features or specifications as described or illustrated are subject to change without notice. All warranties are made by Crosley Group, Inc. In Canada, your appliance is warranted by Crosley Canada Corp

Rev. 05/2017

FOR WARRANTY INFORMATION

CONTACT:

844-CROSLEY (844-276-7539)

CrosleyCare Service

3 Sperry Rd.

Fairfield, NJ 07004

For Extended Warranty or

Other Information Contact:

Crosley Extended Warranty

1-800-356-5268

11430 Gravois Rd

St. Louis, MO 63126

Disclaimer: The design and specifications are subject to change without prior notice for product improvement.

GARANTIE

GARANTIE DU RÉFRIGÉRATEUR

Votre réfrigérateur est protégé par la présente garantie.

	PÉRIODE DE GARANTIE	NOS TECHNICIENS AUTORISÉS, NOS RESPONSABILITÉS :	LES RESPONSABILITÉS DU CONSOMMATEUR :
UN AN DE GARANTIE	Un an à partir de la date d'achat originale	Nous payerons tous les coûts de réparation ou remplacement de pièces de l'appareil si le problème se révèle être un défaut des matériaux d'origine ou de main-d'œuvre ou de fabrication. Le remplacement de cartouches de filtre de glace et d'eau d'origine et de rechange (si équipé) n'est pas inclus. Les cartouches d'origine et de rechange sont garanties pendant 30 jours (uniquement les pièces).	Coûts des appels de service listés sous LES RESPONSABILITÉS NORMALES DU CONSOMMATEUR.*

Aux États-Unis, votre appareil est garanti par Crosley Group, Inc. Nous n'autorisons personne à ajouter ou modifier le contenu de la garantie. Nos obligations sur les services et les pièces en vertu de cette garantie doit être effectuées par un agent de service agréé de Crosley Group, Inc. Au Canada, votre appareil est garanti par Crosley Canada Corp.

***LES RESPONSABILITÉS NORMALES DU CONSOMMATEUR**

Cette garantie s'applique uniquement aux produits pour usage ménager habituel. Le consommateur est responsable des suivants :

- 1 Utilisation appropriée de l'appareil en conformité avec les instructions fournies avec le produit
- 2 Installation appropriée par un service agréé en conformité avec les instructions fournies avec le produit et les codes de plomberie, électrique, et/ou de gaz locaux
- 3 Connexion à une installation électrique appropriée avec une tension suffisante et correctement mise à la terre, remplacement des fusibles grillés, réparation des mauvaises connexions ou des défaillances du câblage domestique à la maison
- 4 Dépenses reliées à la réalisation des services pour l'appareil, comme remplacement de garniture, placards, étagères, etc., pièces qui ne font pas partie de l'appareil à la sortie d'usine
- 5 Dommages apparus après installation
- 6 Remplacement des ampoules et/ou des tubes fluorescents (pour les modèles ayant ces caractéristiques)

EXCLUSIONS

Cette garantie ne couvre pas les suivants:

- 1 **DOMMAGES CONSÉCUTIFS OU ACCIDENTELS TELS QUE DOMMAGES MATÉRIELS ET DÉPENSES IMPRÉVUES RÉSULTANT DE LA VIOLATION DE LA GARANTIE ÉCRITE OU AUTRES GARANTIES IMPLICITES**
NOTE: Certains États n'autorisent pas l'exclusion ni la restriction des dommages consécutifs ou accidentels, par conséquent, les restrictions ou exclusions précédentes peuvent ne pas s'appliquer à vous.
- 2 Les appels n'impliquant pas la défaillance ou les défauts de matériaux ou de main-d'œuvre, or pour les électroménagers non-déstinés à l'usage ménager. Le consommateur doit payer les appels reliés à tels services.
- 3 Les dommages causés par des opérations effectuées par des serviceurs autres que Crosley Group, Inc., Crosley Canada Corp, ou les agents de service agréés ; les dommages causés par l'utilisation de pièces autre que des pièces d'origine de Crosley Corporation et obtenues des personnes autres que les serviceurs agréés ; les dommages externes ; les dommages dû à mauvais traitement, une mauvaise utilisation, une alimentation électrique inappropriée ou une force majeure.
- 4 Les produits avec étiquette de numéro de série arraché ou modifié et ne pouvant pas être aisément déterminé ou lu.

SI VOUS AVEZ BESOIN D'UN SERVICE

Gardez votre facture, bon de livraison, ou autres preuves de paiement applicables. En cas de besoin de service, la date de facture détermine la période de garantie. Si un service est fourni, il est dans votre intérêt d'obtenir et de garder tous les reçus ou justificatifs. Cette garantie écrite vous accorde des droits juridiques spécifiques et vous pouvez aussi avoir d'autres droits qui peuvent varier d'une juridiction à l'autre. Pour les services reliés à cette garantie, vous devez contacter Crosley Group, Inc. ou Crosley Canada Corp.

Cette garantie s'applique uniquement dans les 50 États des États-Unis, au Porto Rico, et au Canada. Les caractéristiques ou spécifications du produit décrites ou illustrées dans le manuel peuvent être modifiées sans préavis. Toutes les garanties sont faites par Crosley Group, Inc. Au Canada, votre appareil est garanti par Crosley Canada Corp.

Rev. 01/2013

INFORMATION SUR LA GARANTIE

CONTACT :

844-CROSLEY (844-276-7539)

CrosleyCare Service
3 Sperry Rd.
Fairfield, NJ 07004

Pour la garantie ou d'autres informations contact:

Crosley Extended Warranty

1-800-356-5268
11430 Gravois Rd
St. Louis, MO 63126

Clause de non-responsabilité: Le design et les spécifications peuvent être modifiés sans préavis sur l'amélioration du produit.

GARANTÍA

CONGELADOR GARANTÍA

Su congelador está protegido por esta garantía.

☑	PERIODO DE GARANTÍA	A TRAVÉS DE NUESTROS SERVICIOS AUTORIZADOS, HAREMOS LO SIGUIENTE:	EL CONSUMIDOR SERÁ RESPONSABLE DE:
Uno año de piezas y mano de obra Dos años del compresor sólo (sin mano de obra)	Un año desde la fecha de compra original. Dos años del compresor en sólo	Pagamos todos los costos de reparación o reemplazo de cualquier pieza de este electrodoméstico que demuestren ser defectuoso en materiales o mano de obra. Excluye los originales y reemplazos de cartuchos de filtro de agua y hielo y (si lo tiene). Cartuchos originales y reemplazados están garantizados por 30 días (sólo piezas).	Los costos de las llamadas de servicio que se enumeran en LAS RESPONSABILIDADES NORMALES DEL CONSUMIDOR

En Los Estados Unidos su electrodoméstico está garantizado por Crosley Group, Inc. Nosotros autorizamos a nadie a cambiar o agregar a cualquiera de nuestras obligaciones bajo esta garantía. Nuestras obligaciones de reparación y piezas bajo esta garantía deben ser realizadas por un técnico autorizado por Crosley Group, Inc. En Canadá su electrodoméstico está garantizado por Crosley Canada Corp..

☑*RESPONSABILIDADES NORMALES DE LOS CONSUMIDORES:

Esta garantía se aplica sólo a los productos de uso doméstico ordinario, y el consumidor es responsable de los artículos que figuran a continuación:

- 1, El uso adecuado del aparato de acuerdo con las instrucciones proporcionadas con el producto.
- 2, La instalación adecuada por un técnico autorizado de acuerdo con las instrucciones proporcionadas con el aparato y de acuerdo con todos los códigos de plomería, eléctricos y de gas locales.
- 3, La conexión adecuada a una fuente de alimentación con conexión a tierra de voltaje suficiente, reemplazo de fusibles quemados, reparación de conexiones sueltas o defectos en el cableado doméstico.
- 4, Gastos para facilitar el acceso al electrodoméstico para el servicio, tales como la remoción de molduras, armarios, estantes, etc., que no son parte del electrodoméstico cuando se envió de la fábrica.
- 5, Daños para terminar después de la instalación.
- 6, Reemplazo de bombillas y/o tubos fluorescentes (en los modelos con estas características).

EXCLUSIONES

Esta garantía no cubre los siguientes:

- 1, Los daños consecuentes o incidentales, tales como daños a la propiedad y gastos incidentales que resulten de cualquier violación de este escrito o cualquier garantía implícita.
Nota: Algunos estados no permiten la exclusión o limitación de daños incidentales o consecuentes, por lo que esta limitación o exclusión puede no aplicarse a usted.
- 2, Las llamadas de servicio que no involucren un mal funcionamiento y defectos de fabricación y materiales, o para electrodomésticos que no uso doméstico normal. El consumidor debe pagar por tales llamadas de servicio.
- 3, Los daños causados por los servicios prestados por administradores que no sean Crosley Group, Inc., Crosley Canada Corp. o sus técnicos autorizados; el uso de piezas que no sean piezas originales Crosley Group, Inc., obtenidas de personas que no sean técnicos; o causas externas como abuso, mal uso, suministro de energía o fuerza mayor inadecuada.
- 4, Productos con números de serie originales que han sido removidos o alterados y no pueden determinarse con facilidad.

SI NECESITA SERVICIO: Mantenga su factura de venta, su comprobante de entrega o cualquier otro registro de pago apropiado. La fecha en el proyecto de ley del período de garantía debe ser requerido. Si se realiza el servicio, es en su mejor interés para obtener y conservar todos los recibos. Esta garantía escrita le otorga derechos legales específicos. Usted también puede tener otros derechos que varían de estado a estado. El servicio bajo esta garantía debe ser obtenido contactando Crosley Group, Inc. o Crosley Canada Corp..

Esta garantía sólo se aplica en los 50 Estados de Los Estados Unidos, en Puerto Rico, y en Canadá. Características o especificaciones descritas o ilustradas de productos están sujetas a cambios sin previo aviso. Todas las garantías son hechas por Crosley Group, Inc. En Canadá, su electrodoméstico está garantizado por Crosley Canadá Corp ..

Para la información de la garantía, contacte :
844-CROSLEY (844-276-7539)
 CrosleyCare Service
 3 Sperry Rd.
 Fairfield, NJ 07004

Para garantía u otra información contacto:
Crosley Extended Warranty
 1-800-356-5268
 11430 Gravois Rd
 St. Louis, MO 63126

Descargo de responsabilidad: El diseño y las especificaciones están sujetas a cambios sin previo aviso para mejorar el producto.

