



MADE IN U.S.A.

THE FLEXBAR CHUCKGUARD

INSTALLATION INSTRUCTIONS

1. Unpack Chuckguard, Mounting Bracket and Support Bar.
2. Position Chuckguard around chuck
NOTE: Machine Power Must Be Off.
3. Location of Chuckguard should have at least 1" clearance between chuck and inside surface of Chuckguard.
NOTE: Remember Jaws May Extend Beyond Outer Diameter of Chuck.



MODEL NUMBER
13056
13057
13058
EXTRA-LARGE

4. Assemble Mounting Bracket to Chuckguard.
NOTE: This bracket can be located many ways to accommodate mounting on different machines.
5. Once Mounting Bracket is located it can be drilled or modified to be permanently attached to machine.
NOTE: Due to the Multitude of Mounting Applications, Mounting Hardware Is Not Supplied
6. Position support bar in the area in front of the Chuckguard.
NOTE: Do Not Locate Support Bar on Hinged Front Panel.
7. Once Support Bar is located it can be permanently attached to machine.
NOTE: Due to the Multitude of Mounting Applications, Mounting Hardware Is Not Supplied

