

PA-30


Data Sheet




| Control Ability | Non-Synchronous Dual Channel Parallel Control |
|---------------------|---|
| Input Voltage | 12VDC |
| Output Power | 12VDC |
| Current | 30A (15A Per Channel) |
| Kit Includes | 1 Control Box & 2 Wireless Remotes |
| Remote Functions | Up, Down (Momentary & Non-Momentary) |
| Remote Battery Type | 2x CR2016 3V Lithium Cell |
| Size (L x H x W) | 4.5" x 1.3" x 3.3" |
| Weight | 0.95 lbs |
| Warranty | 18 Months |


Dimensions



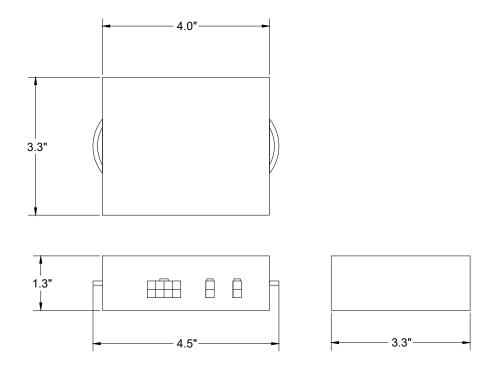

Wiring Diagram

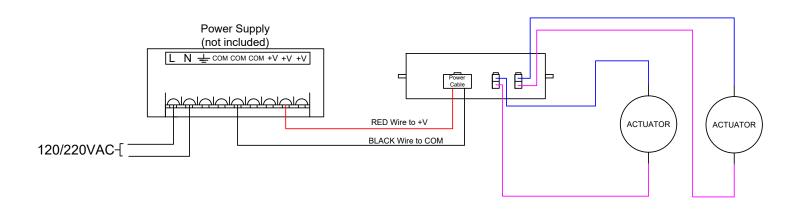

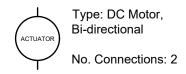

Momentary/Non-Momentary Mode



Momentary Mode

- *Ensure the Jumper S1 on the PCB is connected
- •Hold UP to extend the actuator, let go to stop the actuator
- Hold DOWN to retract the actuator, let go to stop the actuator

Non-Momentary Mode

- *Ensure the Jumpers S1 on the PCB is disconnected
- Press UP to extend the actuator, Press UP again to stop the actuator
- Press DOWN to retract the actuator, Press DOWN again to stop the actuator
- If DOWN is pressed while the actuator is extending, it will reverse direction and begin to retract

Remote Synchronization Process



- •Open the control box, press and hold the white button and the blue LED will turn on
- •While holding down the white button, press any button on the remote and the LED will turn off
- •The remote is now synced to the control box
- A maximum of two remotes can be saved to one control box