







Image	Part no.	Works With Radio Models:
	BK2	P150 KNG
	K	Relm RPU416, RPU416A, RPU499, RPU499A Plus, RPU4200, RPV516, RPV599X, RPV516A, RPV599A Plus
	M5	Relm RPV3000 / 3600 / RPU3000 / 3300C
	M	Relm RP6500






Image	Part no.	Works With Radio Models:
	HR2	P5300, P5350, P5370, P5400, P5450, P5470, P5500, P5550, P5570, P7300, P7370, P7350, XG-25, XG-75
	H6	HDP100, HDP150, HDP250 Momentum
	H7	HDP-250



Image	Part no.	Works With Radio Models:













	H4	BD5 Series, PD4 Series, PD5 Series, TC-446S, TC-500, TC-508, TC-518, TC-580, TC-600, TC-610, TC618, TC620, TC626, TC-700, TC-700 Ex PLUS, POWER446
	H5	TC320 with locking screw
	H6	PD7 Series, PD98X
	H7	PD-6 Series, X1e, X1p
	H8	BD3 Series, PD3 Series
	M4	TC-980
	M5	TC-610P, TC700P, TC-780, TC-780P, TC-780M



Image	Part no.	Works With Radio Models:
	S2B	IP-100H, IP-501H - Waterproof
	S3	F1100D/F2100D, F3210D/F4210D, F11, F11S, F14, F14S, F21, F21S, F24, F24S, F33GS, F33GT, F43GS, F43GT, F43TR, F3003/F4003, F4026DR, F4029SDR, F43GS, F43GT, F43TR, F1000/F2000, F3003, F3021/F4021, F4029SDR, F3001/F4001, F3011/F4011, F3101/F4101, JC-V80/V80E,

	S3B	F1000/F2000D/T/S, F1100D/F2100D, F3031S/4031S, F3230/4230DT/DS, F31/41W, V88 - BC1000 Watreproof
	I2	F30G/ F30GT/ F30GS/ F31GS/ F31GT, F40G/ F40GS/ F40GT, F50/ F50V/ F51, F60/ F61/ F61V, F70, F80, M87 / 88, F3061 Series/ F4061 Series, IC-F3161 Series/ F4161 Series, F3062/F4162, F4029DRR
	I4	F3260/ F4230, F3261D/ F4261D, F3360D/ F4360D, PD52D, PD62D, F3400D/ F4400DT/DS/D, F5400/6400D/DS, F7010/F7020, F7210T/F/S, F9011/F9021,

KENWOOD






Image	Part no.	Works With Radio Models:
	K	Free Talk XLS, NX240V/340U, Pro Talk XLS, TK208/308, TK2100/3100, 2160/3160/3101,TK2170/3170/3173,TK220/320, TK240/340, TK240D/340D, T248, TK250/350/353, TK348, TK248, TK430/431, TK2200/3200, TK2202/3202/TK3212, TK2130, TK2212, TK2300/TK2312 3101 Free Talk, TK2400, TK2302/3302, TK3312, TK259/359, TK272G/372G, TK3100, TK3130 (ProTalk XLS), TK3173, TK2360, ,TK3230,TK3360, TK3131, TK3201, TK3300, TK3350, TK260G/360G, TK270G/370G, TK373G, XL2102/3102 Pro Talk, TK2400VP/3400UP, TK2402V/3402U, TK260, TK360, TK370, TK373 TK2130 ProTalk XLS),TK3131 (FreeTalk XLS) NEXEDGE NX220, NX240 / 340, NX320, NX420
	K1	TK-190/290/390, TK-280/380/480, TK-385, TK-481, TK-2140/3140, TK-2180/3180/4180, TK-3148, TK-3212, TK-5210/5310, TK-5220/5320, TK-5410, TK-5320/5420, TK-5400, <u>NEXEDGE NX200/300</u> , NX210, NX410/411, NX-3200/3300, NX-5200, NX-5300, NX-5400
	K2	PKT23
	K5	NX-P500
	KM	Kenwood Mobil Palm Mic



Image	Part no.	Works With Radio Models:
-------	----------	--------------------------

	<p>M3</p>	<p>Viking VP600, VP900, Viking Fire, Viking CK8500 Series, Avenger 8100 Series, 51 Fire ES, 5100 ES Series, 51SL ES Series, 51LT ES, Multi-Net Ascend ES Series, AN/PRC 127EFJ</p>
---	------------------	--
















Image	Part no.	Works With Radio Models:
	<p>M</p>	<p>TJ-3100V, TJ-3400U, TJ-3400UM, TP-5116, TP-5416, TP-8102, TP-8402, TP-8000BT Series, TP-8000R Series, TS-2116, TS-2416, TS-3116, TS-3416</p>
	<p>M12</p>	<p>TPD-1116, TPD-1416, TPD-1124, TPD-1424</p>
	<p>M14</p>	<p>TPD-8124, TPD-8424</p>
	<p>K</p>	<p>TS-3416K</p>




Image	Part no.	Works With Radio Models:
	M	BC10, BC90, BC120, BC130, BPR40, CLS1110, CLS1410, CP125, CP88, CP100, CP110, CP150, CP185, CP200, CP200D, CP200XLS, CP450, CT150, CT250, CT450, CT450LS, DTR Series, GP2000, GP300, GP308, GP68, GP88, GP2000, GTI, GTX, LTS2000, MAG ONE, PR400, P040, P080, P110, P1215, P1225LS, PRO3150, SP10, SP21, SP50, XTN446, XTN500, XTN600, XV1100, XV2100, XU1100, XU2100, XU2600, VL130, VL50, GP280, GP350 (requires Motorola adapter HLN9482)
	M3	GP900, GP9000, HT1000, JT1000, MT2000, MTS2000, MTX8000, MTX838, MTX900, MTX9000, MTX960, MTX-LS, XTS2500, XTS3000Astro, XTS3500, XTS5000, XTS3000, PR1 500, XTS1500, MX838
	M4	GP1280, GP140, GP320, GP328, GP329, GP338, GP339, GP340, GP360, GP380, GP640, GP650, GP680, HT1250, HT1250LS, HT1550, HT1550XLS, HT750, MTX8250, MTX8250LS, MTX850, MTX850LS, MTX9250, MTX950, MTX950, PR860, MTP700, PRO5150, PRO5350, PRO5450, PRO5550, PRO5750, PRO7150, PRO7350, PRO7450, PRO7550, PRO9150, PTX700, PTX760, PTX780, PRO7750, WARIS
	M5	EX500, EX560, EX560XLS, EX600, GL200, GL2000, GP328Plus, GP338Plus, GP344, GP388, Pro5150Elite, Pro7150, Pro9150, Elite7150, Elite9150
	M12	APX6000, APX7000, DP3400, DP3401, DP3600, DP3601, SRX2200, XPR6300, XPR6350, XPR6380, XPR6500, XPR6550, XPR6580, XPR7350e, XPR7380e, XPR7550e, XPR7580e,
	M14	SL300, SL3000e, SL3500e, SL500, SL7000, SL7500, SL7550e, SL7580e, SL7590e, SL4000, SL4010 - WAVE TLK100
	M15	APX3000/8000, DP2000, DP2400, DP2600, DP 3441MTP,3100/3150/3200/3250/3500/3550, DP2400, DP2600, DP3441, MOTOTRBO - XPR3300e, XPR3500e
	M17	CLP1010, CLP1040, CLP1060
	MM	XPR5000 Series Mobie Radio Pam Mic


	MM1	CM200d, CM300d, XPR 2500 Mobile Radio Palm Mic
---	-----	--

Image	Part no.	Works With Radio Models:
-------	----------	--------------------------


NEXTEL

	KN	NEXTEL i300, i305, i405, i450, i475
---	----	-------------------------------------


sepura

	SP2	SC230 Series, STP8000, STP9000, STP9100, STP9200
---	-----	--



tait

	TA	TP8100 series, TP9400 series
---	----	------------------------------

TEKK

	M Digital Ready	XU100, XV100, XU1000, XV1000
---	--------------------	------------------------------

Vertex Standard

Image	Part no.	Works With Radio Models:
	Y3	BC95, eVerge- eVX531, eVX534, eVX539, VX10, VX130, VX160, VX180, VX210, VX210A, VX230, VX300, VX231, VX350, VX351, VX354, VX400, VX410, VX420, VX451, VX454, VX459
	Y5	VX820, VX821, VX824, VX829, VX871, VX874, VX879, VX920, VX921, VX924, VX971, VX974, VX979

	Y6	eVX-S24
---	----	---------