


Enya AcousticPlus® System Instruction

(X2 Guitar)

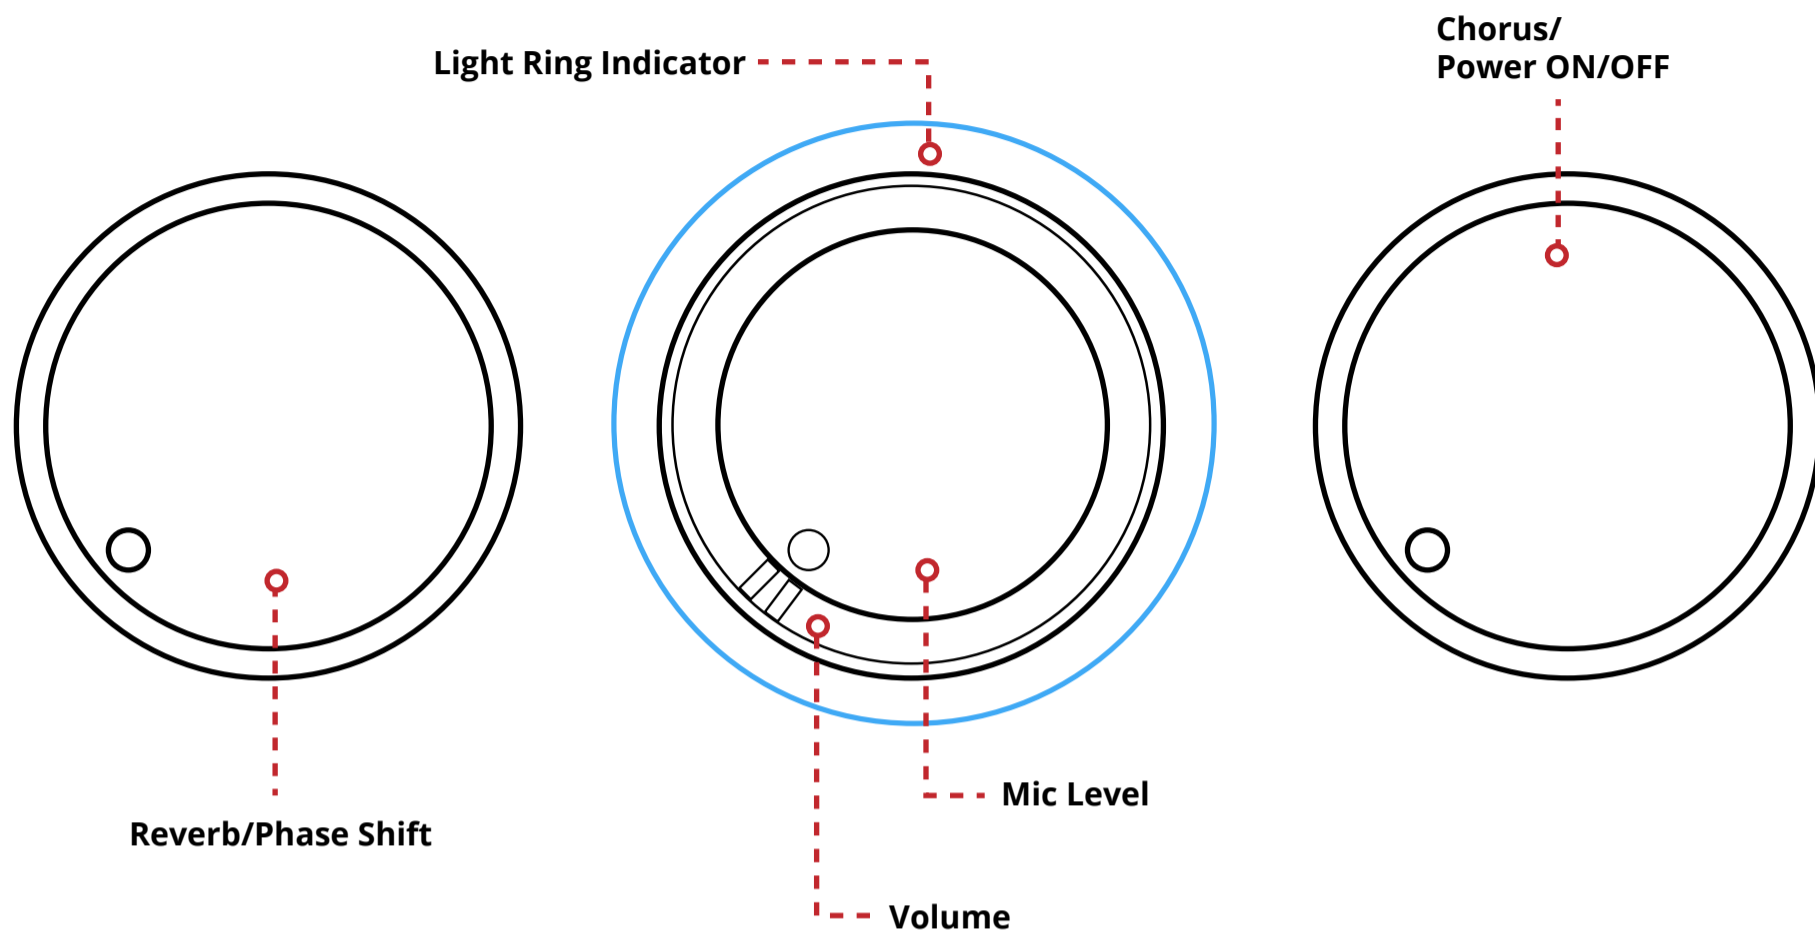

[Power ON/OFF]

Press and hold to turn on, see ring indicator light up green. Quick press to turn off, see ring indicator turns off.

[Chorus]

0-180° : Chorus Control;

[Light Ring Indicator]

Green: 70% or more of full charge

Yellow: 10% to 70% of full charge

Red: 10% or less (charge needed)

[Volume]

Volume knob can be used to control the volume of both the AcousticPlus system and external output.

[Mic Level]

Try not to set the Mic level at maximum to avoid excessive resonance.

[Reverb/Phase Shift]

Reverb: Control the reverb effect by turning knob clockwise/anti-clockwise.

Phase Shift: Quick press to shift phase. This function can be used to either to increase the response rate or eliminate the excessive resonance.

Reminders:

1. Try not to set all controls at maximum to avoid excessive resonance.
2. Save battery by turning off after playing.
3. Take battery out if planning to not play for a long time.