



## OPERATION GUIDE

# **RV BLIND SPOT DETECTION SYSTEM: FOR MOTORHOMES**



# CONTENTS

---

1. WARNING .....	1
2. SYSTEM CONTENTS.....	2
3. INTRODUCTION .....	3
4. REAR CROSS TRAFFIC ALERT (RCTA) .....	3
5. DOOR OPEN WARNING (DOW) .....	4
6. SYSTEM SPECIFICATIONS.....	4
7. OPERATION.....	5
8. ERROR DIAGNOSTICS.....	6
9. TROUBLESHOOTING .....	7




# 1. WARNING

1. THE RV BLIND SPOT DETECTION SYSTEM DOES NOT REPLACE ANY FUNCTIONS DRIVERS SHALL ORDINARILY PERFORM IN DRIVING A MOTOR VEHICLE, NOR DOES IT DECREASE THE NEED FOR DRIVERS TO STAY VIGILANT AND ALERT IN ALL DRIVING CONDITIONS, TO OBEY ALL THE SAFE DRIVING STANDARDS, PRACTICES, TRAFFIC RULES AND REGULATIONS.

2. CUB DOES NOT GUARANTEE 100% ACCURACY IN THE DETECTION OF VEHICLES OR PEDESTRIANS, AND THEREFORE DOES NOT GUARANTEE THE PERFORMANCE OF ANY RELATED AUDIO OR VISUAL WARNING SIGNALS. FURTHERMORE, ROAD, WEATHER AND OTHER CONDITIONS MAY ADVERSELY AFFECT THE VEHICLE'S BLIND SPOT DETECTION SYSTEM RECOGNITION AND RESPONSE CAPABILITIES.

3. CAREFULLY READ THIS OPERATION GUIDE AND ITS IMPORTANT SAFETY INSTRUCTIONS AND WARNINGS PRIOR TO INSTALLING OR USING THE RV BSD SYSTEM.

4. IT IS RECOMMENDED THAT THE INSTALLATION BE CARRIED OUT BY QUALIFIED PERSONNEL.

 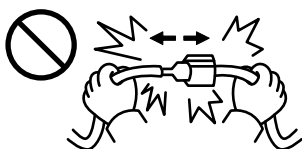







 



Do not pull the connectors with excessive force.




Do not pull the harness with excessive force.

## 2. SYSTEM CONTENTS

No.	ITEM	Qty	PICTURE
1	Right RV Radar	1	
2	Left RV Radar	1	
3	Radar Mounting Gasket	2	
4	Control Unit	1	
5	Right Indicator	1	
6	Left Indicator	1	
7	Buzzer	1	
8	Power Button	1	
9	Harness Set	1	
10	OBD II Cable	1	
11	Manual Set/Accessories	1	


### 3. INTRODUCTION

The RV Blind Spot Detection System is designed to aid in detecting vehicles that may have entered the vehicle blind spot zone, which is represented by the vehicles in the diagram below. The detection area is on both sides of your vehicle, extending rearward from the vehicle to approximately 30 feet beyond the bumper. The system is designed to alert you of vehicles, which will not allow for a safe lane change.

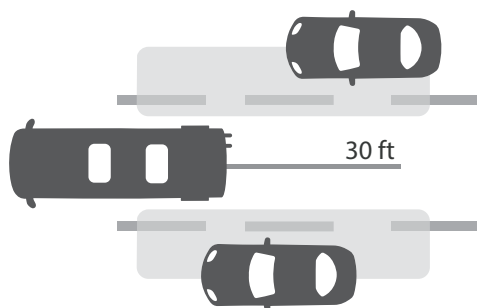

### 4. REAR CROSS TRAFFIC ALERT (RCTA)


The Rear Cross Traffic Alert (RCTA) is activated when the vehicle is placed in 'reverse'. An audible tone will be heard and the corresponding warning indicator lamp will flash when a pedestrian or vehicle is detected approaching and resulting in an impact of approximately 2 seconds. The system is capable of monitoring the rear cross traffic zones up to a 60 ft range.

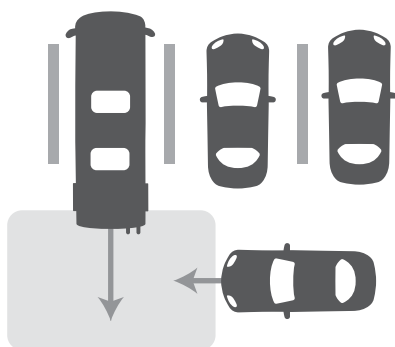

## 5. DOOR OPEN WARNING (DOW)

The Door Open Warning (DOW) is activated under two conditions; when the engine is on and the hazard indicators are activated, or five minutes after stopping the engine.

An audible tone will be heard and the warning indicator lamp will flash when an object or vehicle is within the warning zone or if there is a vehicle detected approaching at high speeds resulting in an impact of less than 2 seconds.

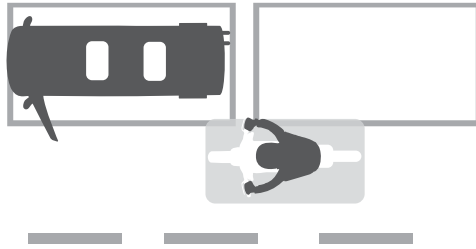

## 6. SYSTEM SPECIFICATIONS


No.	ITEM	SPECIFICATIONS
1	Operating Temperature	-40°C ~ +80°C
2	Storage Temperature	-40°C ~ +85°C
3	Environmental Protection Level	Radar : IP67
4	Input Voltage Range	9V - 16V
5	Current Consumption	Max. 800mA ± 5% @12V
6	Alarm Level	Level I : LED On (Constant) Level II : LED Flash+Buzzer On
7	Specifications	ISO 17387/ISO 16750
8	Radiation Regulations	FCC / NCC



## 7. OPERATION

### Indicator

- ① Left Side Blind Spot Indicator
- ② Right Side Blind Spot Indicator
- ③ POWER button

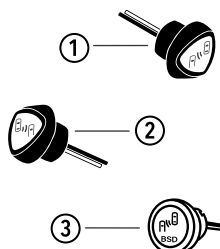

### System Power

1. The system will automatically activate when the ignition is turned on. The warning indicator lamps ① ② illuminate for 3 seconds during startup.
2. The system may be deactivated by pressing and holding the POWER button ③ for 3 seconds, the indicator lamps ① ② will blink twice to confirm.
3. The system may be reactivated by pressing and holding the POWER button ③ for 3 seconds, the indicator lamps ① ② will illuminate for 3 seconds to confirm.

### System Activation

1. Start vehicle.
2. Indicator lamps ① ② will illuminate for 3 seconds to confirm activation and run self-diagnostics.
3. If there are errors, the system will flash the indicator lamps ① ② and sound tones to indicate the problems. Please use the TROUBLESHOOTING section for more help.
4. The Blind Spot Detection System will turn on when you start the engine and begin driving forward above approximately 12mph.

### Blind Spot Indicator Lamps

1. The left indicator ① will illuminate when a vehicle is in your left blind spot while driving. This indicator will flash and an audible tone will sound when your left turn signal is activated while there is a vehicle in the left blind spot.
2. The right indicator ② will illuminate when a vehicle is in your right blind spot while driving. This indicator will flash and an audible tone will sound when your right turn signal is activated while there is a vehicle in the right blind spot.

## 8. ERROR DIAGNOSTICS

It is possible that the Blind Spot Detection System will trigger an alert even though there is no vehicle in the blind spot zone. The Blind Spot Detection System can detect objects such as: construction barrels, guard rails, lamp posts, etc. Occasional false alerts are normal.

STATUS	SOUND
Controller HMI CAN TX Failed	Do Re Mi
Radar System Error - Master	Do Re Mi
Sleep Mode	1 second beep, stop .5 second & 1 second beep
System Initialization	3 second beep

## 9. TROUBLESHOOTING

ISSUE	SYMPTOM	POSSIBLE CAUSE	POSSIBLE SOLUTION
Power On Self-test	The system does not respond after starting the engine	Incorrect connection or control unit failure	Confirm that the IGN, wiring, fuse, and controller are connected.
	The indicator does not light up	Damaged indicator	Contact your dealer
		Disconnected indicator	Verify connection
	The buzzer makes no sound	Damaged buzzer	Contact your dealer
		Disconnected buzzer	Verify connection
	The power switch does not work	Damaged power switch	Contact your dealer
Disconnected power switch		Verify connection, press and hold the switch for 2 seconds.	
System Operation	[ Do Re Mi ] alarm	Radar disconnection or no OBD connection	Abnormal power supply, wiring, or radar, please contact your dealer.
	Did not enter sleep mode after 5 minutes of IGN off	IGN lead connected to constant power	Change the IGN to a switched power source connection location
Functions	No Level 1 BSD alert	Vehicle speed is less than 12 mph	Normal operation
		Bad connection from OBDII	The vehicle is not compatible. Please contact the dealer.
	No Level 2 BSD alert		Turn signal leads not connected
		Confirm turn signal leads are connected	
No RCTA alert	Reverse lead not connected	Confirm that the reverse lead is connected	



---

250 Benton Ct, City of Industry, CA • 714.784.6687 • [www.RVBlindSpot.com](http://www.RVBlindSpot.com) • [cs@novusradar.com](mailto:cs@novusradar.com)

---