

*Hedonist*

# THE PEACHY BUNCH



# Contents

 
Your Hedonist journey begins today...

1. Getting started
2. Charging Guide
3. Using the The Peachy Bunch
4. Cleaning, Storage & Safety.
5. Trouble Shooting
6. Warranty & Return
7. Product Specifications
8. Disclaimer

# Getting started

*Hedonist*

Congratulations on acquiring The Peachy Bunch. Before getting more closely acquainted with it, please take a moment to look through this product guide.

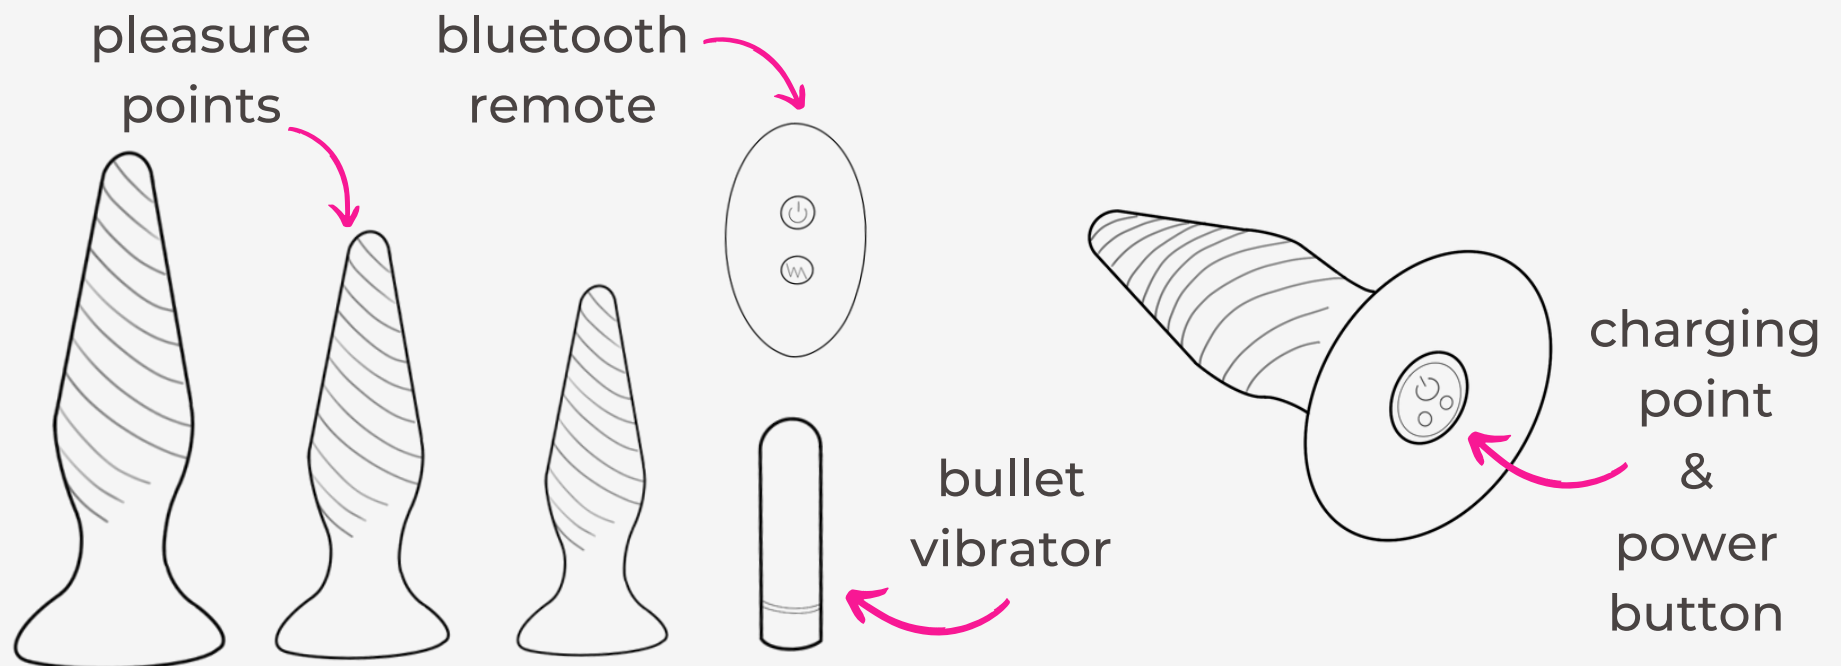


- Before first use, charge The Peachy Bunch for ~1.5 hours. For more details on charging, refer to [Charging Guide](#)
- Once charged, hold the 'Power' button for 3 seconds to activate
- Press the power button to adjust between 9 vibration modes
- Press and hold the 'Power' button to turn off your The Peachy Bunch's Anal Trainer


# Charging Guide

*Hedonist*

- Ensure that the charging port is dry before charging
- Connect the magnetic DC plug to the DC port at the base of The Peachy Bunch
- Insert the USB port into a USB power adaptor of 5V or less
- The LED light on the interface of The Peachy Bunch will blink to indicate it is charging
- When it is fully charged (after ~1.5 hours), the LED will emit a steady glow
- Please disconnect charger once fully charged
- Avoid charging The Peachy Bunch for a prolonged period of time
- Place the 3v lithium button battery into the wireless remote to enjoy its wireless bluetooth feature

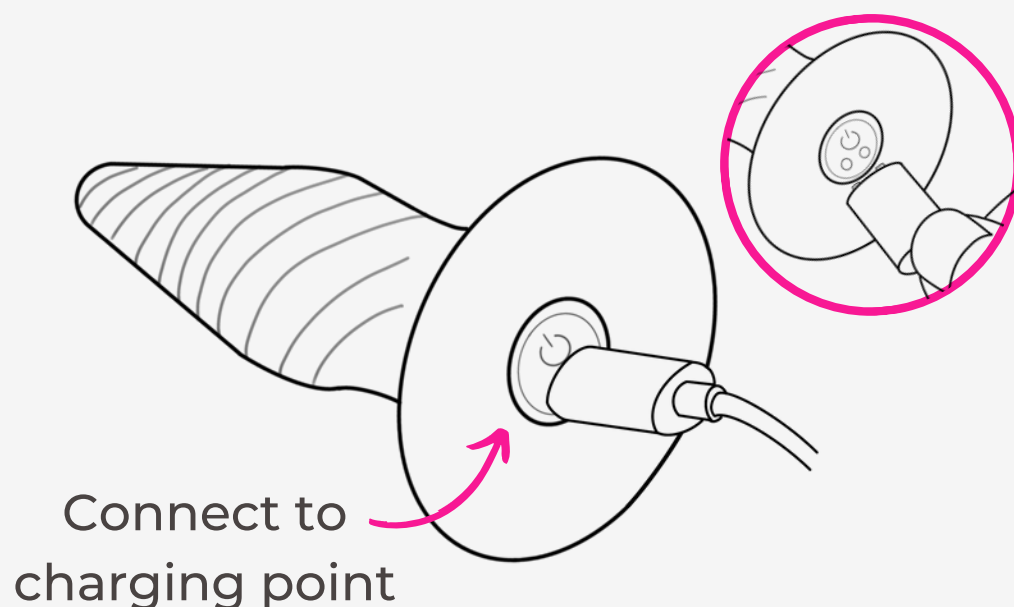


## Back of Wireless Remote

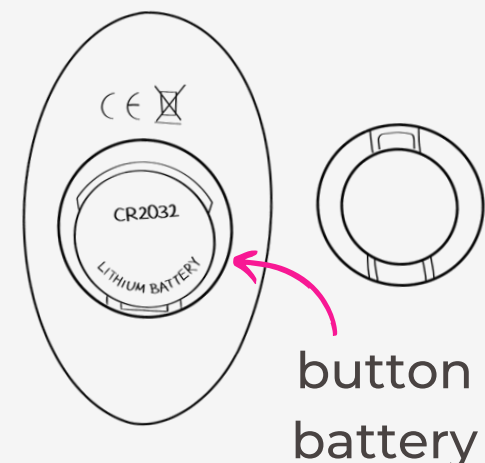

# Using The Peachy Bunch *Hedonist*

This Anal Trainer Kit is your ticket to exploring thrilling new depths. Three gradually-sized plugs and a vibrator with bluetooth remote give you a bun(dle) of pleasure possibilities!

1. Hold The Peachy Bunch by the base. Position it in your hands comfortably

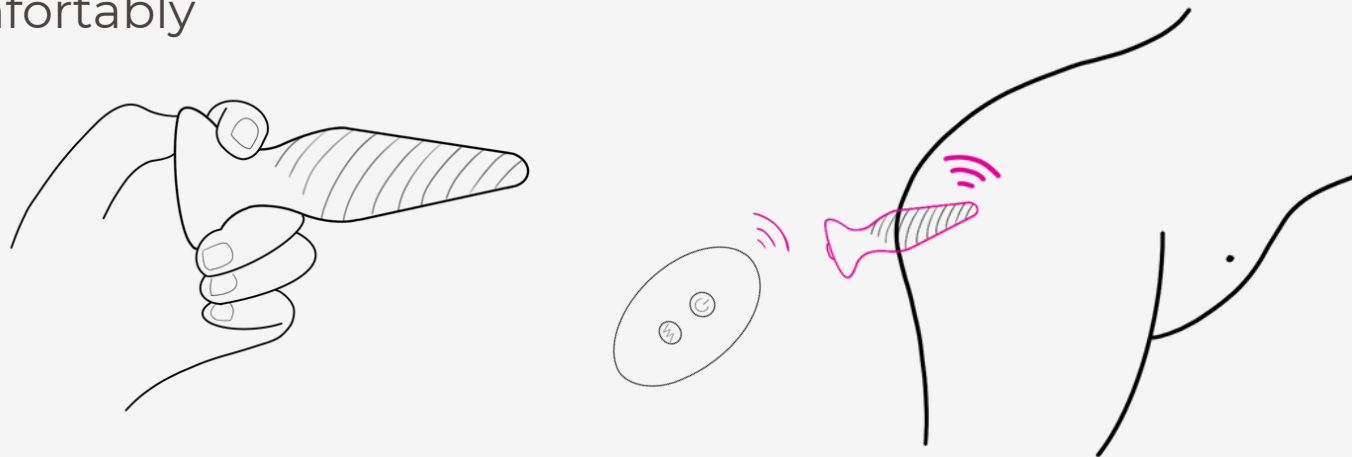

2. Apply generous amount of lubrication on The Peachy Bunch and inside your anus with a lube launcher or your fingers
3. As a beginner, slowly start with the smallest anal plug and gently insert the toy into your anus until it is comfortably within you
4. Turn it on and adjust the pressure as you deem fit
5. Experiment with the 9 different vibration modes by pressing the button
6. Have fun and take control of your pleasure journey

**Safety Note: DO NOT insert bullet into the vagina or anus**

# Cleaning, Storage & Safety

The Peachy Bunch will offer years of enjoyment with proper care and maintenance. Here are some tips to prolong the life span of your pleasure buddy:

1. Avoid using your The Peachy Bunch with hand creams and silicone-based lubricants as it may harm the texture of the silicone toy
2. Always clean The Peachy Bunch after every use with soap and water, then allow it to dry. It is also fully waterproof! This makes cleaning fuss-free and really simple
3. Never use cleansers containing alcohol, petrol or acetone. And do not boil, bake, microwave, or clean The Peachy Bunch in the dishwasher
4. Store The Peachy Bunch in your discreet Hedonist pouch to avoid the accumulation of dirt, lint and other harmful particles that may collect on The Peachy Bunch's surface
5. Avoid leaving The Peachy Bunch in direct sunlight and never expose it to extreme heat or cold






# Cleaning, Storage & Safety

The Peachy Bunch comes with a waterproof silicone outer sleeve and a waterproof bullet vibrator that can be disassembled for a more thorough clean.

1. Carefully remove the bullet vibrator from its silicone sleeve
2. Give the bullet vibrator a quick rinse and pat dry immediately
3. To thoroughly wash The Peachy Bunch's outer sleeve, use soap and water, then give it a good rinse before leaving it to dry

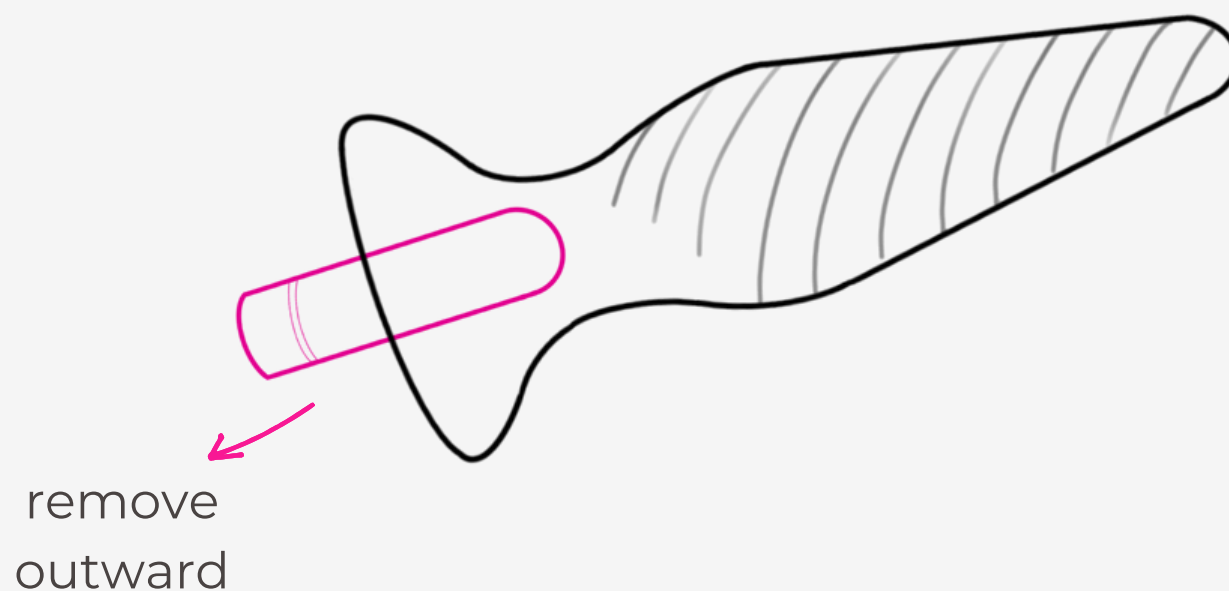

# Troubleshooting

## No LED light blink when charging?

- Battery may already be fully charged
- Battery may be drained and will take a few minutes to respond
- Charger may not be properly connected. Please check charging connections:
  - (i) Ensure USB connection is properly plugged to the main power socket;
  - (ii) Ensure that the magnetic charger is in full contact with the magnetic port of the toy

## Not activated when the “Power” button is pressed?

- Battery may have been completely drained. Hence, simply recharge The Peachy Bunch for it to work again
- The Peachy Bunch's interface may be locked. Hold down the power button for at least 10 seconds.

If you experience any other problems with your The Peachy Bunch or if you have any questions regarding its operation, please contact us via [hello@hedonisttribe.com](mailto:hello@hedonisttribe.com).



# Warranty & Return

*Hedonist*

All products come with a 180-Day Limited Warranty and 14-Day Return when purchased directly from [www.hedonisttribe.com](http://www.hedonisttribe.com).

## **180-DAY WARRANTY**

Hedonist warrants this pleasure device for a period of 180 DAYS, from the date of original purchase, against defects due to faulty workmanship or materials. The warranty covers working parts that affect the function of the pleasure object. It does NOT cover any defects caused by fair wear and tear or damage caused by accident, misuse or neglect. Any attempt to open or take apart the pleasure object (or its accessories) will void the warranty. If you discover a defect and notify Hedonist during the warranty period, Hedonist will, at its discretion, replace the pleasure object free of charge. To submit a warranty claim on the product, please write into [hello@hedonisttribe.com](mailto:hello@hedonisttribe.com).

## **14-DAY RETURN**

All products have undergone high standards of quality control in testing every single product before sale. Nonetheless, we accept all returns for a period of 14 DAYS, from the date of original purchase. To be eligible for the return, the product's hygiene seal must not be opened or tampered with and the product must be in its original packaging kit (including the pouch and black box).

For more details on the warranty & return process, please refer to our policy here: [www.hedonisttribe.com/pages/returns-and-warranty](http://www.hedonisttribe.com/pages/returns-and-warranty).

# Product Specifications

*Hedonist*

Materials = Body-safe Silicone + ABS

Weight = 34g (Small plug), 57g (Medium plug), 84g (Large plug), 24g (Bullet), 22g (Remote)

 
Size = 110 \* 51 MM, Girth: 51 MM (Small plug), 124 \* 55 MM, Girth: 55 MM (Medium plug), 142 \* 59 MM, Girth 59 MM (Large plug), Bullet: 69 \* 19MM, Remote: 62 \* 37MM

Charging = ~1.5 hr at 5V, 1 - 2A

User Time = 45 mins

Interface = 1 button, 9 vibration modes

Waterproof = Waterproof IPX 7 (not including the remote)

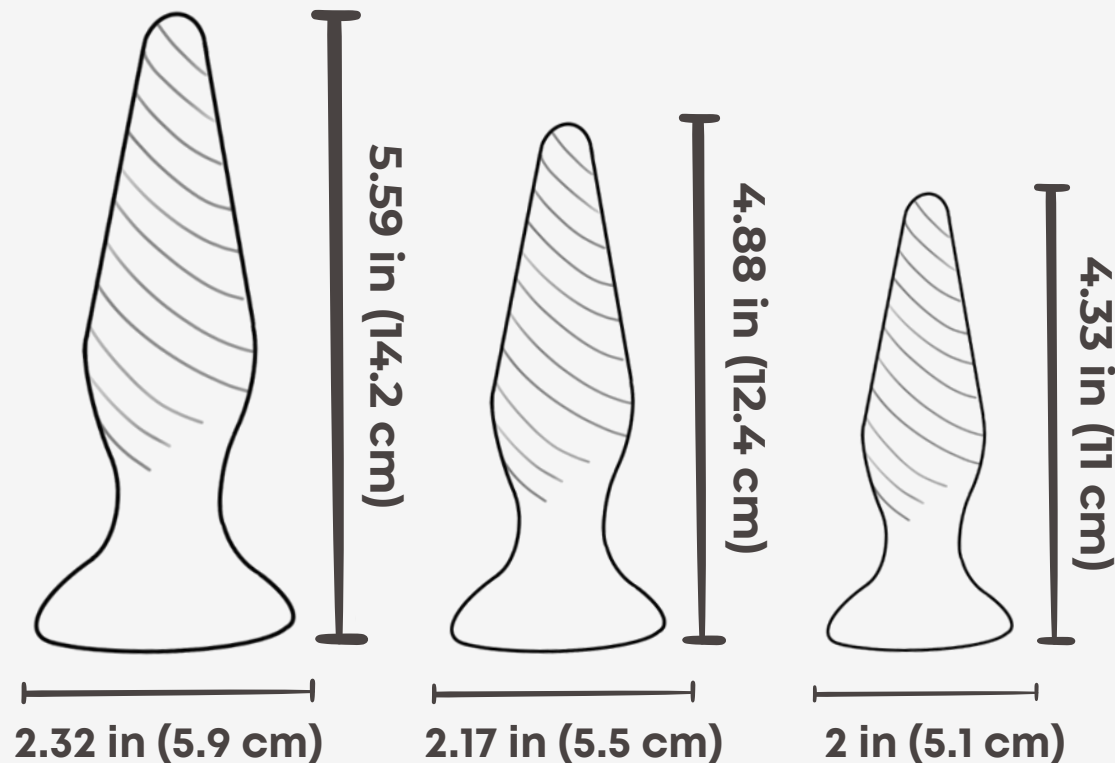



# Disclaimer

Disclaimer: Users of this product do so at their own risk. Neither Hedonist nor its retailers assume any responsibility or liability for the use of this product. Changes or Modifications not expressly approved by the manufacturer could void the user's authority to operate the equipment. Model may be changed for improvements without notice.

© 2023 HEDONIST. ALL RIGHTS RESERVED.

CURATED BY HEDONIST SINGAPORE

MANUFACTURED FOR HEDONIST IN CHINA

WEBSITE: [WWW.HEDONISTTRIBE.COM](http://WWW.HEDONISTTRIBE.COM)

SUPPORT: [HELLO@HEDONISTTRIBE.COM](mailto:HELLO@HEDONISTTRIBE.COM)