Hedonist



VENUS



Contents


Your Hedonist journey begins today...

- 1. Getting started
- 2. Charging Guide
- 3. <u>Using the Venus</u>
- 4. Cleaning, Storage & Safety
- 5. Trouble Shooting
- 6. Warranty & Return
- 7. Product Specifications/Disclaimer

Getting started



Congratulations on acquiring the Venus. Before getting more closely acquainted with it, please take a moment to look through this product guide.

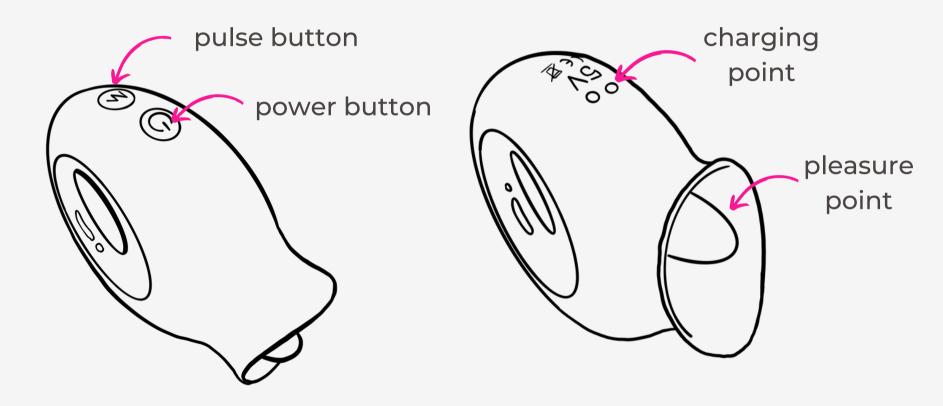


- Before first use, charge your Venus for ~1.5 hours. For more details on charging, refer to Charging Guide
- · Once charged, hold the 'Power' button for 3 seconds to activate
- Press the 'Power' button to switch between 9 licking modes
- · Press the 'Pulse' button to switch between 9 vibration modes
- · Press and hold the 'Power' button to turn off your Venus

Charging Guide



- · Ensure that the charging port is dry before charging
- Connect the magnetic DC plug to the DC port at the base of your Venus
- · Insert the USB port into a USB power adaptor of 5V or less
- The LED light on the interface of your Venus will blink to indicate it is charging
- \cdot When it is fully charged (after ~1.5 hours), the LED will emit a steady glow
- · Please disconnect charger once fully charged
- · Avoid charging your Venus for a prolonged period of time

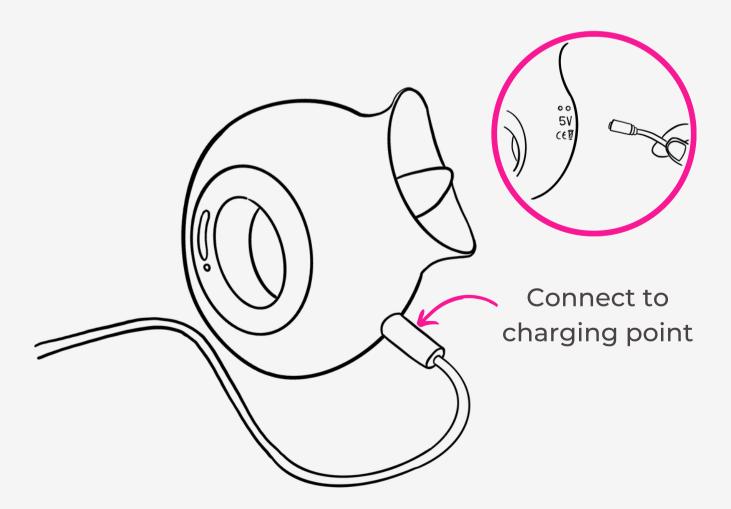


Using the Venus



The Venus is specifically designed to deliver intense stimulation throughout the entire body with unique sensations. It features 9 modes of vibrations & 9 modes of licking to give you a feeling like no other toy you have ever experienced.

1. Hold your Venus by the handle. Position it in your hands comfortably

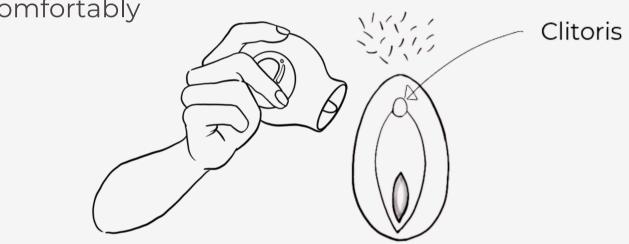

- 2. Start by gently touching yourself and locating your clitoris
- 3. Turn on your Venus, then place the 'tongue' of your Venus gently onto your vulva & glide it towards your clitoris
- 4. Adjust the pressure as you deem fit
- 5. Experiment with the different vibration and licking modes by pressing the buttons
- 6. Take control of your pleasure journey

Hot tip: Use with a <u>lubricant</u> to double up the experience





Your Venus will offer years of enjoyment with proper care and maintenance. Here are some tips to prolong the life span of your pleasure buddy:

- 1. Avoid using your Venus with hand creams and silicone-based lubricants as it may harm the texture of the silicone toy
- 2. Always clean your Venus after every use with soap and water, then allow it to dry. The Venus is also fully waterproof! This makes cleaning fuss-free and really simple
- 3. Never use cleansers containing alcohol, petrol or acetone. And do not boil, bake, microwave, or clean the Venus in the dishwasher
- 4. Store your Venus in your discreet Hedonist pouch to avoid the accumulation of dirt, lint and other harmful particles that may collect on the Venus' surface
- 5. Avoid leaving your Venus in direct sunlight and never expose it to extreme heat or cold

Troubleshooting



No LED light pulse when charging?

- · Battery may already be fully charged
- · Battery may be drained and will take a few minutes to respond
- Charger may not be properly connected. Please check charging connections:
 - (i) Ensure USB connection is properly plugged to the main power socket;
- (ii) Ensure that the magnetic charger is in full contact with the magnetic port of the toy

Not activated when the "Power" button is pressed?

- · Battery may be completely drained. Simply recharge your Venus
- · Your Venus interface may be locked. Hold down the power button for at least 10 seconds.

If you experience any other problems with your Venus or if you have any questions regarding its operation, please contact us via helo@hedonisttribe.com.

Warranty & Return



All products come with a 180-Day Limited Warranty and 14-Day Return when purchased directly from <u>www.hedonisttribe.com</u>.

180-DAY WARRANTY

Hedonist warrants this pleasure device for a period of 180 DAYS, from the date of original purchase, against defects due to faulty workmanship or materials. The warranty covers working parts that affect the function of the pleasure object. It does NOT cover any defects caused by fair wear and tear or damage caused by accident, misuse or neglect. Any attempt to open or take apart the pleasure object (or its accessories) will void the warranty. If you discover a defect and notify Hedonist during the warranty period, Hedonist will, at its discretion, replace the pleasure object free of charge. To submit a warranty claim on the product, please write into hello@hedonisttribe.com.

14-DAY RETURN

All products have undergone high standards of quality control in testing every single product before sale. Nonetheless, we accept all returns for a period of 14 DAYS, from the date of original purchase. To be eligible for the return, the product's hygiene seal must not be opened or tampered with and the product must be in its original packaging kit (including the pouch and black box).

For more details on the warranty & return process, please refer to our policy here: www.hedonisttribe.com/pages/returns-and-warranty.



Hedonist

Materials = Body-safe Silicone + ABS

Weight = 100g

Size = 90 * 81 * 40 MM

Charging = ~1.5 hrs at 5V, 1 - 2A

User Time = 80 mins

Interface = 2 buttons: 9 licking modes, 9 vibration modes

Waterproof = IPX7

Disclaimer

Disclaimer: Users of this product do so at their own risk. Neither Hedonist nor its retailers assume any responsibility or liability for the use of this product. Changes or Modifications not expressly approved by the manufacturer could void the user's authority to operate the equipment.

Model may be changed for improvements without notice.

© 2023 HEDONIST. ALL RIGHTS RESERVED.
CURATED BY HEDONIST SINGAPORE
MANUFACTURED FOR HEDONIST IN CHINA
WEBSITE: <u>WWW.HEDONISTTRIBE.COM</u>
SUPPORT: <u>HELLO@HEDONISTTRIBE.COM</u>