Hedonist



ZIGGY



Contents


Your Hedonist journey begins today...

- 1. Getting started
- 2. Charging Guide
- 3. <u>Using the Ziggy For Penis Owners</u>
- 4. <u>Using the Ziggy For Vulva Owners</u>
- 5. <u>Cleaning, Storage & Safety</u>
- 6. Trouble Shooting
- 7. Warranty & Return
- 8. <u>Product Specifications/Disclaimer</u>

Getting started



Congratulations on acquiring the Ziggy. Before getting more closely acquainted with it, please take a moment to look through this product guide.

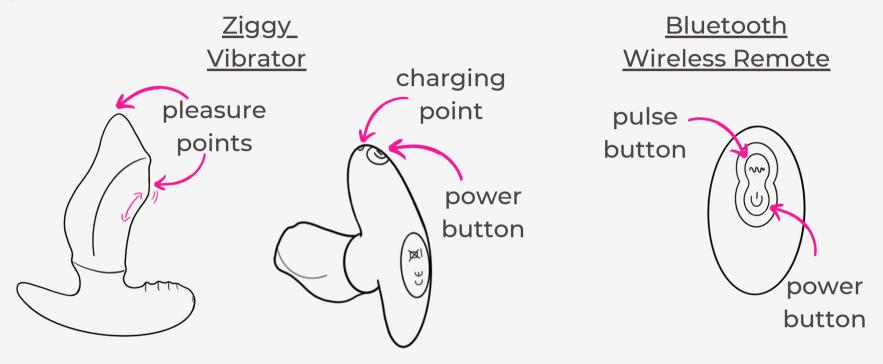

- Before first use, charge your Ziggy for 50 mins. For more details on charging, refer to <u>Charging Guide</u>
- · Once charged, hold the 'Power' button for 3 seconds to activate
- Press the 'Power' button to switch between 10 vibration modes
- Press and hold the 'Power' button to turn off your Ziggy

Remote


- Press the 'Power' button to connect the remote to your Ziggy
- · Press the 'Pulse' button to switch between 10 vibration modes
- · Press and hold the 'Power' button to turn off your remote


Charging Guide



- · Ensure that the charging port is dry before charging
- · Connect the DC plug to the DC port located at the side of your Ziggy
- Insert the USB port into a USB power adaptor of 5V or less
- The LED light on the interface of your Ziggy will blink to indicate it is still charging
- · When it is fully charged (after 50 mins), the LED will emit a steady glow
- · Please disconnect charger once fully charged
- · Avoid charging your Ziggy for a prolonged period of time

Bluetooth Wireless Remote: Place the 3v lithium button battery into the wireless remote to enjoy its features

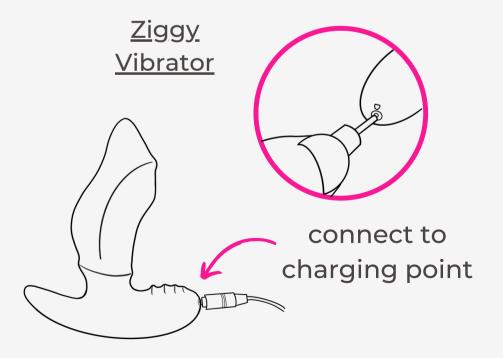

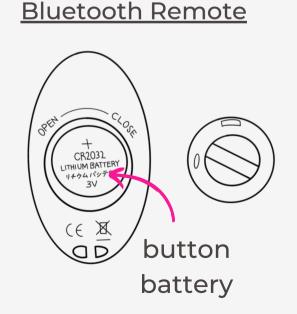

Back of Wireless

Using the Ziggy



The Ziggy vibrating stroker isn't just about making waves; it orchestrates a whole symphony of sensations, leaving your entire body throbbing with pleasure thanks to its mind-blowing stroking and vibrating features!



For Penis-Owners

- 1. Hold your Ziggy by its base. Position it in your hands comfortably
- 2. Apply a generous amount of <u>lubrication</u> on your Ziggy and inside your anus with a <u>lube launcher</u> or your fingers
- 3. Slowly insert your Ziggy into your anus until it is comfortably within you
- 4. Turn it on and adjust the pressure as you deem fit
- 5. Experiment with the 10 vibration modes by pressing the button to find your sweet spot

Using the Ziggy




For Vulva-Owners

- 1. Hold your Ziggy by its base. Position it in your hands comfortably
- 2. Start by gently touching yourself and locating your vagina opening
- 3. Slowly insert the shaft of your Ziggy into your vagina until it is comfortably within you
- 4. Turn it on and adjust the pressure as you deem fit
- 5. Experiment with the 10 different vibration modes by pressing the button to find your sweet spot


Continued...

Using the Ziggy

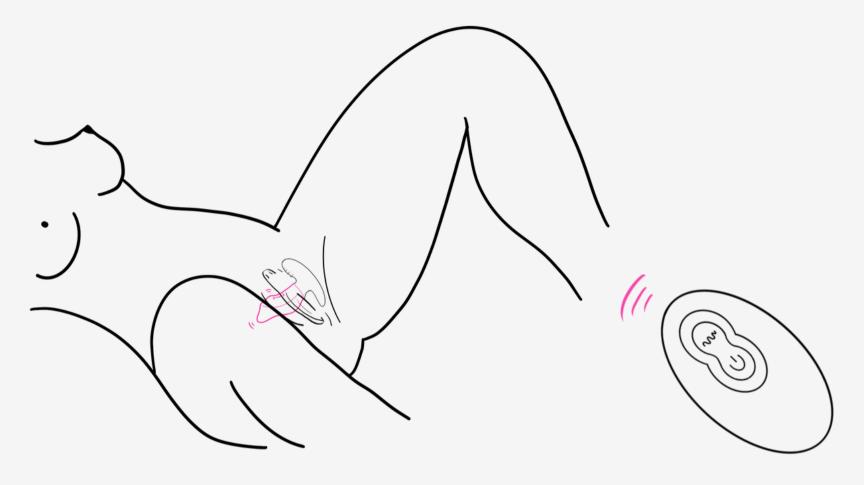

- 6. Leverage on your Ziggy's wireless remote and go hands-free or amp things up by passing the remote control to your partner for couple play
- 7. The Ziggy can be played as both an internal and external stimulator use it to explore other erogenous zones during foreplay
- 8. Have fun and take control of your pleasure journey

Hot tip: Use with a <u>lubricant</u> to enhance the experience

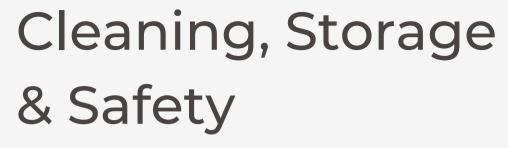



Your Ziggy will offer years of enjoyment with proper care and maintenance. Here are some tips to prolong the life span of your pleasure buddy:

- 1. Avoid using your Ziggy with hand creams and silicone-based lubricants as it may harm the material of the silicone toy
- 2. Always clean your Ziggy after every use with soap and water, then allow it to dry. Your Ziggy is also fully waterproof to make cleaning fuss-free and simple
- 3. Never use cleansers containing alcohol, petrol or acetone. And do not boil, microwave, or clean your Ziggy in the dishwasher
- 4. Store your Ziggy in your discreet Hedonist pouch to avoid dirt, lint and other harmful particles from accumulating
- 5. Avoid leaving your Ziggy in direct sunlight and never expose it to extreme heat or cold



Troubleshooting



No LED light blink when charging?

- · Battery may already be fully charged
- · Battery may be drained and will take a few minutes to respond
- Charger may not be properly connected. Please check charging connections:
 - (i) Ensure USB connection is properly plugged to the main power socket;
- (ii) Ensure the charging plug is fully inserted into Ziggy's DC port

Not activated when the "Power" button is pressed?

- · Battery may be completely drained. Simply recharge your Ziggy
- · Your Ziggy interface may be locked. Hold down the power button for at least 10 seconds.

If you experience any other problems with your Ziggy or if you have any questions regarding its operation, please contact us via hello@hedonisttribe.com.

Warranty & Return



All products come with a 180-Day Limited Warranty and 14-Day Return when purchased directly from www.hedonisttribe.com.

180-DAY WARRANTY

Hedonist warrants this pleasure device for a period of 180 DAYS, from the date of original purchase, against defects due to faulty workmanship or materials. The warranty covers working parts that affect the function of the pleasure object. It does NOT cover any defects caused by fair wear and tear or damage caused by accident, misuse or neglect. Any attempt to open or take apart the pleasure object (or its accessories) will void the warranty. If you discover a defect and notify Hedonist during the warranty period, Hedonist will, at its discretion, replace the pleasure object free of charge. To submit a warranty claim on the product, please write into hello@hedonisttribe.com.

14-DAY RETURN

All products have undergone high standards of quality control in testing every single product before sale. Nonetheless, we accept all returns for a period of 14 DAYS, from the date of original purchase. To be eligible for the return, the product's hygiene seal must not be opened or tampered with and the product must be in its original packaging kit (including the pouch and black box).

For more details on the warranty & return process, please refer to our policy here: www.hedonisttribe.com/pages/returns-and-warranty.





Materials = Body-safe Silicone + ABS

Weight = 52g (Ziggy), 13g (Remote)

Size = 9cm x 7.5cm, 7cm (Insertion Length), 3cm (Girth)

Charging = ~50 mins at 5V, 1 - 2A

User Time = 1h

Interface = 1 button, 10 vibration modes (both the Ziggy & Remote)

Waterproof = IPX6 (Not including the remote)

Distance = up to 10 metres of direct, line-of-sight distance

Disclaimer

Disclaimer: Users of this product do so at their own risk. Neither Hedonist nor its retailers assume any responsibility or liability for the use of this product. Changes or Modifications not expressly approved by the manufacturer could void the user's authority to operate the equipment.

Model may be changed for improvements without notice.

© 2024 HEDONIST. ALL RIGHTS RESERVED.
CURATED BY HEDONIST SINGAPORE
MANUFACTURED FOR HEDONIST IN CHINA
WEBSITE: <u>WWW.HEDONISTTRIBE.COM</u>
SUPPORT: <u>HELLO@HEDONISTTRIBE.COM</u>