


# INSTRUCTIONS FOR USE

CRAFTTOOL®  
PYROGRAPHY MACHINE

3792-27

# CRAFTTOOL®

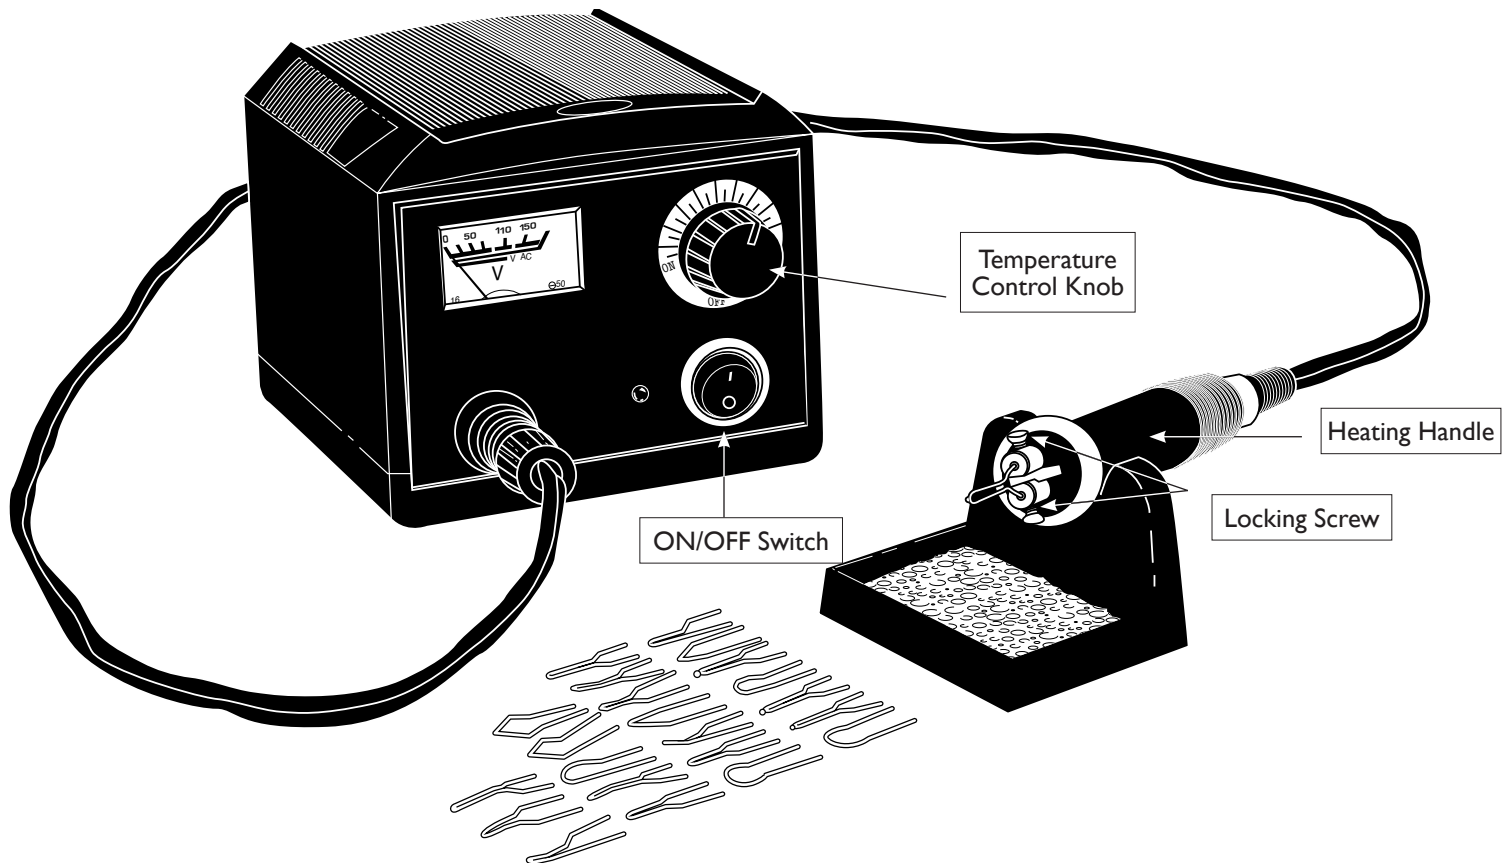

## INSTRUCTIONS FOR USE:

**WARNING: TO AVOID BURNS OR INJURY  
DO NOT TOUCH METAL PARTS WHEN  
MACHINE IS ON.**

1. Ensure that the machine is turned off and cool before assembly or changing tips.
2. Plug the heating handle into the machine itself making sure that the groove on the plug aligns with the raised guide inside of the socket.
3. Tighten the locking nut down to ensure a secure connection between the handle and the machine.
4. Loosen the screws that lock the wire tip into the handle and insert the tip of your choice.
5. Tighten the locking screws, making sure that they firmly hold the wire in place (failing to do so can result in uneven heating or increased risk of electric shock).
6. Ensure that the handle is placed in such a way that nothing touches the wire.
7. Turn the machine switch to the on position.
8. Adjust the current control knob to your desired position (practice caution at this point, the tip will heat to operating temperatures very quickly).
9. Begin to draw on your leather.
10. Turn off and unplug machine when finished or when not in use.

# PYROGRAPHY MACHINE

# CRAFTOOL®

## INCLUDES

Machine  
24 Interchangeable Tips  
Stand

## SPECIFICATIONS

Height: 5" (12.7 cm)  
Width: 5" (12.7 cm)  
Depth: 4.5" (11.4 cm)  
Weight: 2.7 lbs. (1.22. kg)

## CARE AND MAINTENANCE

Keep dry at all times and unplug when not in use.  
Do not modify machine in any way, doing so may result in malfunction or injury.  
Only use included tips with machine, other metals may cause malfunction or injury.



### WARNING

**BURN/SHOCK RISK:** Do not touch metal parts when in use.

**SHARP EDGES:** Use extreme caution.

**CHOKING HAZARD:** Small parts.

Product not intended for use by children; adult supervision is required. Always unplug machine when not in use. Do not touch sharp edges or metal parts to avoid injury. Read and understand the enclosed Instructions for Use before using this machine. Failure to follow operating instructions could result in serious injury.

## WARRANTY INFORMATION

Manufacturer warrants this product to be free from defects in workmanship and materials, under normal use and conditions, for a period of 6-months from the purchase date.

To request repair or damage support, please e-mail [tlfhelp@tandyleather.com](mailto:tlfhelp@tandyleather.com) and include the following information:

- 1) CUSTOMER ID/ORDER ID/DATE OF PURCHASE
- 2) MACHINE SERIAL #
- 3) PICTURES/VIDEO OF THE DEFECT
- 4) ADDITIONAL NOTES DESCRIBING THE ISSUE

Customer Service: 877-LEATHER  
[www.tandyleather.com](http://www.tandyleather.com)