

# INSTRUCTIONS FOR USE

CRAFTOOL®  
BURNISHING MACHINE  
3972-00

EST **tandy** 1919  
LEATHER

## INSTRUCTIONS FOR USE

Ensure that burnishing machine's speed setting is on low before turning machine on.

Turn on burnisher and set speed knob to desired speed.

Sanding should be performed at a higher speed setting than burnishing.

Always pull leather the opposite direction of spin.


Use sanding sleeves to shave and shape edges.

Use wheel to burnish edges to a slick finish.

## TO SLICK EDGES

1. Using an edge beveler, bevel corners of leather on both flesh and grain side.
2. Apply thin layer of burnishing solution to edges of leather.
3. Turn burnishing machine on and set to a slower speed.
4. Pulling leather away from direction of spin, slick edges.

*Note: Machine not compatible with current Craftool® Pro Burnishing Accessories.*

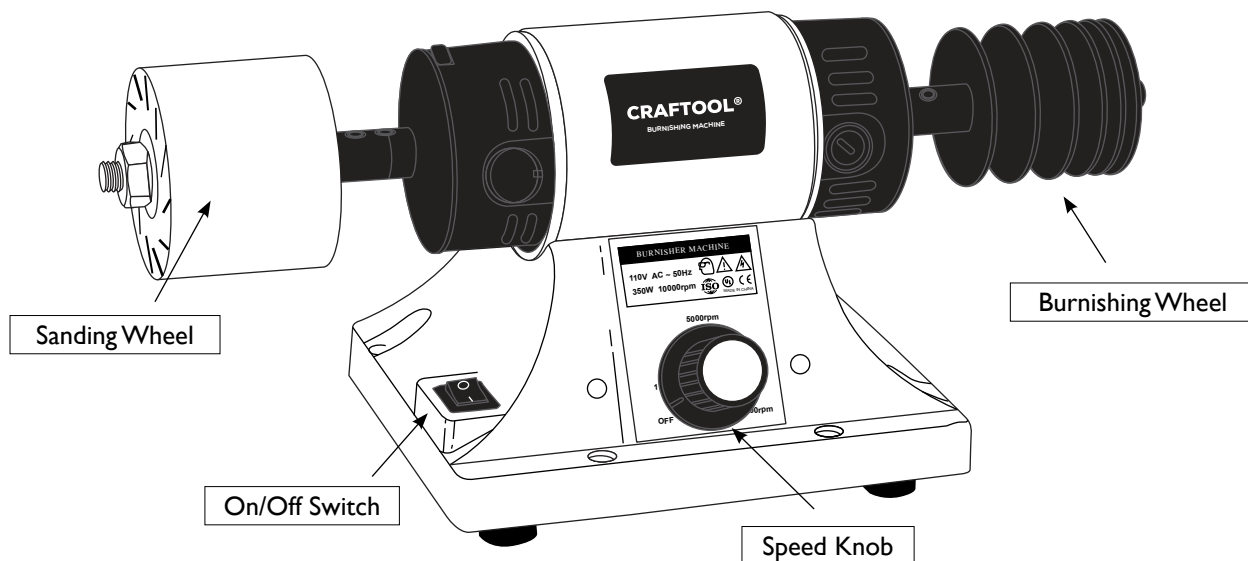

**WARNING:** Caution: Burn hazard. Keep out of the reach of children.  
Choking hazard - small parts. Not for children under 3 years.  
Moving parts can crush or cut. Keep hands clear during operation.  
This product is not intended for use by children; adult supervision required.  
Read and understand the enclosed instructions for use before using this machine.  
Failure to follow operating instructions could result in serious injury.

# CRAFTOOL® BURNISHING MACHINE



## KEY FEATURES:

Variable Speed  
On/Off Switch Separate from Speed Control  
Replaceable Brushes

## SPECIFICATIONS

Voltage: 110V  
Power: 350W  
Speed: 0-8000 RMP (adjustable)  
Size: 12.6" x 7" x 7" (32 x 18 x 18 cm)  
Weight: 7.7 lbs. (3.5 kg)

## CARE AND MAINTENANCE

Keep machine dry at all times.

## WARRANTY INFORMATION

Manufacturer warrants this product to be free from defects in workmanship and materials, under normal use and conditions, for a period of 6-months from the purchase date.

To request repair or damage support, please e-mail [tlfhelp@tandyleather.com](mailto:tlfhelp@tandyleather.com) and include the following information:

- 1) CUSTOMER ID/ORDER ID/DATE OF PURCHASE
- 2) MACHINE SERIAL #
- 3) PICTURES/VIDEO OF THE DEFECT
- 4) ADDITIONAL NOTES DESCRIBING THE ISSUE

Customer Service: 877-LEATHER  
[www.tandyleather.com](http://www.tandyleather.com)