

INSTRUCTIONS FOR USE

TANDYPRO®
MANUAL STRAP CUTTER
3977-01

tandyPro®
MACHINES




SHARP EDGES - USE EXTREME CAUTION!

WARNING: Shear hazard; moving parts can crush and cut. Choking Hazard - small parts. Not for children under 3 years. Keep hands clear during operation. This product is not intended for use by children; adult supervision required. Read and understand the enclosed Instructions for Use before using this machine. Failure to follow operating instructions could result in serious injury.


MACHINE SET UP

The TandyPro® Manual Strap Cutter is set up for use straight from the box.

OPTIONAL: For additional machine stability, remove the rubber feet from the bottom of the machine and secure the machine to your work surface with screws.

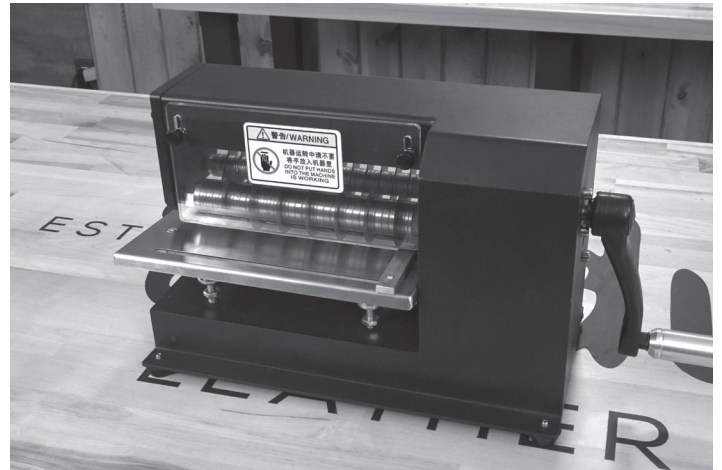


CUTTING

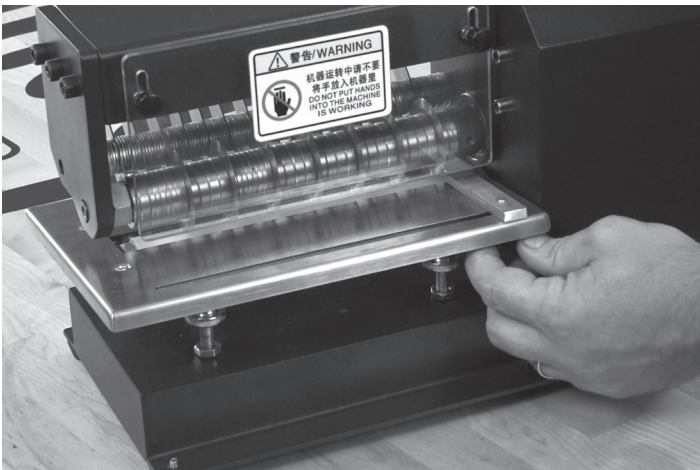


1. Loosen the knob on the material guide and move it to the desired location.



2. Insert the material under the shield until it is touching at least one blade.

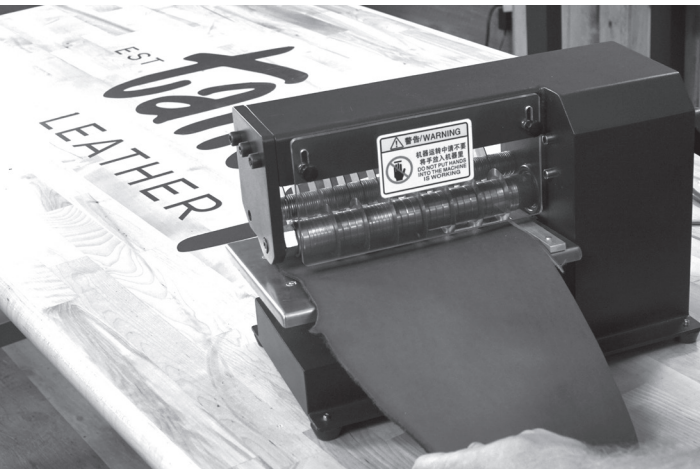


3. Turn the crank counterclockwise to cut the material into straps.

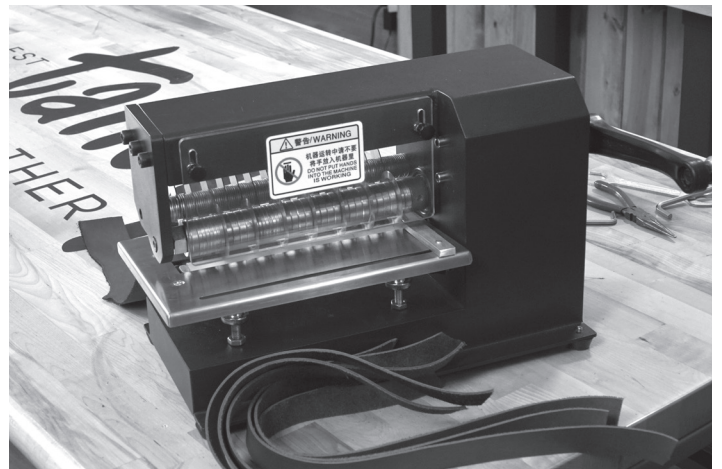


CHANGING BLADES




1. Unscrew the knobs holding the shield in place and remove it.

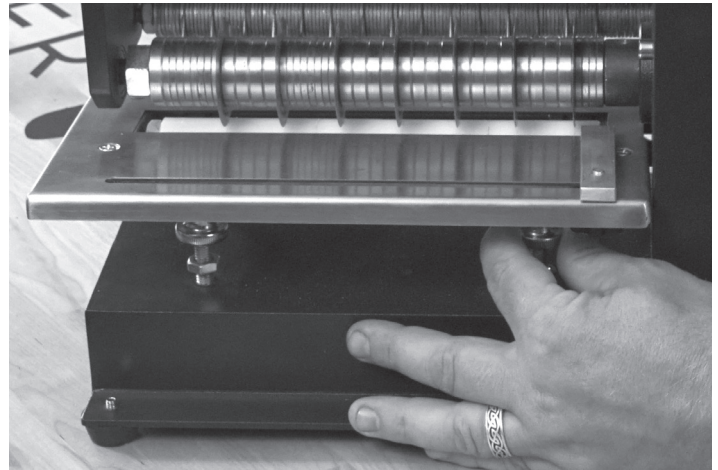

2. Turn the knobs under the material plate to lower the poly roller away from the blades.

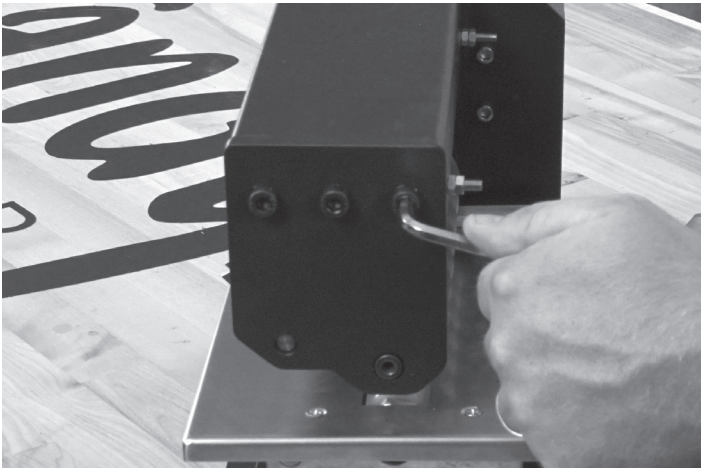


3. Remove the three bolts holding the end plate in place.

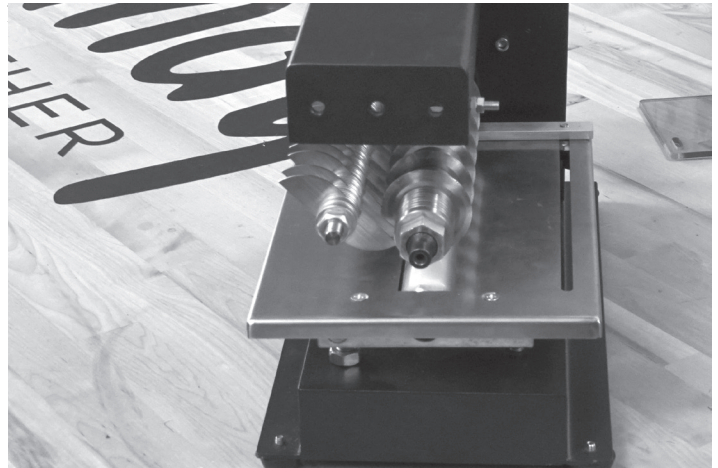

4. Remove the end plate.




5. Insert an Allen key into the hole on the blade shaft to keep it from turning.

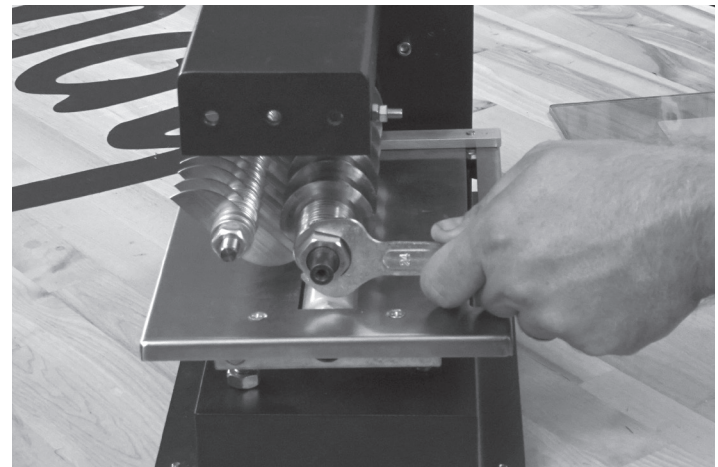


6. Using the 24mm wrench, remove the bolt at the end of the shaft (please note that the shaft is reverse threaded).

CHANGING BLADES


(continued)

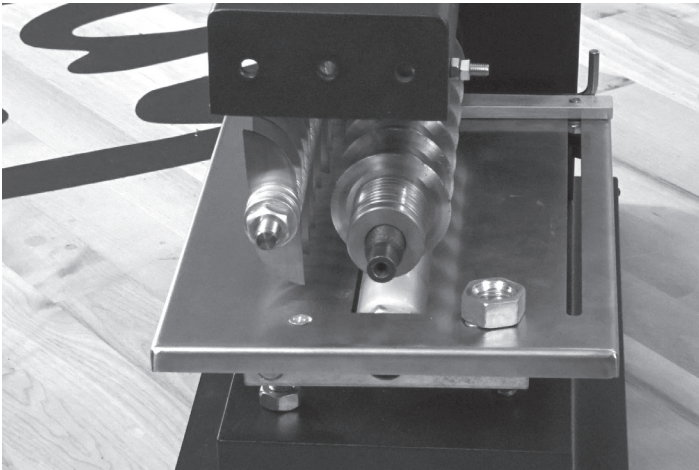

7. Twist the material guides until they are clear of the blades.

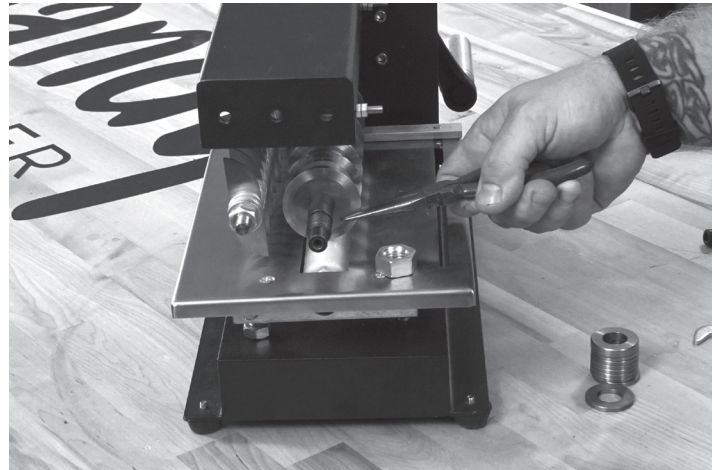

8. Remove and replace the spacers and blades being careful not to touch the blades, until the desired strap width is reached.

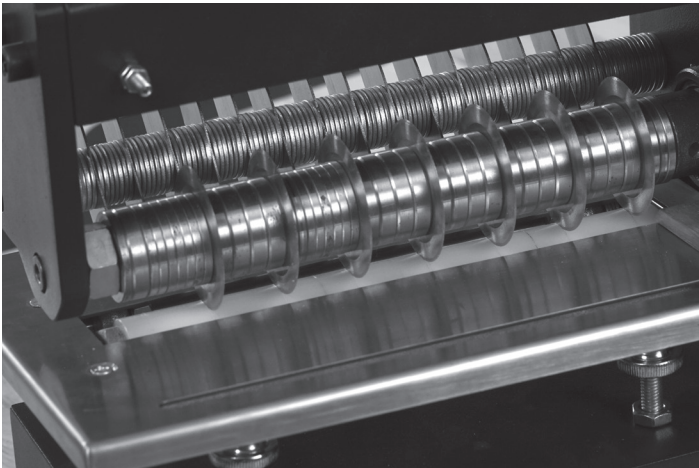

9. Reassemble in the reverse order, making sure to raise the poly roller until the blades dig into the cutting surface slightly.

SPECIFICATIONS

Length (without handle): 16" (40.6 cm)

Length (with handle): 21" (53.3 cm)

Width: 8" (20.3 cm)

Height: 8" (20.3 cm)

Weight: 29 lb. (13.1 kg)

CARE AND MAINTENANCE

Keep machine dry at all times.

WARRANTY INFORMATION

Manufacturer warrants this product to be free from defects in workmanship and materials, under normal use and conditions, for a period of 6-months from the purchase date.

To request repair or damage support, please e-mail tlfhelp@tandyleather.com and include the following information:

- 1) CUSTOMER ID/ORDER ID/DATE OF PURCHASE
- 2) MACHINE SERIAL #
- 3) PICTURES/VIDEO OF THE DEFECT
- 4) ADDITIONAL NOTES DESCRIBING THE ISSUE

Customer Service: 877-LEATHER
www.tandyleather.com