



INSTRUCTIONS FOR USE

TANDYPRO® SKIVING MACHINE
3962-00

tandyPro[®]
MACHINES

MACHINE SETUP AND USE

1. Slide the machine in the table edge and tighten the mounting screw (a) on the bottom of the machine to mount it on the table.
2. Select the roller (b) you need and insert it into the roller ball mount (c).
3. Use the Allen key to remove the blade holder (d) and install a blade (e) onto it, then reattach it to the machine.
4. Turn the lifter arm (f) to the right to lift the blade assembly (g), insert your leather, then turn the lever (f) to the left to drop the blade assembly (g).
5. Twist the height adjustment screw (h) clockwise to raise the blade assembly (g) or counterclockwise to lower it.
6. Twist the angle adjustment nut (i) to change the angle of the blade. Ensure that the blade does not contact roller (b).
7. Grip the leather firmly on both sides of the machine and pull it through the machine making sure to pull both sides down.

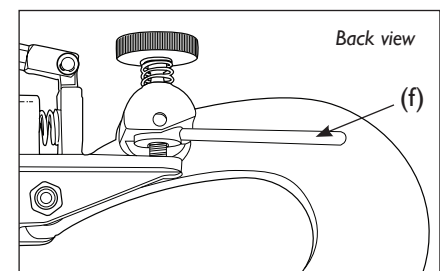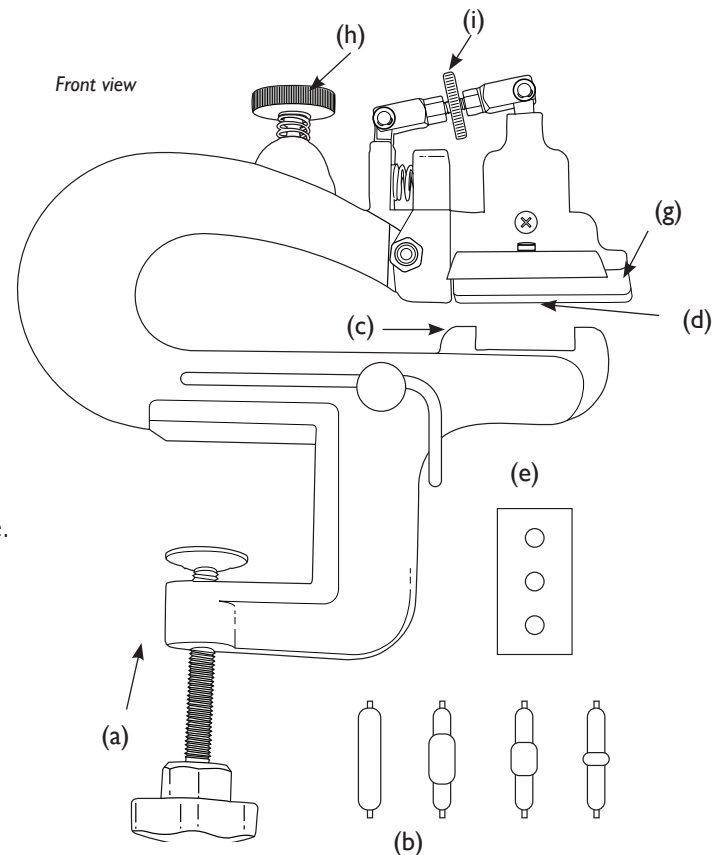

TANDY TIPS

- Replace the blade whenever skiving becomes difficult.
- For general skiving the flat roller is generally the best option.
- Ensure that the blade does not contact the roller bar.
- When possible use the guide to ensure an even skive.

MACHINE PARTS

- (a) Mounting screw
- (b) Rollers
- (c) Roller ball mount
- (d) Blade holder
- (e) Replacement blade
- (f) Lifter arm
- (g) Blade assembly
- (h) Height adjustment screw
- (i) Angle adjustment nut

TANDYPRO® SKIVING MACHINE



CARE AND MAINTAINENCE

Keep machine dry at all times.

SPECIFICATIONS

Dimensions: 8" x 7" x 2.5" (20 x 18 x 6.5 cm)

Weight: 2 lbs (1 kg)



SHARP EDGES - USE EXTREME CAUTION!



WARNING: Choking Hazard - small parts. Not for children under 3 years. Sharp edges – Use extreme caution. Moving parts can crush or cut. Keep hands clear during operation. This product is not intended for use by children; adult supervision required. Read and understand the enclosed instructions for use before using this machine. Failure to follow operating instructions could result in serious injury.

WARRANTY INFORMATION

Manufacturer warrants this product to be free from defects in workmanship and materials, under normal use and conditions, for a period of 6-months from the purchase date.

To request repair or damage support, please e-mail tlfhelp@tandyleather.com and include the following information:

- 1) CUSTOMER ID/ORDER ID/DATE OF PURCHASE
- 2) MACHINE SERIAL #
- 3) PICTURES/VIDEO OF THE DEFECT
- 4) ADDITIONAL NOTES DESCRIBING THE ISSUE

Customer Service: 877-LEATHER
www.tandyleather.com