

SOUTH WESTERLY

BRANDED WINDBREAKS
DECKCHAIRS & PARASOLS

Safe handling, erecting
and care guide for
your deckchair



Wooden Deckchair Care Guide

This guide is designed to help you care for your deckchair looking as beautiful as possible, for as long as possible. For us, these are the key things.

1. Storage:

When not in use, ideally store your chair inside, in a dry location. Folding the deckchairs flat is really easy, but can be quite tricky at first. To help, keep the deckchair in the seated position, stand behind it and you should see a Southwesterly Logo engraved into the wood at the bottom of the deckchair. Now, take this and the supporting frame and raise it so it is brought up to the top of the chair. You should now have two supporting pieces of frame at the top, and one at the bottom and your chair should be flat. When not in use store in a dry place out of direct sunlight and make sure the sling is completely dry.

2. Maintenance:

The wood of the garden deckchair is a very hardwearing, sustainably sourced Beech hard wood. We have found that adding an oil to the wood every year or two enhances the frame. If your garden deckchair has suffered from a few scratches, a light sand and then application of wood oil will give your deck chair a new lease of life. All of our deckchair slings are a 100% Cotton Canvas dyed using environmentally friendly azo free water based inks which are UV resistant with an approx. 10% fade tolerance and machine washable.

3. Cleaning:

Should you wish to remove the deckchair sling and either wash, or store in a dry place over winter, position your deckchair in the seated position. Looking at it face on, head to the left hand side. You will find screws at the top and bottom of the base of the deckchair. Simply unscrew, prise apart the frame and slip the deck chair sling off. Remember that if the chair has been in damp conditions for a while, the wood may have expanded, meaning that pulling the chair apart is more difficult. Simply keep in a dry place for a few days before dismantling.

IMPORTANT! RETAIN THESE
INSTRUCTIONS FOR FUTURE REFERENCE

Warnings

Before using this deckchair follow these instructions carefully for assembly, safety and care information.

Failure to follow the warnings could result in serious injury. Ensure that this product is fully assembled as illustrated before used.

This product should only be used on firm, level ground. Keep hands away from folding mechanisms to prevent possible entrapment or injury.

This item is intended for max use 120 kgs, do not exceed this weight.



For more information and to see our full range of products, including personalised gifts for that extra special someone, check out our websites:

www.southwesterlywindbreaks.com
deckchairshop.co.uk

SOUTH WESTERLY
BRANDED WINDBREAKS
DECKCHAIRS & PARASOLS


DECKCHAIR SHOP
BY SOUTH WESTERLY

Unit 2 St Austell Business Park
Carclaze, St Austell, Cornwall PL25 4FD UK


T: +44(0)1726 75553
E: info@southwesterlywindbreaks.com

When carrying the deckchair hold the frame together at the top and keep it close to the body


- 1 Lay the deckchair flat on the floor with the notches facing upwards

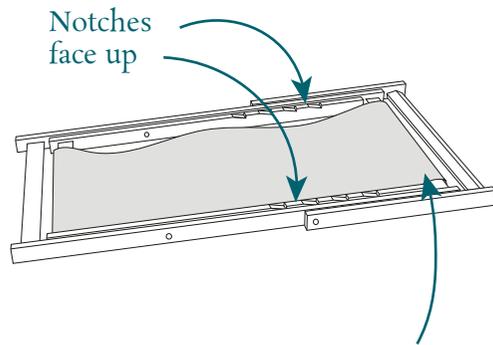


- 2 Hold the top bar with the fabric

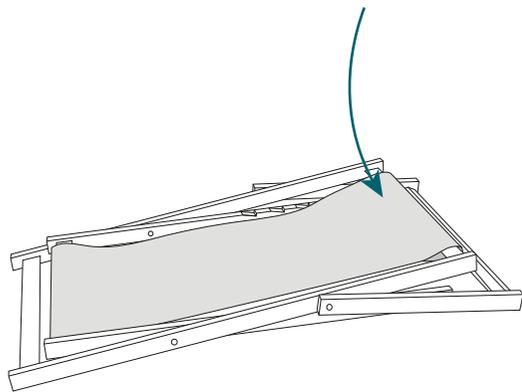


- 3 Lift up to top bar with the fabric

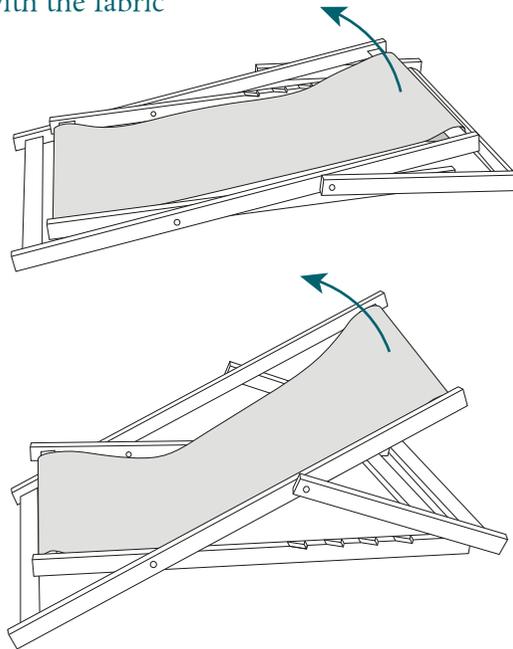

- 4 Continue to lift the bar up until it has reached the desired position


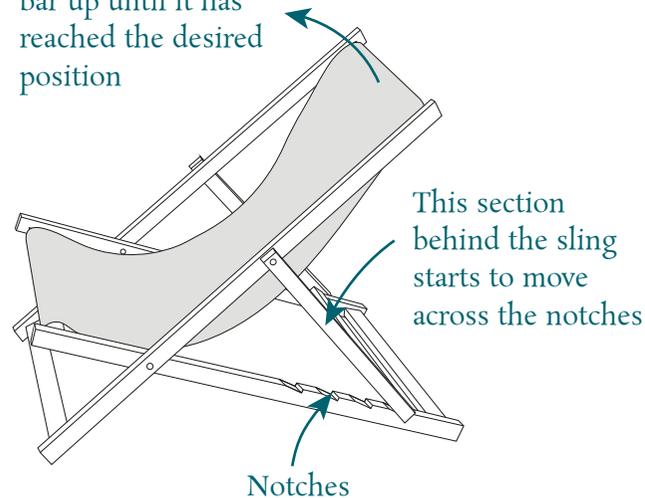


- 5 To fix in the desired position place the bar across the notches closest to your desired position

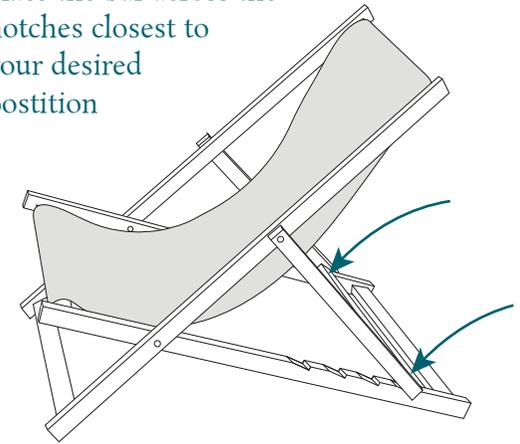

IMPORTANT

Ensure the bar is fitted correctly in the notches to stop it collapsing

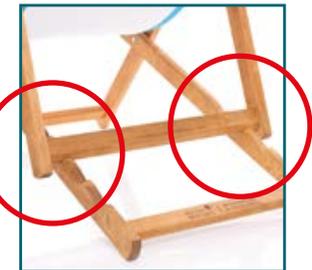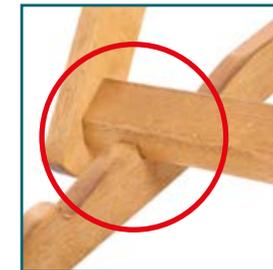

Bar fits snugly into the notches

Bar secured into the notches on both sides

To lower the chair, lift the bar from the notches and gently lower the chair to the ground