

ABOX

2.1CH SOUNDBAR SYSTEM

Model: FS22CS

USER MANUAL



封面

Contents

Important Safety Instructions

Safety Instructions

Warning

Connecting from analogue inputs

 
Remote Control - Control/Functions

Remote Control Battery Replacement

Trouble shooting

1

Important Safety Instructions



Important Safety Instructions

Caution:

To reduce the risk of electric shock, do not dismantle the product and do not expose the apparatus to rain or moisture. No user-serviceable parts inside. Refer servicing to qualified personnel only.

Important Safety Instructions

Caution:

The lightning flash within an equilateral triangle is intended to alert you to the presence of uninsulated dangerous voltage within the product's enclosure that may be of sufficient magnitude to constitute an electric shock to a person or persons.

Important! This symbol alerts you to read and observe important warnings and instructions on the unit or in this manual.

To achieve the utmost in enjoyment and performance, and in order to become familiar with its features, please read this manual carefully before attempting to operate this product. This will assure you years of trouble free performance and listening pleasure.

Important Notes

- This sound bar was especially developed for LED/LCD/Plasma TVs: It should not be used in combination with CRT TV's (Cathode Ray Tube TV's) in order to avoid image interferences.

- Safety and operating instruction manual should be retained for future reference.

- The apparatus should not be exposed to dripping or splashing or placed in a humid atmosphere such as a bathroom.

- Do not install the product in the following areas:
- Places exposed to direct sunlight or close to radiators.

2

Important Safety Instructions (Cont.)

- On top of other stereo equipment that radiate too much heat.
- Blocking ventilation or in a dusty area.
- Areas where there is constant vibration.
- Humid or moist places.
- Do not place near candles or other naked flames.

- Operate the product only as instructed in this manual.

- Before turning on the power for the first time, make sure the power adaptor is properly connected.

- For safety reasons, do not remove any covers or attempt to gain access to the inside of the product. Refer any servicing to qualified personnel.

- Do not attempt to remove any screws, or open the casing of the unit; there are no user serviceable parts inside. Refer all servicing to qualified service personnel.

Safety Instructions

before the product is operated.

the product for future reference.

should be adhered to.

source indicated by the marking adjacent to the power cord entry. If you are not sure of the type of power supply to your home, consult your product dealer or local power company.

is fully inserted into the wall outlet or extension cord receptacle to prevent blade or pin exposure.

are not likely to be walked on, kinked or pinched by items placed on or against them, paying particular attention to cords from plugs, receptacles and the point where they exit from the product.

sockets, as this can result in a risk of fire or electric shock.

3

10. Ventilation - The product must be properly ventilated. Do not place the product on a bed, sofa, or other similar surface. Do not cover the product with any items such as tablecloths, newspapers, etc.
11. Heat - The product should be situated away from heat sources such as radiators, heat registers, stoves, or other products, including amplifiers that produce heat. No naked flame sources, such as lighted candles, should be placed on the apparatus.
12. Water and moisture - To reduce the risk of fire or electric shock, do not expose the product to rain, dripping, splashing or excessive moisture such as in a sauna or bathroom. Do not use this product near water, for example, near a bathtub, washbowl, kitchen sink, laundry tub, in a wet basement or near a swimming pool (or similar).
13. Object and Liquid Entry - Never push objects of any kind into this product through openings, as they may touch dangerous voltage points or short-circuit parts that could result in a fire or electric shock. Never spill liquid of any kind on the product. Do not place any object containing liquid on top of the product.
14. Cleaning - Unplug the product from the wall outlet before cleaning. Dust in the woofer may be cleaned with a dry cloth. If you wish to use an aerosol cleaning spray, do not spray directly on the cabinet; spray onto the cloth. Be careful not to damage the drive units.
15. Attachments - Do not use attachments not recommended by the product manufacturer, as they may cause hazards.
16. Accessories - Do not place this product on an unstable cart, stand, tripod, bracket or table. The product may fall, causing serious injury to a child or adult, and serious damage to the product. Use only with a cart, stand, tripod, bracket or table recommended by the manufacturer or sold with the product. Any mounting of the product should follow the manufacturer's instructions and should use a mounting accessory recommended by the manufacturer.
17. Moving the product - A product and cart combination should be moved with care. Quick stops, excessive force and uneven surfaces may cause the product and cart combination to overturn.
18. Unused periods - The power cord of the appliance should be unplugged from the outlet during lightning storms or when the apparatus is left unused for a long period of time.
19. Servicing - Do not attempt to service this product yourself, as opening or removing covers may expose you to dangerous voltage or other hazards. Refer all servicing to qualified service personnel.
20. Please remove the power plug from the main power source or wall power source when not in use. When plugged in to a power source, the system is in standby mode, so the power is not entirely cut off.
21. Replacement parts - When replacement parts are required, ensure that the service technician has used replacement parts specified by the manufacturer or have the same characteristics as the original part. Unauthorized substitutions may result in fire, electric shock or other hazards.

4

Safety Instructions (Cont.)

the correct type and rating. The correct fuse specification for each voltage range is marked on the product.

inputs or no audio signals. If you do, the speaker may be damaged when a peak level section is suddenly played.

supply is by removing the power cord from the wall outlet or the product. The wall outlet or the power cord entry to the product must remain freely accessible at all times while the product is in use.

easily accessible.

due to electrostatic discharge, just switch off and reconnect again, or move the product to another location.

- 1) The batteries must not be exposed to excessive heat such as sunshine, fire or the like.
- 2) The batteries should be drawn to the environmental aspects of battery disposal.
- 3) Battery usage CAUTION - to prevent battery leakage which may result in body injuries, property damage, or damage to the apparatus: Install all batteries correctly, + and - as marked on the apparatus. Do not mix batteries (old and new or carbon and alkaline, etc.) Remove batteries when the unit is not used for a long time.

5

Warning

This appliance is not intended for use by persons (including children) with reduced physical sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.

time periods or a sudden high volume level.



using it, even if this only for a short while.

separate remote control system.

service agent or similarly qualified persons in order to avoid a hazard.

identical to the voltage of your local power supply.

such as newspaper, table-cloths, curtains etc. Make sure that there are at least 20 cm of space above and at least 5 cm of space on each side of the unit.

filled with liquids, such as vases, must not be placed on the apparatus.

moisture or dust.

machines or swimming pools. Ensure that you place the unit on a dry, stable surface.

electric components.

the finish. Wipe with a clean, dry or slightly damp cloth.


 
plug, never pull on the cord.

is turned on near this unit while it is also on, lines might appear on the TV screen. Neither this unit nor the TV is malfunctioning. If you see such lines, keep this unit well away from the TV set.

remain readily operable.

6


Controls and connections

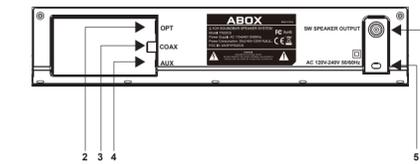

- 1.LED DISPLAY
- 2.OPTICAL
- 3.COAXIAL
- 4.AUX
- 5.SW SPEAKER OUTPUT
- 6.AC 110-240V 50/60Hz

7

Controls and connection

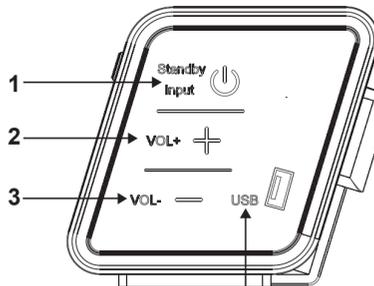

- 1.Standby
- 2.Vol +
- 3.Vol -
- 4.USB

8

Remote Control - Control/Functions




1. STANDBY: Standby mode for power on/off.
2. PAIR: Connect or disconnect to the pairing device.
3. LUM: Brightness control
4. Loop playback. (Only work under USB and mode.)
5. VOL+ Volume increase adjustment button.
6. Pre button/Prev song. (Only work under USB and BT mode.)
7. VOL- Volume Downward Adjustment Button
8. -10 : Backwards ten songs. (Only work under USB mode.)
9. TREBLE- Treble Decrease Button.
10. BASS- Bass Decrease Button.
11. MUSIC: Select the MUSIC EQ effect.
12. NEWS: Select the NEWS EQ effect.
13. MUTE mode.
14. INPUT_AUX1/AUX2/USB/BT Selection.
15. RESET Location retrieval.
16. Stop button: Press to stop. (Only work under USB mode.)
17. Next button: Next song. (Only work under USB and BT mode.)
18. +10 : Forwards ten songs. (Only work under USB mode.)
19. TREBLE+ Treble Increase Button.
20. BASS+ Bass Increase Button.
21. MOVIE: Select the MOVIE EQ effect.
22. 3D: Select the 3D EQ effect.
23. Play/Pause (Only work under USB and BT mode.)

9


Remote Control Battery Replacement

Please insert the batteries as indicated below


A. Remove the battery compartment cover

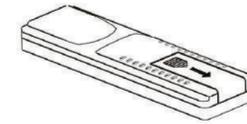

B. Insert 2 AAA batteries according to the markings inside compartment

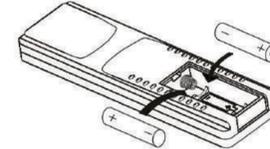

C. Close the compartment.

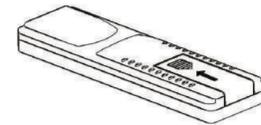

10

Trouble Shooting

No sound

No sound/low volume
(computer or personal audio player connected to the AUX jacks)

soundbar system.

No remote control operation

Care and maintenance

After using the soundbar system

Care and cleaning

All care and cleaning operations should be carried out with the unit unplugged from the main power.

The surface of the unit can be cleaned with a barely damp cloth and then dried

carefully. Never use abrasives, abrasive cloths or chemical solvents.

Loudspeaker grilles can be cleaned care fully with a soft brush.

11

封底