

LED CHARGE STATUS INDICATOR



RED - CHARGING
FLASHING RED - CONNECTED IMPROPERLY/BAD BATTERY
GREEN - FULLY CHARGED
FLASHING GREEN - 90% CHARGED
ALL LIGHTS LIT UP - RESET MEMORY

* Batteries **NOT** included

- IT IS NORMAL FOR ALL LIGHTS TO LIGHT UP WHEN THE CHARGER IS FIRST TURNED ON
- WHEN INSERTING THE BATTERY IN, THE RED LIGHT SHOULD BE ON AND WHEN FULLY CHARGED THE THE LIGHT WILL SWITCH FROM RED TO GREEN.
- WHEN LIGHTS ARE FLASHING REMOVE THE BATTERY AND REINSERT FOR A STEADY LIGHT
- IF THERE IS STILL ISSUES WITH THE LIGHTS, IT MIGHT BE THAT THE MEMORY NEEDS TO BE CLEARED (EACH SLOT HAS AN INDIVIDUAL MOTHERBOARD).
- TO DO THIS JUST TURN OFF THE CHARGER FOR 10-30 SECONDS, IF IT PERSISTS ONE CAN ALSO CLEAR THE MEMORY BY PULLING THE BATTERIES OUT OF THE CHARGER AND AGAIN TURNING THE CHARGER OFF FOR 10-30 SECONDS.
- PLEASE ALLOW THE BATTERIES TO CHARGE FOR ABOUT 2.5 TO 3 HOURS FOR A FULL CHARGE.