

Chef'sChoice® International

Griddle Plate Accessory for Chef'sChoice® Professional Indoor Electric Grills 880 and 878



Item number G880000

Griddle Plate Accessory for Chef'sChoice® Professional Indoor Electric Grills, Model 880 and 878 (Cast Aluminum with Ceramic Non-Stick Coating)

Important Notes:

- Please refer to the Important Safeguards in the Chef'sChoice Electric Grill Models 880 and 878 instruction manual that came with your grill.
- This griddle plate is designed to be used only with the Chef'sChoice® Models 880 and 878 electric grill. Do not use it with any other type of cooking equipment.
- Before use, fill the drip tray of the model 880 or 878 grill with enough clean water so that the level is between the "Min" and "Max" labels stamped in the tray. Having the tray properly filled with water ensures more even cooking temperatures and greatly improves its ease of cleaning.
- Before the first use, wash the griddle plate with warm water and soap. Remove the grill plate from the electric grill, and replace it with the griddle plate. Season the griddle by lightly rubbing cooking oil onto the surface. Next, plug in the power cord and turn on the On/Off switch. Heat on setting '8' for about 10 minutes.
- Cooking temperatures will be different with this cast aluminum griddle than with the cooking grate that originally came with your Electric Grill. It is recommended to start cooking at a setting of '8' and adjust based on experience.
- Allow the griddle plate to fully cool before removal or cleaning.
- Cleaning in the dishwasher is not recommended. High temperatures and strong detergents can shorten the life of the non-stick coating.
- Clean the griddle plate by hand washing with dishwashing soap and warm water. Do not use steel wool or harsh abrasive pads.
- Do not overheat the empty griddle plate. Turn off and unplug the grill when not in use.
- Do not use sharp utensils or cut foods with a knife on the griddle plate. Knicks or deep scratches can lessen the effectiveness of the nonstick coating.

Limited Warranty: Used with normal care, this EdgeCraft product is guaranteed against defective material and workmanship for a period of one (1) year from the date of original purchase ("Warranty Period"). We will repair or replace, at our option, any product or part that is defective in material or workmanship without charge if the product is returned to us postage prepaid with dated proof of purchase within the Warranty Period. This warranty does not apply to commercial use or any product abuse. ALL IMPLIED WARRANTIES, INCLUDING IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED TO THE WARRANTY PERIOD. EDGE-CRAFT CORPORATION SHALL NOT BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES. Some states do not allow limitations on how long an implied warranty lasts and some states do not allow exclusions or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you. This Limited Warranty gives you specific legal rights, and you may also have other rights which vary from state to state.