



AVAGAGE™

PRODUCT INSTRUCTIONS

Colored markings indicate the level of danger.
Highest danger also denoted with bracket.

Measuring angle from top of slope downward:
Stand near top of slope. Sight along length of pole to base of slope. Aim at imaginary location where your head would be, at base of slope. With AvaGage on pole, have a companion note location of indicator bubble.

Measuring angle from bottom of slope upward:
Stand near bottom of slope. Sight along length of pole to top of slope. Aim at imaginary location where your head would be, at top of slope. With AvaGage on pole, have a companion note location of indicator bubble.

Measuring angle of distant slope:

LEFT SIDE slope: Face distant slope. Position pole and gauge so they follow slope's incline. Note location of indicator bubble.

RIGHT SIDE slope: Face distant slope. Position pole and gauge so they follow slope's incline. Have a companion face you and note location of indicator bubble.

Measuring a section of trail immediately underfoot:
To measure a short section of hiking trail or ski trail, lay pole on ground, pointing in direction of travel. Note location of indicator bubble.

Includes
1 mm, 2 mm and 3 mm grids
on back, for examining
snow crystal size & shape

Register your warranty by
scanning the QR code:

Or visit:
suncompany.net/warranty



✉ support@suncompany.net

📷 [@suncompany_](https://www.instagram.com/suncompany_)

📘 [facebook.com/SunCompanyInc](https://www.facebook.com/SunCompanyInc)

FAMILY-OWNED AND OPERATED
100% SATISFACTION GUARANTEED

SUN COMPANY, INC.
COLORADO, USA
WWW.SUNCOMPANY.NET