




# OUTSIDER™

## PRODUCT INSTRUCTIONS

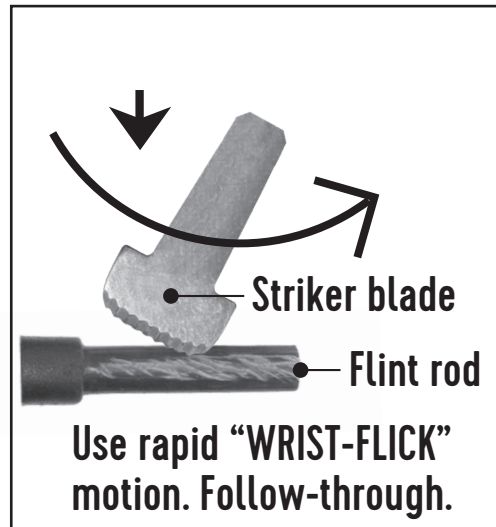

### Instructions:

1. Push 2 tabs at base of housing, to release Flint rod and Striker blade.
2. To create sparks: Important: First scrape black coating off Flint rod with Striker blade, to expose raw alloy below. Hold part with Ferrocerium Flint rod in one hand. Grip Striker blade firmly in other hand (with teeth UP; see above). Position blade-end on base of Flint rod. **Bear down hard.** Use quick, very firm wrist-flicking motions to produce sparks. For best effect, fully follow-through with wrist motion—continuing to bear down hard on rod.
3. For best compass accuracy, remove steel Striker blade from housing (away from compass) before taking a bearing.

Register your warranty by  
scanning the QR code:

Or visit:  
[suncompany.net/warranty](http://suncompany.net/warranty)



✉ [support@suncompany.net](mailto:support@suncompany.net)

🌐 [@suncompany\\_](https://www.instagram.com/suncompany_)

📘 [facebook.com/SunCompanyInc](https://www.facebook.com/SunCompanyInc)

FAMILY-OWNED AND OPERATED  
100% SATISFACTION GUARANTEED

SUN COMPANY, INC.  
COLORADO, USA  
[WWW.SUNCOMPANY.NET](http://WWW.SUNCOMPANY.NET)