- 1. Open the Sublisplash Monitor and click the settings tab on the left.
- 2. Select the printer you would like to configure within the Sublisplash Monitor.
- 3. Click Import

			9	Sublispl Monitor	ash® ′	English	~ - 🗆
Settings Defining printer setting	gs						
Printers					3		^
Configured devices						List of available devices in your system	
Caption	System Na	ime		Enabled	Import	System Name	^
						Zebra GK420d	
					2		
						Sublisplash Driver	
						Snagit 2019	
				~		Send To OneNote 2016	~
Formats							
Formats _{Name}	Width Le	ingth	Enabled	^			
Formats Name Letter	Width Le	ength 279 mm	Enabled	^	Add		
Formats Name Letter Tabloid	Width Le 216 mm 279 mm	ength 279 mm 432 mm	Enabled	^	Add		
Formats Name Letter Tabloid Ledger	Width La 216 mm 279 mm 432 mm	279 mm 432 mm 279 mm	Enabled	Â	Add		
Formats Name Letter Tabloid Ledger Legal	Width La 216 mm 279 mm 432 mm 216 mm	279 mm 432 mm 279 mm 356 mm	Enabled		Add		

4. Click the ... box to begin configuration. In the caption box, you can amend the text if needed.

Caption			
Device option			
Set configuration for			
Device driver settings			
		4	
Dedicated ICC Color profile		-	
Mirror option default			
	Cancel	irm	

5. Open the 'Main' tab.

This is where you will set your paper size, orientation, type and quality. We are selecting `A4' `Portrait' `Epson Matte' and High as shown below.

inting Presets				
Add/Remove Presets	Document Size	A4 210 x 297 mm 🗸		
Document - Fast Document - Standard Qualit Document - High Quality	y Orientation	● Portrait ◯ Landscape		
Document - 2-Up	Paper Type	Epson Matte 🗸		
Document - Fast Grayscale	Quality	High		
	Color	Color		
	2-Sided Printing	Off ~		
		Settings		
	G Multi-Page	Off v Page Order		
	Copies 1	Collate		
	Quiet Mode	Off ~		
Show Settings	Print Preview			
Pecet Defaults Ink I	Job Arrange	r Lite		

You can select 'Standard' quality to give a faster print speed. This option will work on many substrates. You can also create a 'Standard' setting under the presets to give both options.

 Open the 'More Options' tab. Make sure 'High Speed' is <u>unchecked</u>. Check the 'Mirror Image' box.

Printing Presets	Document Size	A4 210 x 297 mm
Add/Remove Presets	Output Paper	Same as Document Size
 Document - Fast Document - Standard Quality Document - High Quality Document - 2-Up 	Reduce/Enlarge	e Document O Zoom to
Document - Fast Grayscale	Color Correction	Custom Advanced Image Options
	Watermark Fe	atures
	Additional Settings	
Show Settings		

Click on 'Custom' then 'Advanced'. Set the color correction to 'No Color Adjustment'. Click OK



7. Click on 'Add/Remove Presets...'

rinting Presets	Document Size	A4 210 x 297 mm	
Add/Remove Presets	Output Paper	Same as Document Size	~
Document - Fast	Reduce/Enlarg	e Document	•
Document - High Quality	 Fit to Page Center 	O Zoom to	₽ %
Document - Fast Grayscale Document - Grayscale	Color Correction	Custom Adva	nced
		Image	Options
	Watermark Fe	atures	
	Additional Settings	2	
Show Settings]		
Reset Defaults			

 Enter a relevant one click preset name that describes the way you have setup your driver. In this case we have used 'Sublisplash A4 Portrait'. You can also enter comments if required. Once complete, click 'Save' then 'Close'. Click OK.

Document - Fast			Sublisplash A4 Portrait		
Document - Standar Document - High Qui Document - High Qui Document - 2-Up	d Quality ality nyscale Ile	•	Icon		
Show Hide	Delete Reset			Save	
Show Hide	Delete Reset		Registered Settings	Save	
Show Hide Items Paper Source	Delete Reset Current Settings Rear Paper Feed		Registered Settings	Save	
Show Hide Items Paper Source Document Size	Delete Reset Current Settings Rear Paper Feed A4 210 x 297 mm		Registered Settings	Save	
Show Hide Items Paper Source Document Size Orientation	Current Settings Rear Paper Feed A4 210 x 297 mm Portrait		Registered Settings	Save	
Show Hide Items Paper Source Document Size Orientation Paper Type	Delete Reset Current Settings Rear Paper Feed A4 210 x 297 mm Portrait Epson Matte		Registered Settings - - -	Save	
Show Hide Items Paper Source Document Size Orientation Paper Type Quality	Delete Reset Current Settings Rear Paper Feed A4 210 x 297 mm Portrait Epson Matte High		Registered Settings	Save	
Show Hide Items Paper Source Document Size Orientation Paper Type Quality Quality Detail	Delete Reset Current Settings Rear Paper Feed A4 210 x 297 mm Portrait Epson Matte High		Registered Settings	Save	

9. Open the 'Maintenance' Tab. Click on 'Extended Settings'.

ain More Options Maintenance	
Nozzle Check	EPSON Status Monitor 3
Head Cleaning	Monitoring Preferences
Print Head Alignment	
Power Ink Flushing	Extended Settings
	Print Queue
Job Arranger Lite	Printer and Option Information
anguage English (English)	✓ Software Update
/ersion 2.41.00	Technical Support
	OK Cancel Apply Help

You can move the 'Print Density' slider to a plus or minus value.

In the example below we show a -10% density. This is useful if you are suffering with too much ink saturation on certain papers or film.

Only change this if you are experiencing ink saturation.

Offset					Settings			
Front Top	-300	•	300	(0. 1mm)	Enable EPSC	ON Status Monitor	3	
Front Left		•	. 0	(0.1mm)				
	-300		300		Separator P	age		
Back Top			0	(0.1mm)	Remove whi	te borders		
	-300		300		Always Spor	ol RAW Datatype		
Back Left		•	0	(0.1mm)	Page Rende	ring Mode		
	-300		300		Print as Bitm	ap age		
Print Density					Change Standa	rd Resolution	Off	~
Print Density	-50	U	20	-10 (%)	Refine scree Allow Applic Always Use Output 1 pa Output docu	ening pattern ations to Perform the Driver's Pape ge documents fac uments for filing	ICM Color Mati r Source Settin cedown in 2-Sid	ching g led mode
					Barcode mo	de		

10. Our device driver settings will now show as <configured>

Click the ... box next to dedicated ICC color profile to choose the correct profile.

S		×
Printer settings		
Caption		
Device option		
Set configuration for		
Device driver settings		
<configured></configured>		
Dedicated ICC Color profile		
Mirror option default		
	Cancel Confirm	
_		

11. Please follow our instructions regarding installation of the color profile.

If you have followed those instructions, the default folder location will be:

C:\Windows\System32\spool\drivers\color

Select the correct profile for your printer, and click open.

You can switch between .icc and .icm file types in the bottom right to view all profile options.

	Date modified	Type	Size	^	
Didektrine	11/03/2013 00:34	ice i rome	E 150		
CIERGB	17/03/2015 00:34	ICC Profile	1 KB		
CoatedFOGRA27	17/03/2015 00:34	ICC Profile	545 KB		
CoatedFOGRA39	17/03/2015 00:34	ICC Profile	640 KB		
CoatedGRACoL2006	17/03/2015 00:34	ICC Profile	640 KB		
ColorMatchRGB	17/03/2015 00:34	ICC Profile	1 KB		
🔺 Epson IJ Printer 07	15/01/2007 00:52	ICC Profile	71 KB		
🔺 et2500_r	20/01/2015 04:10	ICC Profile	196 KB		
🔺 EuroscaleCoated	17/03/2015 00:34	ICC Profile	545 KB		
EuroscaleUncoated	17/03/2015 00:34	ICC Profile	545 KB		
JapanColor2001Coated	17/03/2015 00:34	ICC Profile	545 KB		
🔺 JapanColor2001Uncoated	17/03/2015 00:34	ICC Profile	545 KB		
🔺 JapanColor2002Newspaper	17/03/2015 00:34	ICC Profile	545 KB		No preview available.
JapanColor2003WebCoated	17/03/2015 00:34	ICC Profile	640 KB		
🔺 JapanWebCoated	17/03/2015 00:34	ICC Profile	545 KB		
A PAL_SECAM	17/03/2015 00:34	ICC Profile	1 KB		
SMPTE-C	17/03/2015 00:34	ICC Profile	1 KB		
Sublisplash_Epson_ET_2700_V1.1	12/02/2020 13:58	ICC Profile	912 KB		
Sublisplash_SG400_11.04.17	02/10/2019 15:44	ICC Profile	1,758 KB		
Sublisplash_SG800_11.04.17	02/10/2019 15:44	ICC Profile	1,758 KB		
Sublisplash_SG3110DN_11_04_17 (3)	02/10/2019 15:44	ICC Profile	1,758 KB		
Sublisplash_SG7100DN_ MAC_09-17	14/03/2019 11:38	ICC Profile	3,739 KB		
Sublisplash_SG7100DN_11.04.17	02/10/2019 15:44	ICC Profile	1,758 KB		
	17/03/2015 00:34	ICC Profile	639 KB		
UncoatedFOGRA29					

12. You have successfully completed all options and can click confirm.

Printer settings
Caption
EPSON ET-2700 Series
Device option
Set configuration for EPSON ET-2700 Series
Device driver settings
<configured></configured>
Dedicated ICC Color profile
Sublisplash_Epson_ET_2700_V1.1.icc
Mirror option default
Cancel Confirm