


Sublisplash®

Colour in Motion


Setting up the Epson ET-2700 and ET-2750 printer driver for Sublisplash ink.

Use this printer only with Sublisplash ink, do not use original ink!

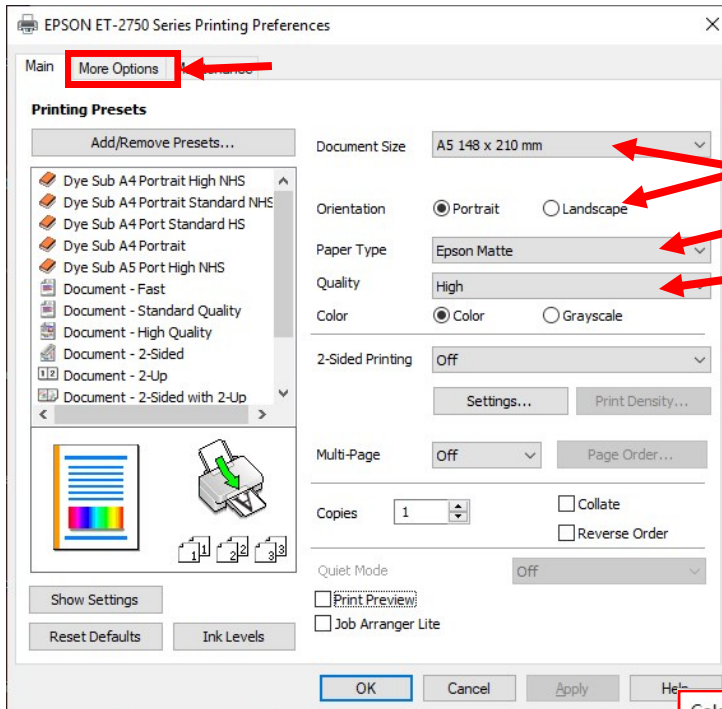

1. Go to your printers/devices and right click on the Epson ET-2700 or ET-2750 and choose 'Printing Preferences'.
2. Choose your document size and orientation.
3. Choose 'Epson Matte' Paper Type.
4. Choose 'High' Quality
5. Click on the 'More Options' Tab

The setting shown is for printing onto A5 paper/film at the highest quality. You can choose 'Standard' quality for option 4 to give a faster print speed. This option will work on many substrates and you can create a 'Standard' setting under the presets to choose from.

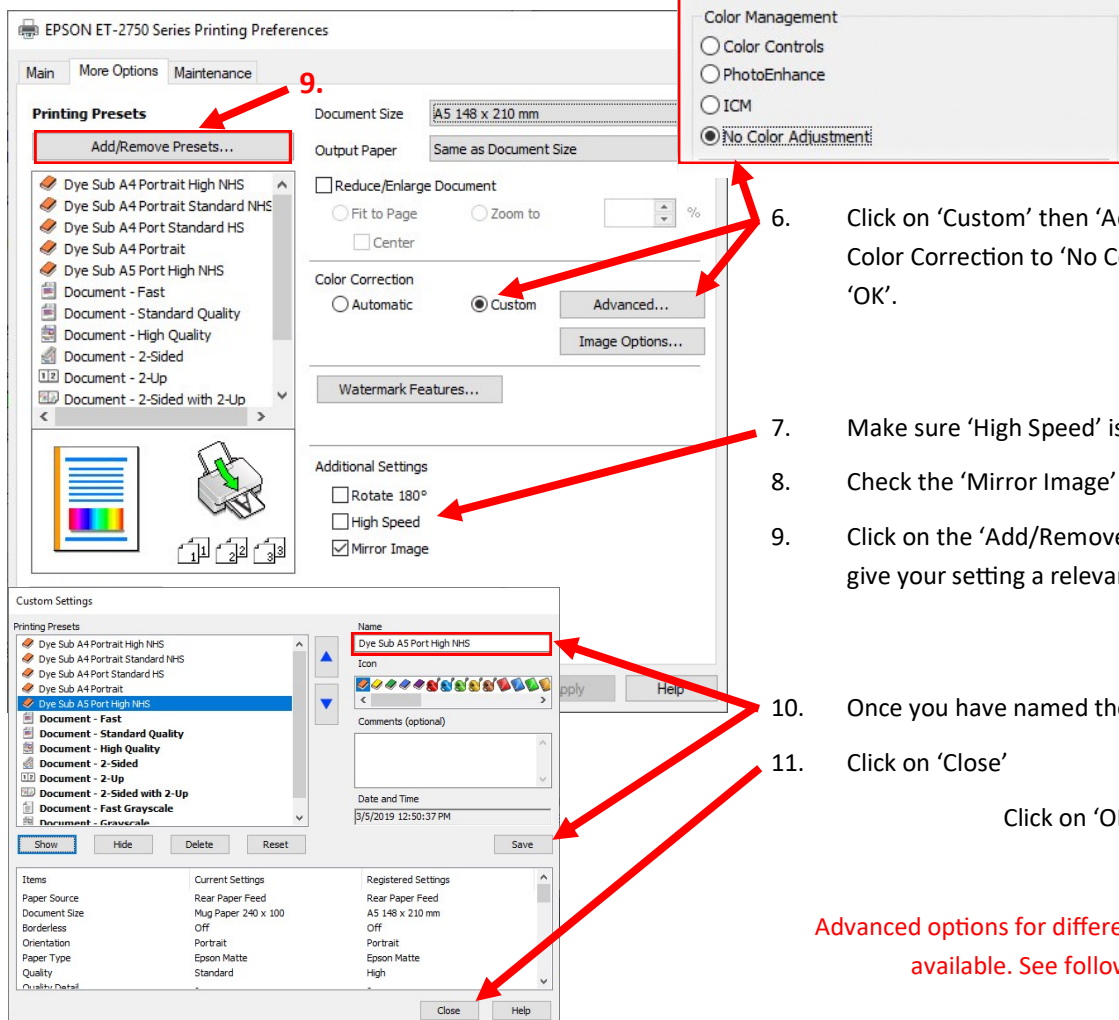


6. Click on 'Custom' then 'Advanced'. Then set the Color Correction to 'No Color Adjustment'. Click 'OK'.
7. Make sure 'High Speed' is unchecked.
8. Check the 'Mirror Image' box.
9. Click on the 'Add/Remove Presets...' button to give your setting a relevant name.
10. Once you have named the setting click 'Save'.
11. Click on 'Close'

Click on 'OK'

Advanced options for different media types are available. See following page.

Sublisplash®

Colour in Motion

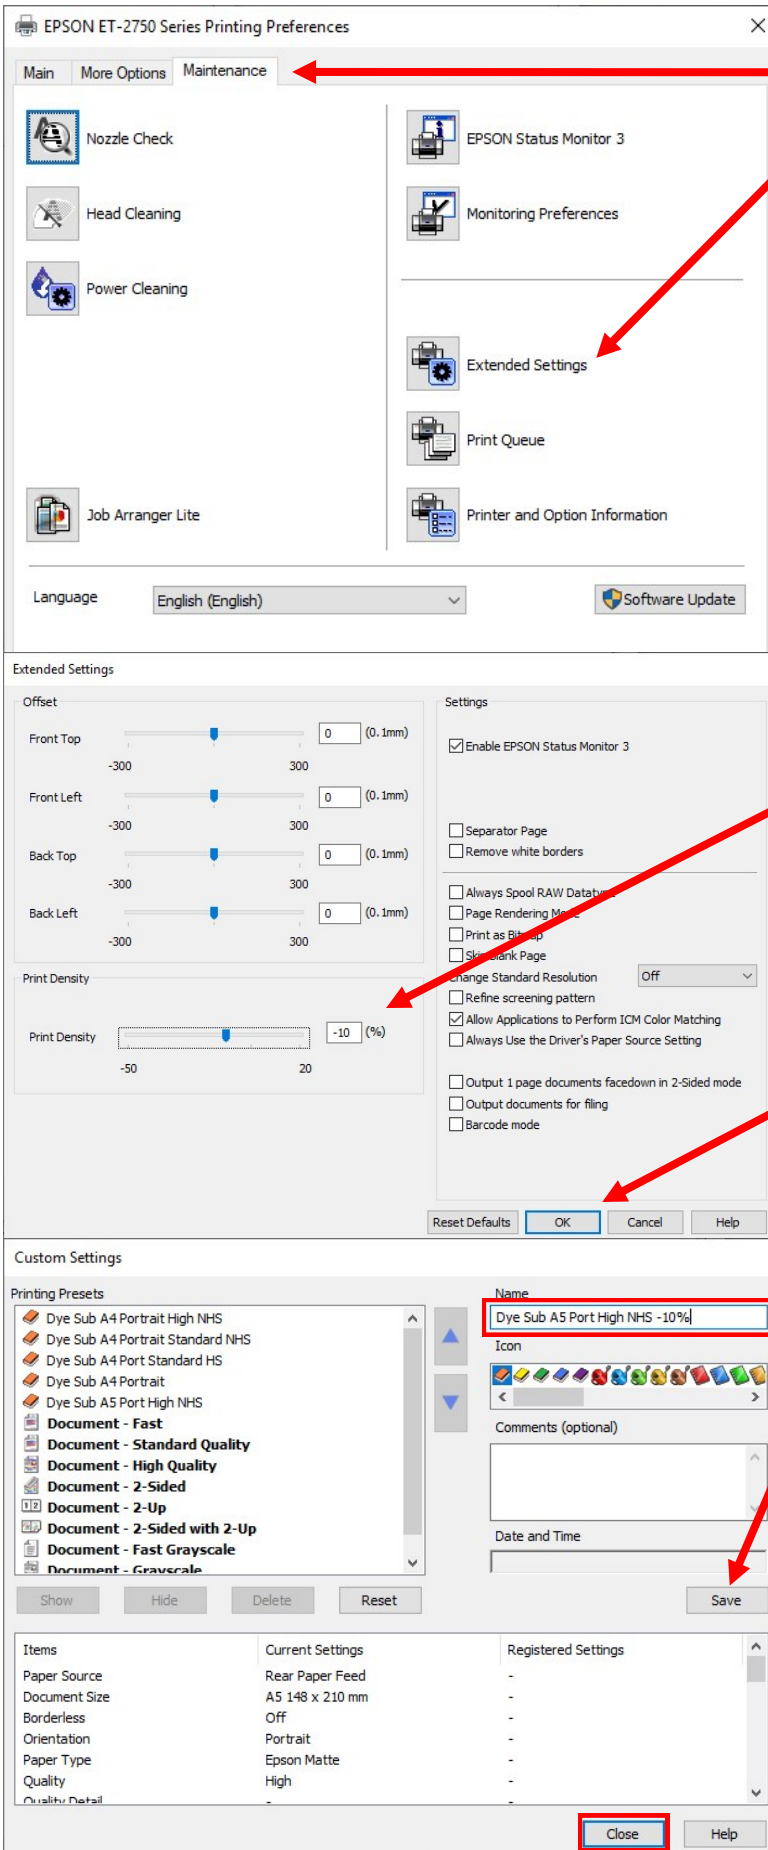

1. Click on the 'Maintenance' tab.

2. Click on 'Extended Settings'.

3. You can move the 'Print Density' slider to a plus or minus value. In this case we show a -10% density which is useful if you are suffering with too much ink saturation with certain papers or film.

4. Click 'OK'

5. You can now enter a name for the new setting and click 'Save' then 'Close'

This option is useful if some images are oversaturated or you are printing large areas of dark solid colours which are causing issues with paper cockling.