

Sublisplash®

Colour in Motion

Initial Setup Epson WF-C5210 with Sublisplash EPN+ inks Sublisplash Driver Package

Note: Please check the cartridge level **regularly** and refill ink if necessary. We do not assume any liability for consequential damages due to non-observance!

1. Initial ink fill / Initialization

Unpack the printer and remove all shipping protection elements (blue).

IMPORTANT: Remove the entire ink cartridge container, including the orange shipping protection elements (and tape!), and store them in a safe place. These items will be necessary should you need to transport or ship the printer at a later date!



The next step is to fill the empty cartridges supplied. When filling the cartridges, it is essential to fill the **correct** ink colour in the **corresponding** colour tank! The empty cartridges are marked with a sticker indicating the colour to be used. The colour abbreviations are as follows:

K = (Black), C = (Cyan), M = (Magenta), Y = (Yellow)


www.sublisplash.de

*Alle Warenzeichen, Produktnamen und Logos sind Eigentum der jeweiligen Besitzer.
Alle hier nicht ausdrücklich gewährten Rechte bleiben vorbehalten.

Sublisplash®

Colour in Motion

To fill the individual cartridges, remove the **filler plug** and the **aeration plug**. Fill the cartridge with 125ml Sublisplash EPN+ ink of the correct colour. After filling the cartridge, close the fill hole with the filler plug.

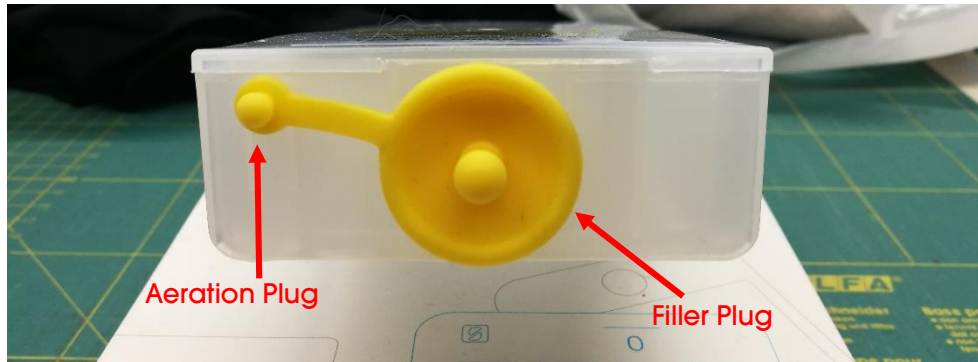

In order to allow the air to escape and the ink to 'calm down', hold the cartridge upright after filling (**aeration plug still removed!**) and shake it gently about **10 times**. Leave the cartridge upright for about **5 minutes**.



This image shows the filling process using the colour **YELLOW**. Please fill the remaining cartridges accordingly.

www.sublisplash.de

**Alle Warenzeichen, Produktnamen und Logos sind Eigentum der jeweiligen Besitzer.
Alle hier nicht ausdrücklich gewährten Rechte bleiben vorbehalten.*

Sublisplash®

Colour in Motion

The filled cartridges can now be inserted into the corresponding slots of the printer and locked by applying light pressure. If you want to take out the cartridges for refilling, a light pressure is sufficient and the cartridge is unlocked by the built-in spring, allowing it to be removed.

Please make sure that the correct ink cartridge is in the respective slot and that the aeration plugs are removed!



After checking once again that all transport locks have been removed, the printer can be connected to the power supply and switched on.

www.sublisplash.de

**Alle Warenzeichen, Produktnamen und Logos sind Eigentum der jeweiligen Besitzer.
Alle hier nicht ausdrücklich gewährten Rechte bleiben vorbehalten.*

Sublisplash®

Colour in Motion

2. Installing Printer Software

Download the appropriate driver for your operating system (**Win10 32bit** or **Win10 64bit**) directly from the Epson Homepage and save it.


Link to driver version **Win10 32bit**:

<https://download.epson-europe.com/pub/download/6291/epson629167eu.exe>

Link to driver version **Win10 64bit**:

<https://download.epson-europe.com/pub/download/6291/epson629168eu.exe>

Start the setup by double clicking on the EXE file. After a short time the following window appears:

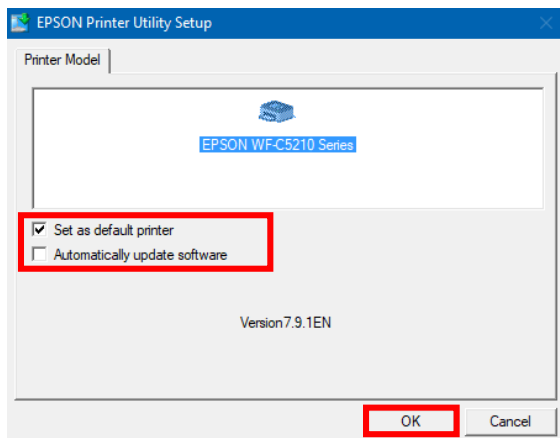

Select the appropriate printer by mouse click.

If the printer is to be set up as default printer, leave the check mark at "**Set as default printer**". Otherwise remove the check mark.

The "**Automatically update software**" check mark **must be REMOVED!**

Click on "**OK**" to continue with the setup.

Follow the instructions. Once the setup is complete we recommend restarting your computer.


www.sublisplash.de

**Alle Warenzeichen, Produktnamen und Logos sind Eigentum der jeweiligen Besitzer.
Alle hier nicht ausdrücklich gewährten Rechte bleiben vorbehalten.*

Subsplash®


Colour in Motion

The Epson software automatically searches for updates within a specified period. As this can lead to problems, we turn it off as follows:

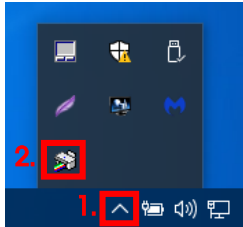


1. Click on the "UP Arrow" in the status bar.

2. Right click on the "Status Monitor" icon that corresponds to your printer.

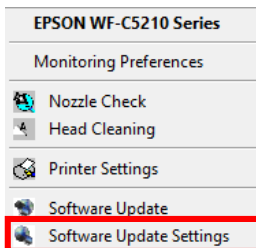

Right click on "Software Update Settings".

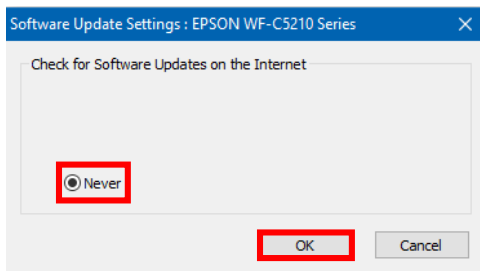

Click on the option "Never".

Confirm by clicking on "OK".

www.subsplash.de

**Alle Warenzeichen, Produktnamen und Logos sind Eigentum der jeweiligen Besitzer.
Alle hier nicht ausdrücklich gewährten Rechte bleiben vorbehalten.*

Sublisplash®

Colour in Motion


3. Install WIC Reset Utility and start up the printer

Download the WIC Reset Utility directly from the homepage and save it on your computer.

Link to the WIC Reset Utility:

<http://www.2manuals.com/WIC/wicreset.exe>

Start the setup by double clicking on the EXE file.

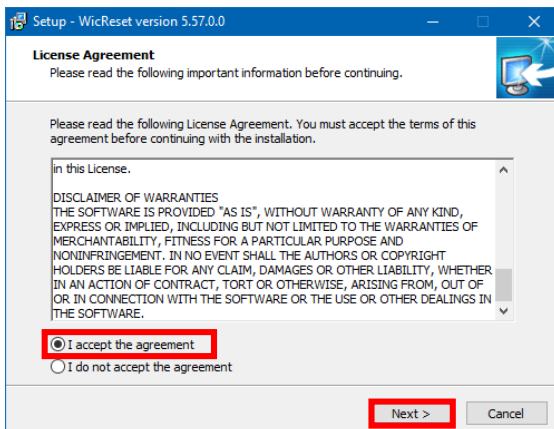

Click on the option "I accept the agreement".

Click on "Next >" to close the window.

Follow the setup instructions until you come to this window:



Make sure that "Launch WICReset" is checked.

Click on "Finish" to end setup and start the WIC Reset Utility.

The WIC Reset Utility will check if a newer version is available. If so, the new version will be installed and the WIC Reset Utility will be closed and restarted.


www.sublisplash.de

**Alle Warenzeichen, Produktnamen und Logos sind Eigentum der jeweiligen Besitzer.
Alle hier nicht ausdrücklich gewährten Rechte bleiben vorbehalten.*


Sublisplash®

Colour in Motion

The following window appears right after starting WIC Reset Utility:

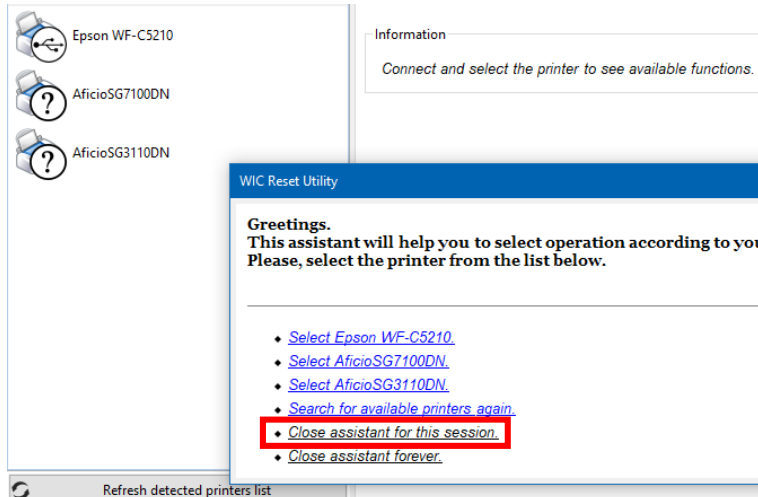

Click on "Close assistant for this session."

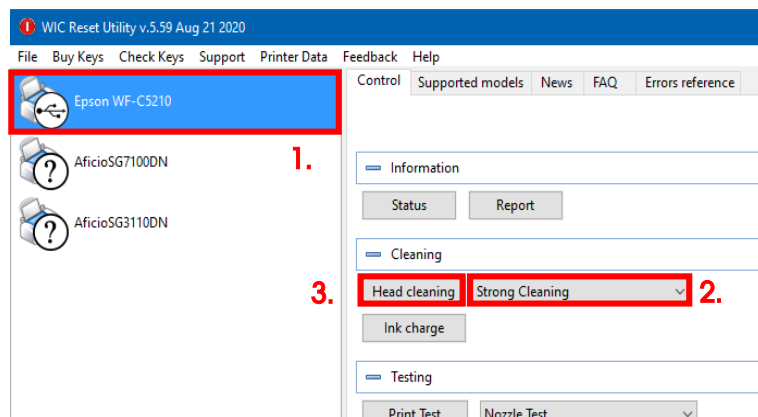

1. Click on "Epson WF-C5210".

2. Select "Strong Cleaning" in the options.

3. Click on "Head cleaning". You have to repeat this step a total of **3 times!** Wait until each run is complete before starting the next one.

After completion of the third pass we now check whether the printer's ink system has been completely filled and is therefore ready for use.


www.sublisplash.de

**Alle Warenzeichen, Produktnamen und Logos sind Eigentum der jeweiligen Besitzer.
Alle hier nicht ausdrücklich gewährten Rechte bleiben vorbehalten.*

Sublisplash®


Colour in Motion

Place a few sheets of **A4 paper** in the paper tray (normal copy paper is sufficient).

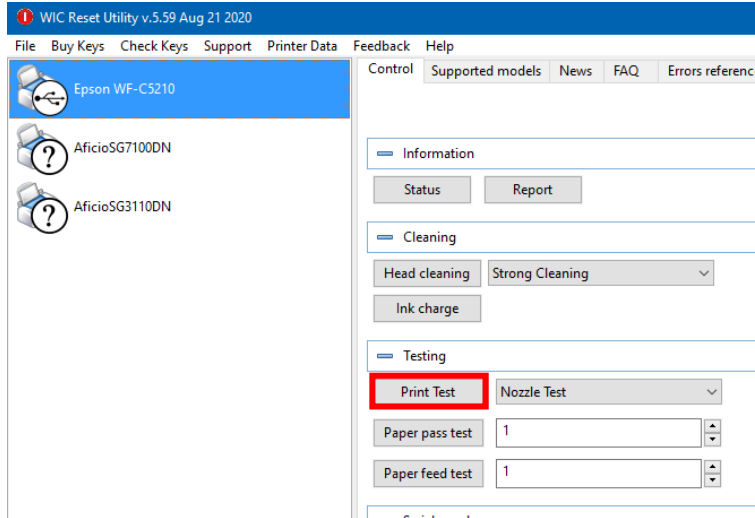

Click on "Print Test" to print a nozzle test.

If the nozzle test is not complete, you must now clean the print head.

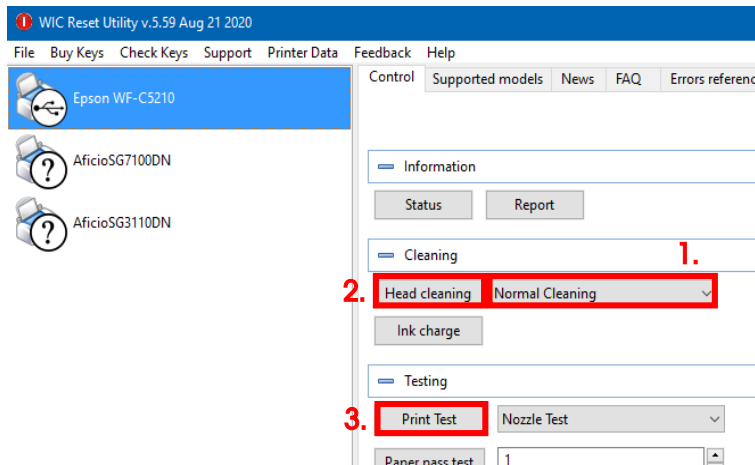

1. Select "Normal Cleaning" in the options.
2. Click on "Head cleaning". Wait until the process is finished.
3. Click on "Print Test" to print a nozzle test.

If the nozzle check is not correct, repeat steps 2-3 a maximum of **3 times**. Allow the printer to sit for **about an hour** so that the ink can settle.

Afterwards, print a nozzle test (step 3) and repeat step 2 and 3 if necessary.

The WIC Reset Utility can now be closed.

www.sublisplash.de

**Alle Warenzeichen, Produktnamen und Logos sind Eigentum der jeweiligen Besitzer.
Alle hier nicht ausdrücklich gewährten Rechte bleiben vorbehalten.*

Sublisplash®

Colour in Motion


4. Installing the Sublisplash Driver package

Download the **SublisplashDriver setup** directly from the link


<https://sublisplash.printhequipment.de/SublisplashDriver.exe>

and save it on your computer.

Begin the setup by double clicking on the EXE file. After a short time, the following window appears:

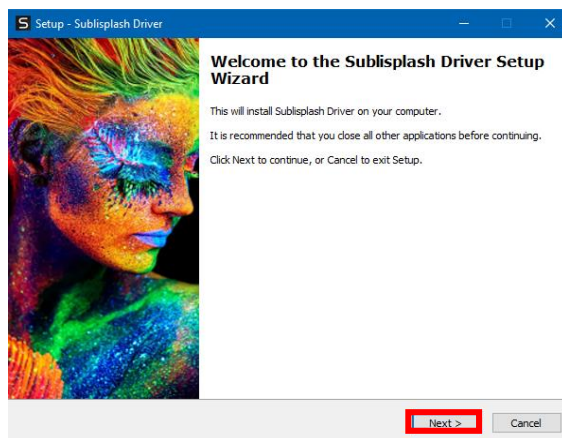

Click on "Next" to continue.

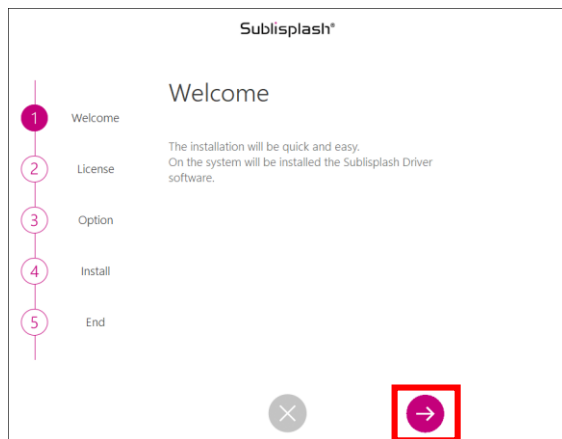


Click on the "Right Arrow" icon.

www.sublisplash.de

**Alle Warenzeichen, Produktnamen und Logos sind Eigentum der jeweiligen Besitzer.
Alle hier nicht ausdrücklich gewährten Rechte bleiben vorbehalten.*

Sublisplash®


Colour in Motion

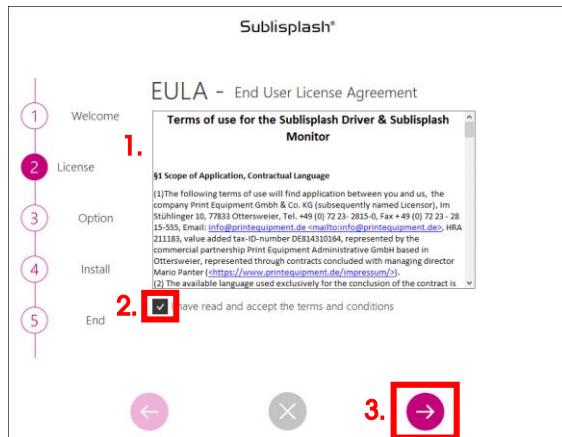

1. Read the terms of use **carefully**.


2. By checking the box you agree to the “**End User License Agreement**”. You cannot continue without agreeing to this.

3. Click on the “**Right Arrow**” icon.

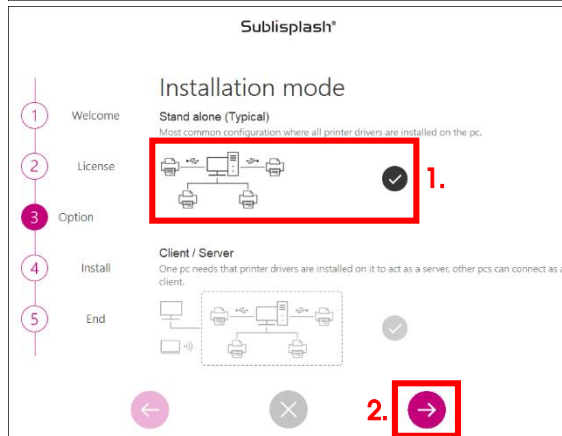

1. Select the installation mode “**Stand alone (Typical)**” by clicking on the symbol.

2. Click on the “**Right Arrow**” icon.

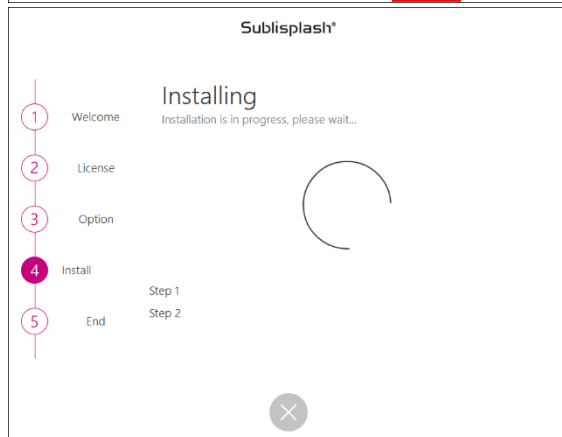


The **Sublisplash Driver package** will now be installed.

www.sublisplash.de

**Alle Warenzeichen, Produktnamen und Logos sind Eigentum der jeweiligen Besitzer.
Alle hier nicht ausdrücklich gewährten Rechte bleiben vorbehalten.*

Sublisplash®


Colour in Motion

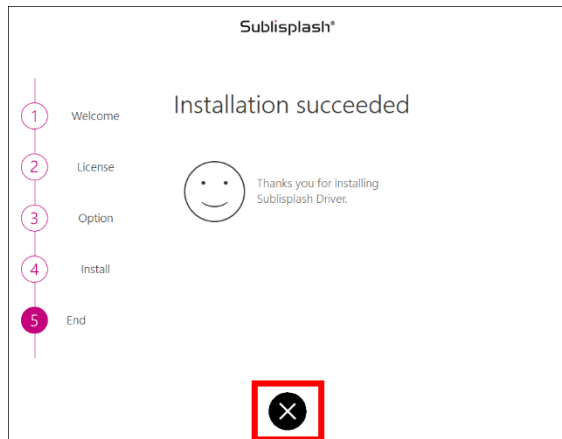


When the installation is complete, you will see the message "Installation succeeded".

Close this message by clicking on the "X" symbol.

The installation of the **Sublisplash Driver package** is now complete. The software must now be licensed to you.

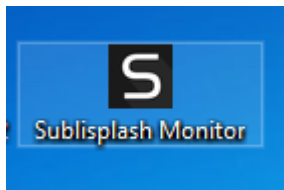

The "Sublisplash Monitor" shortcut is now on your desktop. Start the "Sublisplash Monitor" by double clicking on the shortcut.

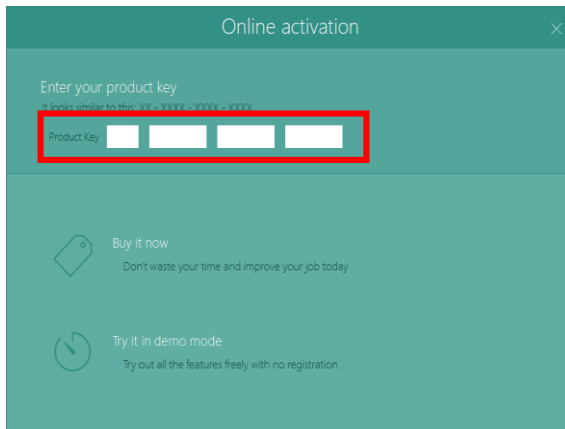

You received your **license key** for the **Sublisplash Driver package** from us.

Please enter the license key here.

The license key you entered will be checked online.

www.sublisplash.de

**Alle Warenzeichen, Produktnamen und Logos sind Eigentum der jeweiligen Besitzer.
Alle hier nicht ausdrücklich gewährten Rechte bleiben vorbehalten.*

Subsplash®

Colour in Motion

Following successful verification of the license key, you will see the form “**Product key activation**”.

Fill out the form accordingly.


Note: The fields marked with a red * must be completed! Make sure that the **email address** is correct.

Confirm your entries by clicking on the “**Activate**” symbol.

If the licensing process is successful, you will see the message “**Product key registration successfully completed**”. The “**Subsplash Driver.pdf**” file has been created on your desktop. It contains important information regarding licensing and particularly important: The **activation code**. You can also print this information by clicking on the “**Print**” icon.

By clicking on the “**Start**” symbol, you end the licensing process and start the Subsplash Monitor.

Important: Save the “**Subsplash Driver.pdf**” file in a safe place. The information in this file, especially the **activation code**, is **absolutely necessary** for a new installation!

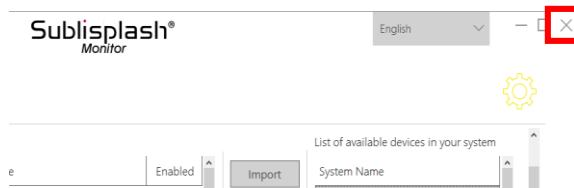

Close the “**Subsplash Monitor**” by clicking on the “**X**”.

www.subsplash.de

**Alle Warenzeichen, Produktnamen und Logos sind Eigentum der jeweiligen Besitzer.
Alle hier nicht ausdrücklich gewährten Rechte bleiben vorbehalten.*


Subsplash®

Colour in Motion

5. How do I print with the Subsplash Driver package?


The **Subsplash Driver package** is designed to be able to print from any program in **matching color** (ICC color profile based). To give you an example, we describe here how to print a PDF from the **Adobe Acrobat Reader** on your **EPSON WF-C5210** printer.

Start the Acrobat Reader and open any PDF.

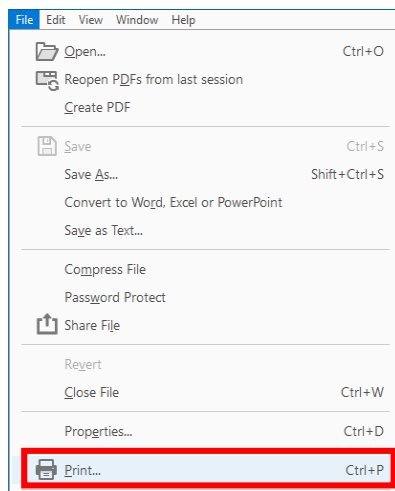


Under "File" menu, click on "Print...".

The "Print" window will open.

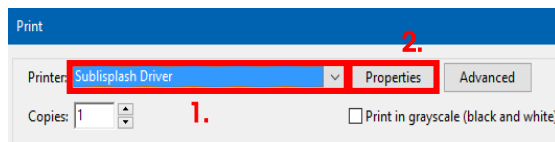

1. Select "Subsplash Driver" for the "Printer:".

2. Click on "Properties".

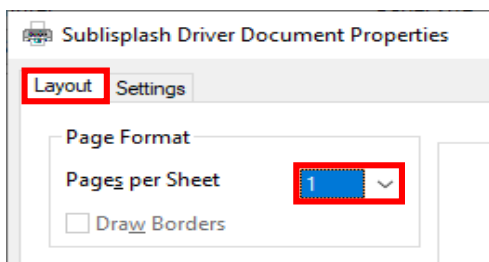

In the "Layout" tab you can specify how many pages of the PDF should be printed on **ONE** sheet. The standard value is "1".


Change tabs by clicking on the "Settings" tab.

www.subsplash.de

**Alle Warenzeichen, Produktnamen und Logos sind Eigentum der jeweiligen Besitzer.
Alle hier nicht ausdrücklich gewährten Rechte bleiben vorbehalten.*

Sublisplash®


Colour in Motion

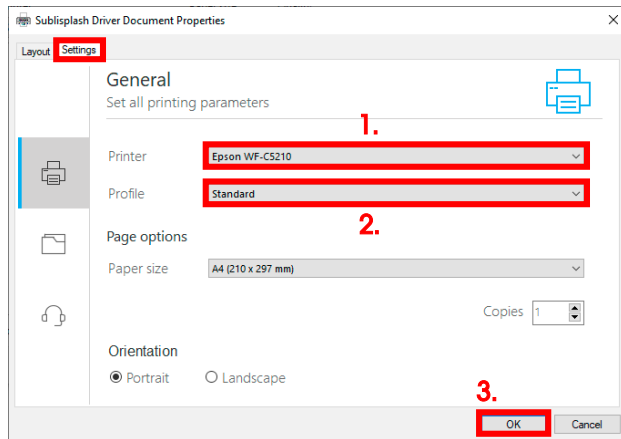

1. Select your printer.

2. Select the desired print profile. We will use "Standard" for this example.

3. Confirm your settings by clicking on "OK".

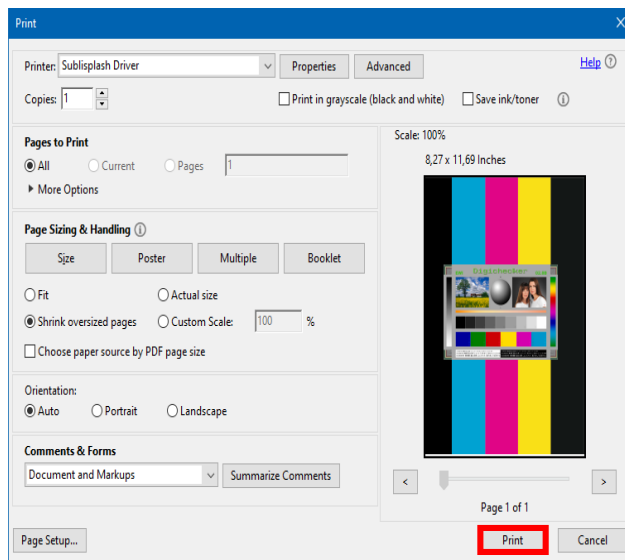

Back in the "Print" window, send your PDF to the **Sublisplash Monitor** by clicking on "Print".


www.sublisplash.de

**Alle Warenzeichen, Produktnamen und Logos sind Eigentum der jeweiligen Besitzer.
Alle hier nicht ausdrücklich gewährten Rechte bleiben vorbehalten.*

Sublisplash®


Colour in Motion

The **Sublisplash Monitor** opens and shows you the list of print jobs.

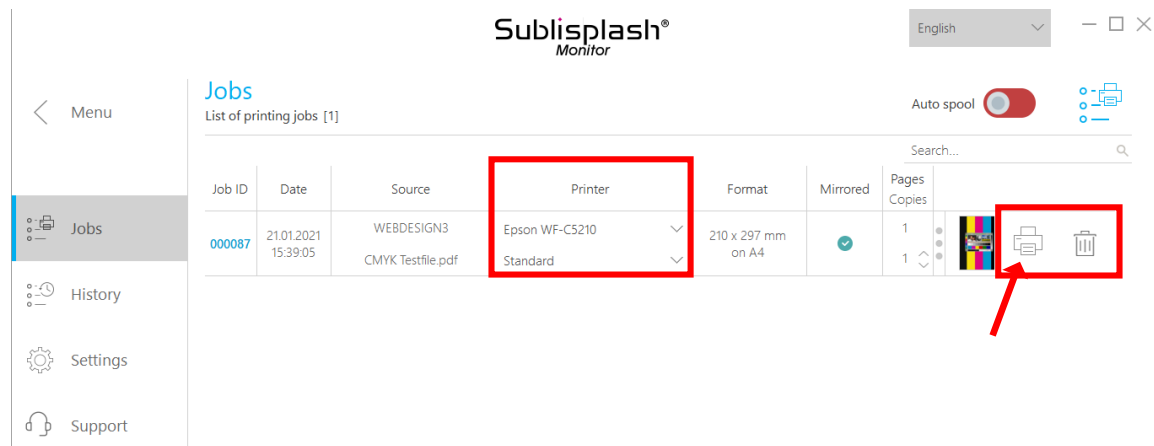

In the **"Printer"** section, you can now change the printer and/or the print profile. You can delete the print job by clicking on the **"Trash"** icon.

Click on the **"Printer"** icon (marked with an arrow). The job will now be printed and will disappear from the print jobs list.

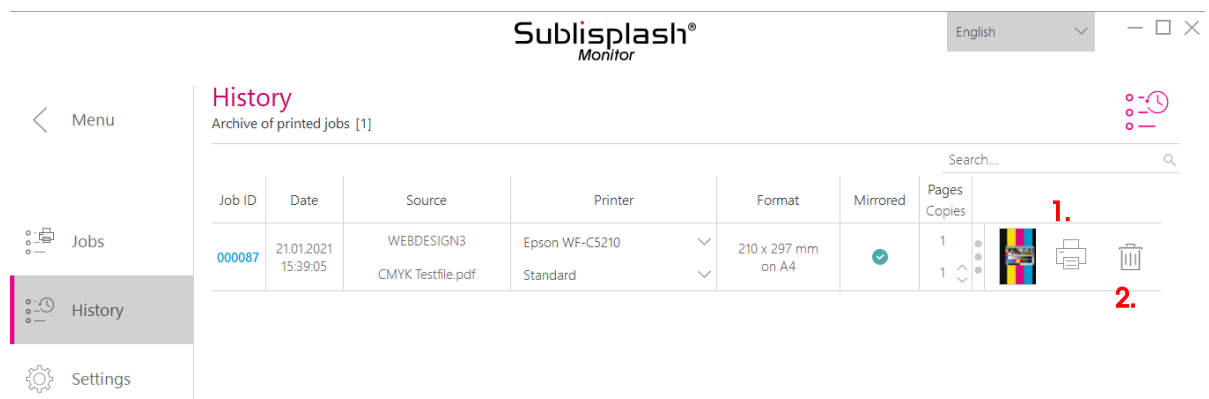

The **Sublisplash Monitor** automatically archives all printed jobs. Clicking on the **"History"** tab opens the **"Archive of printed jobs"**. You can (1.) print the job again by clicking on the **"Printer"** icon or (2.) permanently delete it by clicking on the **"Trash"** icon.

You have now completed the initial setup for your Epson WF-C5210 printer with **Sublisplash EPN+** inks and the setup for the **Sublisplash Driver package**.

www.sublisplash.de

**Alle Warenzeichen, Produktnamen und Logos sind Eigentum der jeweiligen Besitzer.
Alle hier nicht ausdrücklich gewährten Rechte bleiben vorbehalten.*