

SELECTOOL FINDS THE ANGLE OF ANY EDGE

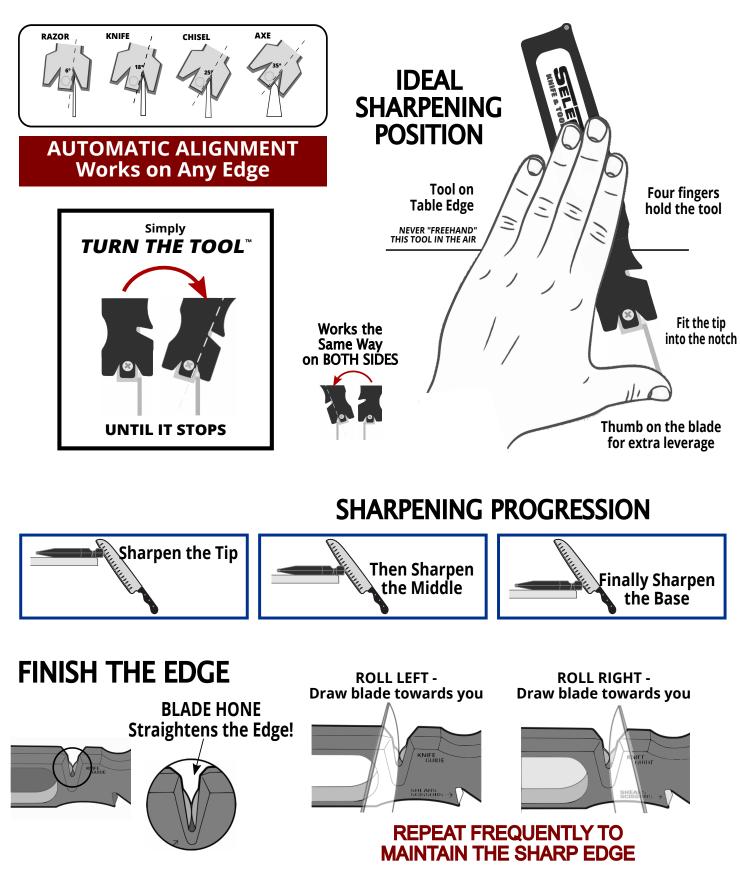


SELECIOOL SHARPEN EVERYTHING

SERRATED KNIFE




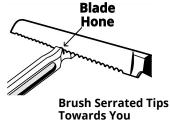

SCISSORS/SHEARS

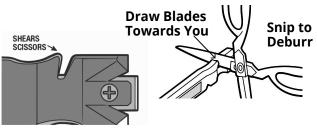

SHARPEN TOOLS

 

CHISEL EDGE

STRAIGHTEN

TO FINISH

Extend Insert to Middle Hole

Also Sharpens Skis and Paper Cutters

 
Also Sharpens Razor Edges!



AXE/HATCHET

- * Insert Blade *** TURN THE TOOL Press and Sharpen**
- * Repeat Side Two
- * Hone Left and Right





MOWER BLADE

- * Put Tool on Mower Edge
- * Turn Until it Locks
- * Sharpen with Pressure
- * Repeat on Flat Side * Do Both Blade Ends the Same

 
Never Stop Practicing

Get AND KEEP

A Sharp Edge Always!

* Insert Chisel * Roll Right Until it Locks

* Sharpen Downward





- * Repeat on Flat Side * Roll Left Until it Locks
- * Sharpen Downward