Warranty Conditions

- 1. In case of any malfunction with normal usage and within the warranty period, we provide
- a replacement based on the condition stated on this warranty.
- Bring this warranty card and invoice / receipt for services within the warranty period.
 In case of sending item for replacement, the customer bears the shipping cost.
- 4. This warranty does not cover any damage of any appliances including but not limited to computer and the loss of data due to the USB connection to this product.
- 5. Warranty is not covered under the following circumstances: (a) Lost or not presenting this warranty.
- (c) Discontract processing and warrange.
 (b) The warranty card is not filled or falsification is found.
 (c) Malfunction or damage caused by inappropriate usage, remodeling, or responsibility of
- the user (d) Malfunction or damage caused by natural disaster, such as fire, thunder, earthquake,
- flood, abnormal voltage, etc. (e) Not for household use.
- (f) Malfunction or damage caused by transportation or fall after purchase.
- (g) The damage of accessory parts.

- (a) The damage of the second participation of the second participation of the second participation of the second participation of the second please note that replacement may not be possible even within the warranty period

*When purchased at Francfranc online store and have no shop stamp, keep the invoice with the purchase date and bring it with this warranty card to enjoy the same warranty service

Warranty	
Product Name : FRAIS CARRY FAN	
Purchase Date :	
Name :	
Address :	
Telephone : Email :	
Shop Name / Shop Stamp	Warranty Pariod
	Warranty Period 6 Months
	after purchase date
hk.francfranc.net	

FRAIS CARRY FAN

Instruction manual

Thank you for purchasing this product.

Please read this instruction manual carefully before use and use the product correctly. After reading, be sure to keep it and re-read it if you have any questions.



Warranty Included

A Safety Notifications *Please read it for the safe usage.

In case of wrong handling might cause death, warning serious illness or disability.

• When abnormal condition such as smoke, having strange odor etc. during use, turn it off immediately or remove USB cable if it is being recharged to avoid fire or electric shock.

- Do not repair or remodel by yourself. It may cause fire or electric shock. • Do not drop or give a strong shock or vibration. It may cause malfunction
- or damage. In case of any abnormality, stop using immediately.
- Do not use if it is damaged or malfunctioning. It may cause accidents. • Do not modify, forcefully bend, twist or pull USB cable for charging. It
- may cause damage. • When attaching or removing USB cable, hold the connector part.
- Otherwise may cause injury, accident or damage.
- If you feel something is wrong when inserting the USB cable, do not force it and contact the purchase store. If you forcibly insert it, it will become
- overheat and the USB plug may melt or deform, causing an electric shock or fire
- Do not soak or splash water. Do not wash with water. It may cause electric shock short circuit or fire
- Do not touch with a wet hand. It may cause electric shock, malfunction or damage.
- Do not leave children to use it by themselves. It may cause injury, electric shock or accidents.
- Do not use or store in below places. It may cause fire, electric shock.
- oNear a fire source, such as heating appliances.
- $\circ \text{Under}$ direct sunlight, inside closed car, etc. places could reach high temperature.
- $\circ \mbox{Places}$ using organic solvents (paint, thinner, etc.) or gas.
- oNear humidifier.
- oPlaces with high humidity, such as bath room, kitchen, near washing machine.
- oPlaces reachable by infants or pets.

In case of wrong handling, it would cause human injury or objects damage. attention

• Avoid having dust or metal pieces attached on USB plug, USB plug or micro USB port. It may cause fire or over heating.

- •Do not put anything on top of the USB cable while using it for charging. It may cause fire, malfunction or damage.
- Do not leave it recharging.
- When fully recharged, remove the body from the charging cable.
- Do not cover over by fabric. It may cause injury, malfunction or damage. • Do not let hairs or strings near the product. It may be strangled and
- cause injury.

• Do not blow the wind continuously for a long period of time. It may damage the health.

• When cleaning, avoid using benzine, thinner, alcohol, etc. containing volatile organic solvent. It may cause discoloration, deformation or damage.




If you find any other abnormality, over heating, smoke, odor or strange noise, etc. stop using immediately. And please contact the purchase store or our company.

Disposing the product


\land Danger Only disassemble in case of disposal.

🗘 Li-ion This product uses lithium ion battery Avoid disposing it and recycle the battery.

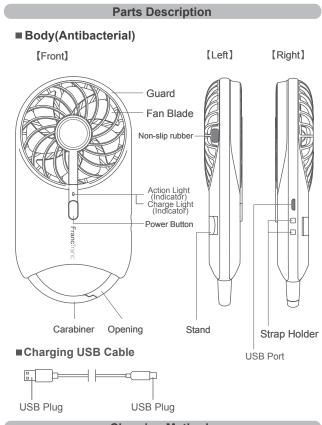

Charging Method

- Connect USB plug of the charging USB cable to USB port or output port of USB-AC adapter, mobile battery(sold separately).
- Plug in microUSB plug of the charging USB cable to USB port on the side.
- During charging, the charging indicator light will flash white; after charging, the light will go out.
- 4. When fully charged, remove the body from the charging stand.

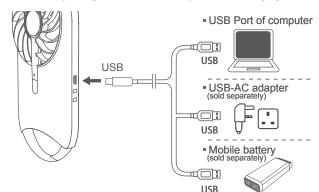

If the battery is stored for a long time without being charged, the charging lamp may not flash when charging again. The charging lamp will start flashing white again, If you continue to charge the battery and wait for a certain period of time, and will turn off when charging is complete.

Attention

- · Do not forcibly insert the plug, as it may cause damage
- Be sure to use the FRAIS CARRY FAN USB power cable.
- After charging, please unplug the USB power cord. Avoid continuous charging for a long time. If the battery is repeatedly charged and discharged frequently, the life of the battery will be shortened.

Lithium Ion Battery

- Battery cannot be replaced.
- Charge cycle is approx. 300 times. The length of time usable when fully charged gradually reduce.
 Recharge after discharging a certain capacity of the battery.
- Recharge after discharging a certain capacity of the battery.
 Recharging the battery with nearly full charged status could
- reduce the battery life. ■ Leaving battery not charged for a long period of time would
- shorten the battery life. Charge the battery approximately 50% once a month.

Using Method

Fully charged before the first time usage

-Starting Power - ON

Press and hold the power button until the operation indicator lights up, and it will start to work.

 
Shutting Down - OFF

During operation, **long press** the power button to turn off the power. •Adjust the Wind Speed

Change the wind speed (3 levels) by pressing the power button.

- Weak → Medium → Strong
- Carabiner Usage

Push the opening in, you can hang the fan on handbag, etc. And just release your hand, the opening will close automatically.




Attention -

- \circ Be sure to push the opening inwards, and do not force it outwards. \circ When the bag is hanging on a handbag, etc., do not pull or apply
- pressure.
- Pay attention to avoid being pinched.
- Make sure the opening is closed when hanging on handbags or etc. The company is not responsible for direct or indirect damage caused by dropping.

Stand Usage

A stand is attached to the back for using as a desktop fan.

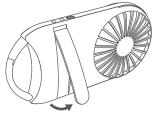

Attention

- Do not apply extra force on the stand.
- Please use it on a stable place.
- If it is used on a smooth place, it may cause slipping.
- Therefore, please change the location or reduce the wind speed.

Maintenance Method

- 1. Make sure the power is off.
- Do not apply any maintenance while charging battery.
- Use a fabric with neutral detergent diluted with water and wipe off to clean.
- * Do not use volatile organic solvent, such as thinner, alcohol, etc. It may cause deformation or malfunction.

Specification
Input Voltage : DC 5V 800mA
Rechargeable Battery : Lithium Ion Battery
Charging time : Approx. 2 hours 15 minutes
Continued usage time : Approx. 1 hour 50 minutes ~ 4 hours
Size : Approx. 75x25x147mm
Weight : Approx. 80g (Body only)
Material : ABS (Body, Blade)
Set includes : Body, Charging USB Cable, Instruction manual
Antibacterial Part: Body
*Charging time may require extremely longer if the power supply capacity is low.
*Usable time vary depends on the wind power.
*The antibacterial effect does not last permanently, and not effective for all types of bacteria.