

Warranty Conditions

1. In case of any malfunction with normal usage and within the warranty period, we provide a replacement based on the condition stated on this warranty.
2. Bring this warranty card and invoice / receipt for services within the warranty period.
3. In case of sending item for replacement, the customer bears the shipping cost.
4. This warranty does not cover any damage of any appliances including but not limited to computer and the loss of data due to the USB connection to this product.
5. Warranty is not covered under the following circumstances:
 - (a) Lost or not presenting this warranty.
 - (b) The warranty card is not filled or falsification is found.
 - (c) Malfunction or damage caused by inappropriate usage, remodeling, or responsibility of the user.
 - (d) Malfunction or damage caused by natural disaster, such as fire, thunder, earthquake, flood, abnormal voltage, etc.
 - (e) Not for household use.
 - (f) Malfunction or damage caused by transportation or fall after purchase.
 - (g) The damage of accessory parts.
6. We do not reissue the warranty card, please keep it safe.
7. Warranty is only valid in Hong Kong.
8. After the end of the sale period, please note that replacement may not be possible even within the warranty period.

*When purchased at Francfranc online store and have no shop stamp, keep the invoice with the purchase date and bring it with this warranty card to enjoy the same warranty service.

 
 
Warranty

Product Name : FRAIS SMART HANDY FAN _____
 Purchase Date : _____
 Name : _____
 Address : _____
 Telephone : _____ Email : _____

Shop Name / Shop Stamp

Warranty Period
6 Months
 after purchase date

hk.francfranc.net

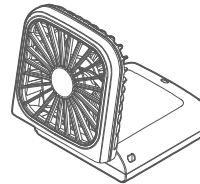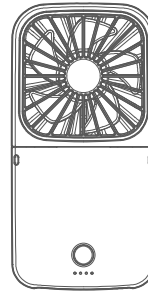

Matte design may have a unique processing smell, but there is no problem with the product itself. Also, the smell will disappear over time.

Warranty Included


INSTRUCTION MANUAL

FRAIS SMART HANDY FAN


- Thank you for purchasing this product.
- Please read this instruction manual carefully before use and use the product correctly.
- After reading, be sure to keep it and re-read it if you have any questions.
- Please read "Safety Notifications" before use.

Francfranc

Safety Notifications *Please read it for the safe usage.

 In case of wrong handling might cause death, serious illness or disability.

- When abnormal condition such as smoke, having strange odor etc. during use, turn it off immediately or remove USB cable if it is being recharged to avoid fire or electric shock.
- Do not repair or remodel by yourself. It may cause fire or electric shock.
- Do not drop or give a strong shock or vibration. It may cause malfunction or damage. In case of any abnormality, stop using immediately.
- Do not use if it is damaged or malfunctioning. It may cause accidents.
- Do not put finger, needle, pin, etc. in the gap of the cover. In case of any object inside, turn it off and contact our company. Using it with objects inside may cause electric shock, injury or damage of the product.
- Please connect the plug straight. If you connect it at an angle, the port may be damaged, which may make charging impossible, melt the USB plug, or cause electric shock or fire.
- When attaching or removing USB cable, hold the connector part. Otherwise may cause injury, accident or damage.
- If you feel something is wrong when inserting the USB cable, do not force it and contact the purchase store. If you forcibly insert it, it will become overheat and the USB plug may melt or deform, causing an electric shock or fire.
- Do not soak or splash water. Do not wash with water. It may cause electric shock, short circuit or fire.
- Do not touch with a wet hand. It may cause electric shock, malfunction or damage.
- Do not leave children to use it by themselves. It may cause injury, electric shock or accidents.
- Do not use or store in below places. It may cause fire, electric shock.
 - Near a fire source, such as heating appliances.
 - Under direct sunlight, inside closed car, etc. places could reach high temperature.
 - Places using organic solvents (paint, thinner, etc.) or gas.
 - Near humidifier.
 - Places with high humidity, such as bath room, kitchen, near washing machine.
 - Places reachable by infants or pets



 In case of wrong handling, it would cause human injury or objects damage.

- Avoid having dust or metal pieces attached on USB input port, USB or USB plug on USB cable. It may cause fire or over heating.
- Do not put anything on top of the USB cable while using it for charging. It may cause fire, malfunction or damage.
- Do not leave it recharging or use near inflammables.
- When fully recharged, remove the charging cable from the body or smartphone.
- Do not cover by fabric. It may cause injury, malfunction or damage.
- Do not put hairs or strings near the product. It may be strangled and cause injury.
- Do not blow the wind against human or animal continuously for a long period of time. It may damage the health.
- When cleaning, avoid using benzene, thinner, alcohol, etc. containing volatile organic solvent. It may cause discoloration, deformation or damage.

 [Manufacture year] 2024 [Designed standard usage period] 3 years
 If used beyond the designed standard usage period, there is a risk of fire, injury, or other accidents due to age-related deterioration.

 
 
If you find any other abnormality, over heating, smoke, odor or strange noise, etc. stop using immediately. And please contact the purchase store or our company.

Disposing the product


-  **Danger** Only disassemble in case of disposal.
-  **Li-ion** This product uses lithium ion battery. Avoid disposing it and recycle the battery.

Parts Description

■ Body

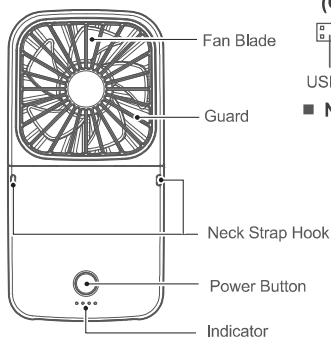

■ Cable (Charging • Power Supply)

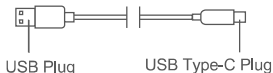

■ Neck Strap



Using Method



Fully charged before the first time usage.

- Press Power button to start and the action indicator light is lit.
 - Change the wind speed (5 levels + Rhythm) by pressing the power button.
- Min. → Weak → Medium → Strong → Max. → Rhythm → OFF

- If you press and hold the power button during operation, you can turn it off at any time regardless of the wind speed.
- When you turn it off, the fan stops and the indicator shows remaining battery amount. After the fan stops, the indicator flashes for around 40 seconds and lights out.


■ Neck Strap Hook

Remove safety connector and pass the neck strap completely through the hook to ensure that it is stable before use.

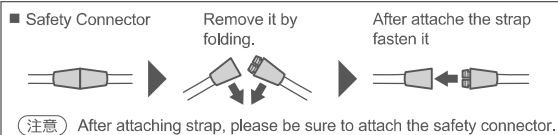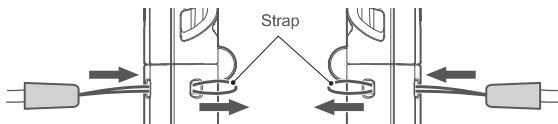

■ Adjusting angles

It can be rotated around the hinge to the back of the body

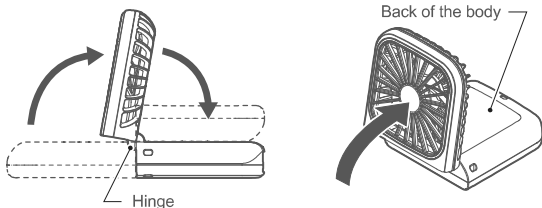

Indicator Display

[Battery]

●●●●●	75~100% remain
●●●●○	50~75% remain
●●○○○	25~50% remain
●○○○○	~25% remain

[Charging]


☀○○○○	~25% charged
●☀○○○	25~50% charged
●●☀○○	50~75% charged
●●●☀○	75~100% Charged
●●●●●	Fully Charged

Maintenance Method

- Make sure the power is off. Do not apply any maintenance while charging battery.
 - Use a fabric with neutral detergent diluted with water and wipe off to clean.
- * Do not use volatile organic solvent, such as thinner, alcohol, etc.
It may cause deformation or malfunction.

Charging Method


- Connect USB plug of the cable to USB port or output of USB-AC adapter, mobile battery (Sold separately).
- Attention** Only use the cable included.
- Plug USB Type-C plug to USB Type-C port on the bottom of the body.

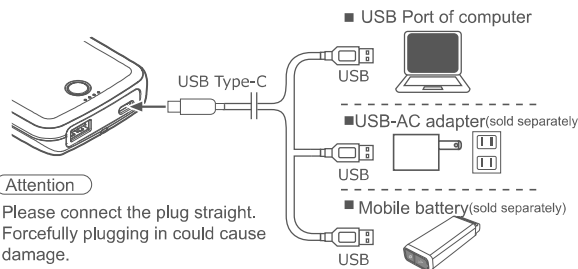

- If the power supply capacity of the connected device is low, the charging time may be extremely long or cannot charge.
- When fully charged, remove the body from the charging stand.

Mobile Battery

- Connect USB plug to USB Type-A port at the bottom of the body.
- Insert the USB Type-C plug of the cable into the USB Type-C port of a smartphone, etc.

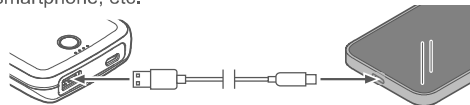

- The mobile battery function cannot be used while the fan is operating or charging the main unit.
- Do not connect the cable to the USB Type-C port and USB Type-A port at the same time. This may cause a malfunction.
- If connected, protection will be activated and the fan will stop.

- When fully charged, remove the cable from the body.

Lithium Ion Battery

- Battery cannot be replaced.
- Charge cycle is approx. 300 times. The length of time usable when fully charged gradually reduce.
- Recharge after discharging a certain capacity of the battery.
- Recharging the battery with nearly full charged status could reduce the battery life.
- Leaving battery not charged for a long period of time would shorten the battery life. Charge the battery **approximately 50% once a month.**

Specification

Input Voltage	: DC 5V 950mA (USB Rechargeable)
USB Port	: (Input) USB Type-C (Output) USB Type-A
Rechargeable Battery	: Lithium Ion Battery
Battery Capacity	: 2500mAh
Charging Time	: Approx. 4 hours
Continued Usage time	: Min. Approx. 3 hours ~ Max. Approx. 10 hours
Size	: Approx. 75 x 150 x 26mm
Weight	: Approx. 120g (Body only)
Material	: ABS (Body) / PP (Blade)
Set includes	: Body, Cable (Charging, Power Supply), Neck Strap, Instruction Manual
Antibacterial Parts	: Body

- *Charging time may require extremely longer if the power supply capacity is low.
- *Usable time vary depends on the wind power.
- *The antibacterial effect does not last permanently, and not effective for all types of bacteria.
- *The fan blade has no antibacterial effect.
- *Matte design is not antibacterial.
- *MARBLE design products have individual differences in the marble pattern.