

## High Line

Like a moment of solitude amongst the chaos, Gevri's High Line Collection is a timepiece with historical roots and sound modern design. Named for Manhattan's historical High Line park – a nearly 1.5 mile elevated sanctuary of greenery built on a historic steel railway – this collection inspires the cool, calm and collected feel of a walk in the park.

With clean lines and an expert use of space, the High Line collection features a Swiss automatic movement encased by 43mm of pure stainless steel. The unencumbered watch face in Forest Green, Navy, Black, Brown or Silver implies that simplicity well constructed is not to be underestimated. The sunray dial, an ode to the outdoor greenway, and a dark colored bezel reminiscent of the original West Side railway add solid touches to structural integrity. Numbers 6 and 12 on the dial denote the middle and end of the path while the date viewing window at 3 evokes memories of overlooking 10th Avenue.

A modern take with historical references, this collection is elevated and understated – if relaxed and sharp were a watch, the High Line would be it. Because architecture doesn't have to be complicated to be monumental:

the High Line collection.

[GEVRIL.COM](http://GEVRIL.COM)

# GEVRIL

## LA CHAUX-DE-FONDS

High Line  
Instruction Manual



## Winding

The Gevril High Line watch features a Swiss Made automatic mainspring movement which can hold a 40 hour power reserve.

For first time use: watch should be wound manually 30 clockwise turns with crown in position A.

Watch will then rewind itself automatically while being worn with regular hand movement. If worn daily the watch can be left overnight without movement and will keep time.

If watch is left more than 30 hours without enough movement the watch will need to be wound manually again as in first time use.

## Setting Time and Date

To set the Time pull crown to position C and turn either direction.

To set the Date first make sure the hour hand isn't between 9 and 1 (setting the date on an automatic watch while the hour hand is between 9 and 1 can break the movement as the gears are already engaged to the date gears). Pull crown to position B and turn clockwise.

After setting the time & date always make sure the crown is in position A to ensure water resistance.