

www.gevril.com



GEVRIL

Yorkville Instruction Manual



Winding

This is an automatic winding mechanical watch, using a mainspring as power source. Turn the crown clockwise 30-40 times in position A. Once the mainspring is wound fully, the watch will run for 42 hours.

When wearing the watch, with enough movement it winds the mainspring automatically

Setting the Date

1. Pull the crown to "B" position.
 2. Turn the crown counter-clockwise to set the date.
- Do not change the time between 9.00 PM - 1.00AM.
3. After the date has been set, push the crown back to the normal position.

Setting the Time

1. Pull the crown to "C" position.
2. Turn the crown in either direction to set the hour and minute hands.