

# Portable Air Conditioner



# **OWNER'S MANUAL**

Read and save these instructions.



# **READ AND SAVE THESE INSTRUCTIONS.**

### **TABLE OF CONTENTS**

Register Your Product Online	3
Safety Information & Warnings	4
Parts List	
Assembly Instructions	6
Operating Instructions	9
Cleaning & Maintenance	15
Troubleshooting	16
Limited Manufacturer's Warranty	18

# **SPECIFICATIONS**

NAC12KWH00
115V
60Hz
1120W / 10.5A
220.7 CFM
4.86 pints/hour
Rotary
R-410A
3
1-24 hours
5.59" x 55"
12,000 BTUs
10.71

#### **REGISTER YOUR PRODUCT ONLINE**

#### **Register Your NewAir Product Online Today!**

Take advantage of all the benefits product registration has to offer:



#### **Service and Support**

Diagnose troubleshooting and service issues faster and more accurately



#### **Recall Notifications**

Stay up to date for safety, system updates and recall notifications



**Serial Number:** 

#### **Special Promotions**

Opt-in for NewAir promotions and offers

Registering your product information online is safe & secure and takes less than 2 minutes to complete:

### newair.com/register

Alternatively, we recommend you attach a copy of your sales receipt below and
record the following information, located on the manufacturer's nameplate on
the rear of the unit. You will need this information if it becomes necessary to
contact the manufacturer for service inquiries.
Date of Purchase:

Model Number:

#### SAFETY INFORMATION & WARNINGS




When using any electrical appliance, basic safety precautions must be followed in order to reduce the risk of fire, electrical shock and/or injury to persons or property. Be sure to read all instructions before using this appliance and observe the following safety tips:

- This appliance is for indoor use only.
- Always turn off the unit and unplug it when it is not in use.
- Do not use this AC in excessively humid or wet environments.
- Do not pull or strain the power cord when moving this appliance.
- If the power cord is damaged, it must be replaced by an electrician or specialized technician authorized by NewAir.
- Always operate the unit in an upright position and place it on a flat, level surface at least 14" (36 cm) away from any other objects.
- Do not place objects on the unit, and do not cover or block the air inlet/outlet.
- Closely supervise any children or pets when the unit is in use.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning its use by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.
- For maximum cooling efficiency, do not use the AC in an area that exceeds the recommended room size.
- For maximum cooling efficiency, also make sure doors and windows are closed while the portable air conditioner is in use. Also keep curtains and blinds closed during the sunniest parts of the day while the air conditioner is in operation.
- Regularly clean the portable air conditioner's filters.
- Once the room or area has reached the desired temperature, be sure to adjust the unit's temperature and fan settings.
- To prolong the compressor's life, after turning off the unit, please wait at least 3 minutes before turning it back on.


#### PARTS LIST

#### Front

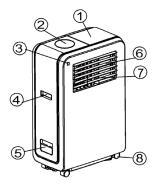


- 1. Exhaust hose compartment
- 2. Control panel
- 3. Remote control receiver
- 4. Carrying handle
- 5. Water funnel
- 6. Horizontal louver
- 7. Vertical louver
- 8. Caster

#### Back

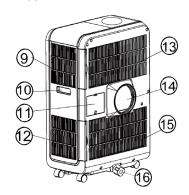

- 9. Air filter (air inlet)
- 10. Carrying handle
- 11. Cord compartment
- 12. Air filter (air inlet)
- 13. Air filter (air inlet)
- 14. Exhaust outlet
- 15. Air filter (air inlet)
- 16. Drainage knob/port

### **ACCESSORIES**

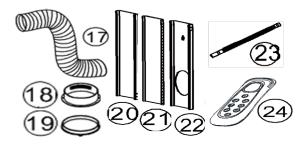

- 17. Exhaust hose
- 18. Hose adaptor
- 19. Adaptor cover
- 20. Window slider 1
- 21. Window slider 2
- 22. Window slider 3
- 23. Drain tube
- 24. Remote control


#### ASSEMBLY INSTRUCTIONS

1. Unscrew the slide at the top.

2. Remove the slider at the top.

3. Remove the exhaust hose.

4. Attach the exhaust hose to the vent.

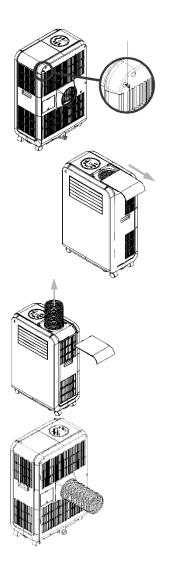

5. To store the exhaust hose, reverse the steps. Remember to put the screw back in place.

Use only the provided hose and attach exhaust hose and adaptor to the back of the air conditioner


Avoid kinks and bends in the exhaust hose as this will cause expelled humid air to build up causing the unit to overheat and shut down.

The hose may extend from 12" to 59" but for maximum efficiency, use the shortest length possible



#### WARNING!


The length of the exhaust hose is designed according to the specifications of this product. Do not replace or prolong it with your own hose as this could cause the unit to malfunction.

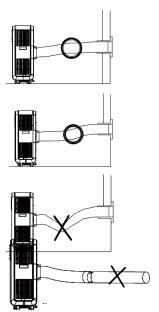

#### INSTALLATION INSTRUCTIONS


The unit is a portable air conditioner that may be moved from room to room.

#### Using the window slider:

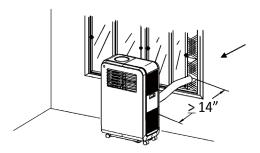


- 1. Set up the window kit in the window and adjust the length as needed.
- 2. Attach exhaust hose to the kit and slide window so that it is held securely.

#### Using the adaptor:

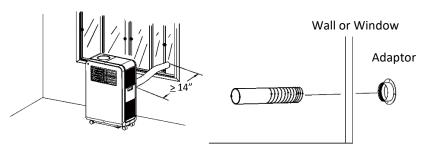

- 1. Cut a 6" diameter hole in the wall or window.
- 2. Feed exhaust hose through the window or wall and attach the threaded adaptor from the outside as shown
- 3. When not in use, plug the opening with the provided cover.

#### **OPERATING INSTRUCTIONS**

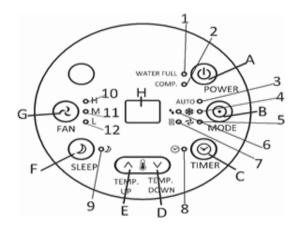


- A. Power button
- B. Mode button
- C. Timer button
- D. Temp Down button
- E. Temp Up button
- F. Sleep button
- G. Fan Speed button
- H. Display window

- 1. Water level indicator
- 2. Compressor indicator
- 3. Auto mode indicator
- 4. Cool mode indicator
- 5. Fan mode indicator
- 6. Dry mode indicator
- 7. Heat mode indicator\*
- 8. Timer indicator
- 9. Sleep indicator
- 10. High fan indicator
- 11. Med fan indicator
- 12. Low fan indicator

<sup>\*</sup>Heat mode not applicable to this unit.

#### ADJUSTING THE LOUVERS

Before using the unit, please open the horizontal louvers.

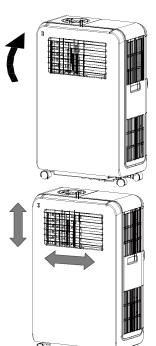

Adjust the louvers as desired.

#### **CONTROL OPERATION**

#### Turn the unit ON/OFF

- Press the ON/OFF button to start the unit.
- The preset temp is 75°F. If the room temp is higher than this, the unit will work in cooling mode. If the room temp is lower, it will work in fan mode.
- At this time, the indicator lights showing functions in progress will turn on.
   Please note that the display window will only show room temp from 32°F to 122°F.
- To shut the unit off, press the ON/OFF button once more.

#### **Setting the Mode**

• Press the MODE button to select the desired function: Cooling, Fan or Dry

#### **Setting the Temperature**

- Press the temp increase or decrease button to adjust the set temp.
- The display window will then indicate the set temperature. If no temperature is set, the display will show the room's ambient temp.
- The cooling system will switch off if the ambient temperature is lower than the set one. The fan, however, keeps working at the set level. If the ambient temperature rises above the selected level, the cooling will return to work.

#### **Setting the Fan Speed**

 Press the fan speed button to select the fan speed. The indicator light will turn on accordingly.

#### **Setting the Timer**

- Press the TIMER button to set the hours of operation (1-24 hours), the TIMER sign will light. When the set time has been reached, the machine will turn off. The display window will show the hours you set as you press the TIMER button.
- By pressing the timer and not activating any other functions, you can
  preset the time for the machine to work. For example, if you set the timer
  to "2", the unit will work automatically after 2 hours.

#### Sleep Function

- In cooling mode, the SLEEP button will activate SLEEP mode which
  increases the set temperature by 1°F at the one hour mark, another 1°F at
  the two hour mark and then maintains that temperature.
- In sleep mode, the fan will stay on low speed. If you press the SLEEP button again, the set temp and fan speed will return to the previous settings.

- The unit will shut down automatically after the SLEEP function has been running for 12 hours.
- Please note, the sleep function is not available while the machine is working in fan, dry or auto mode. This is only available in cooling.

#### **Dehumidification Function**

- In dry mode, the temperature can't be adjusted and the fan will be on low.
- When the unit is in dry mode, humidity extracted from the air is collected in an internal tank. If the tank is full, the compressor and motor turn off automatically. The Water Full indicator light will turn on and an alarm will sound as well.
- When the tank is full, drain the water as shown in the section about drainage. You may also use the unit without having to empty the tank, by using the continuous drainage feature. Additional information will be in the drainage section.

#### **Self-diagnosis Function**

This machine is equipped with a self-diagnosis function. If there is an issue with the machine, the LCD will show an E1 or E2 error. Please contact NewAir if you see either of these errors.


#### Remote Control

All of the functions can be performed with the supplied remote control. The remote requires 2 AAA batteries to operate.



#### **EFFICIENCY BOOSTER**

This unit is equipped with an Efficiency Booster function. By adding 2.5 pints (1.2L) of water to the funnel on the side of the unit, the energy efficiency can be elevated. The principle is that while the machine is

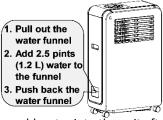

working, the compressor will be getting hot. If you add water into the unit after the unit has been running for more than an hour, the water will cool the compressor so it uses less power.


The Efficiency Booster feature is meant to be used after one hour of usage and the water should NOT be over 2.5 pints (1.2L). Otherwise, the "water full" indicator light will light up and the unit will stop working.

If the Water Full indicator is on, please drain water from the port on the back side of the unit until the light turns off. The unit will work again now.

#### DRAINING THE UNIT

When the unit is operating in Cooling or Dry mode, humidity extracted from the air is collected in an internal tank. If the tank reaches full, the compressor and motor cut out automatically. At the same time, the "Water Full" indicator comes on. An alarm will also sound. When the tank is full, carry out the following instructions:

- Turn off the air conditioner and avoid moving it when full.
- Position a container (a water tray for example) underneath the drain hole.
- Remove the drain knob & rubber plug from the drain hole and allow the water to drain out.

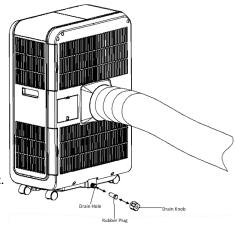

- When the container is almost full, replace the rubber plug in the drain hole and empty the water tray.
- Repeat until the unit is emptied.
- Replace the rubber plug and tighten the drain knob firmly.
- Switch on the unit the full water or compressor operating indicator should not be flashing.

Should you prefer to use the appliance without having to empty the tank every so often, proceed as follows:

 Remove the drain knob and rubber plug and retain for future use.

 Connect the drain tube supplied to the water outlet as shown and locate the other end into a drain.

 The drain tube may be extended by adding an extension tube and using a suitable connector.

#### Please note:

 The drain must be at a lower level than the drain hole on the unit.

 Flashing Water Full indicator will not function in this mode of drainage.

If you want to extend the water tube, you original drain tube extended drain tube(OD:0.7"mm)

can connect it with another tube (OD: 0.7" / 18mm)

#### **CLEANING & MAINTENANCE**

Always unplug the air conditioner from the outlet before cleaning. To maximize the efficiency of the air conditioner, clean the unit regularly.

#### Cleaning the housing

Use a soft, damp cloth to wipe the body clean.

Never use aggressive chemicals, gasoline, detergents, chemically treated cloths, or other cleansing solutions. These all could damage the frame.

#### Cleaning the filter

Use a vacuum cleaner or tap the filter lightly to remove loose dust and dirt from the filters and then rinse thoroughly under running water (no hotter than 104°C).


Dry thoroughly before replacing.



Never operate the unit without filters.

#### **END OF SEASON STORAGE**

- Drain any water in the unit before completely operating the unit on fan mode for a few hours to thoroughly dry the inside.
- Clean or change the filter.
- Unplug and store the power cord as shown.
- Replace in the original carton or cover for storage.

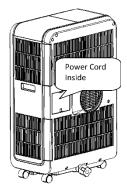

# TROUBLESHOOTING

Problem	Possible Causes	Solution
The air	The unit may be	Check if using the wrong
conditioner does	plugged in using a	voltage.
not function.	different voltage.	
	The circuit breaker may	Reset the circuit breaker or
	be tripped or there is a	check for a blown fuse.
	blown fuse.	
	The water tank is full.	If the full water tank
		indicator light is flashing,
		empty the water reservoir.
	The room temperature	Lower the set temperature.
	is lower than the set	
	temperature	
The unit does not	The unit is in direct	Close any curtains or move
produce	sunlight.	the unit to a more shaded
adequate cooling.		area.
	Too many windows or	Close doors and windows.
	doors are open.	
	There is an additional	Lower the set temperature.
	heat source in the	
	room or there are too	
	many people in the room.	
	The filter is dusty or	Clean the filter per
	dirty.	instructions above.
	Air inlet or air outlet is	Make sure there are no
	blocked.	obstructions to proper air
		circulation through the unit.
	The ambient room	Lower the set temperature.
	temperature is lower	
	than the set	
	temperature.	
The unit is noisy.	The unit is not leveled.	Ensure the unit is positioned
		on a flat, level surface.

Problem	Possible Causes	Solution
The compressor	The compressor has	Wait for temperature to
does not work.	overheated and shut	drop and then turn the unit
	off.	on again.

#### LIMITED MANUFACTURER'S WARRANTY

This appliance is covered by a limited manufacturer's warranty. For one year from the original date of purchase, the manufacturer will repair or replace any parts of this appliance that prove to be defective in materials and workmanship, provided the appliance has been used under normal operating conditions as intended by the manufacturer.

#### **Warranty Terms:**

During the first year, any components of this appliance found to be defective due to materials or workmanship will be repaired or replaced, at the manufacturer's discretion, at no charge to the original purchaser. The purchaser will be responsible for any removal or transportation costs.

#### **Warranty Exclusions:**

The warranty will not apply if damage is caused by any of the following:

- Power failure
- Damage in transit or when moving the appliance
- Improper power supply such as low voltage, defective household wiring or inadequate fuses
- Accident, alteration, misuse or abuse of the appliance such as using non-approved accessories, inadequate air circulation in the room or abnormal operating conditions (extreme temperatures)
- Use in commercial or industrial applications
- Fire, water damage, theft, war, riot, hostility or acts of God such as hurricanes, floods, etc.
- Use of force or damage caused by external influences
- Partially or completely dismantled appliances
- Excess wear and tear by the user

#### **Obtaining Service:**

When making a warranty claim, please have the original bill of purchase with purchase date available. Once confirmed that your appliance is eligible for warranty service, all repairs will be performed by a NewAir™ authorized repair facility. The purchaser will be responsible for any removal or transportation costs. Replacement parts and/or units will be new, re-manufactured or refurbished and is subject to the manufacturer's discretion. For technical support and warranty service, please email support@newair.com