


newair[®]

SKU: NIH110WH00

Portable Ceramic Tower Heater

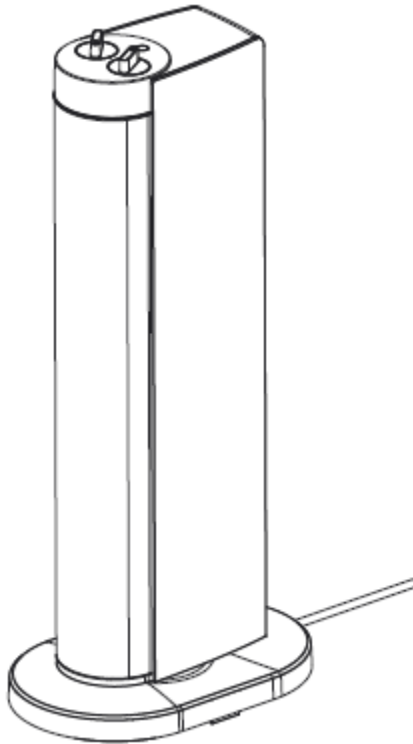

OWNER'S MANUAL

Read and save these instructions.



Intertek

Manual v1.0

READ AND SAVE THESE INSTRUCTIONS.

TABLE OF CONTENTS

| | |
|---------------------------------------|---|
| Register Your Product Online..... | 3 |
| Safety Information & Warnings | 4 |
| Operating Instructions | 6 |
| Cleaning & Maintenance..... | 7 |
| Troubleshooting | 8 |
| Limited Manufacturer's Warranty | 9 |

SPECIFICATIONS

| | |
|------------------------------------|--------------------------------------|
| MODEL NO. | NIH110WH00 |
| VOLTAGE: | 120V |
| FREQUENCY: | 60Hz |
| POWER REGULATION RANGE (W): | LOW: 800 HIGH: 1500 |
| HEATING AREA: | 105 square feet |
| NOISE LEVEL: | ≤45 db |

REGISTER YOUR PRODUCT ONLINE

Register Your NewAir Product Online Today!

Take advantage of all the benefits product registration has to offer:



Service and Support

Troubleshoot, diagnose, and service issues faster and more accurately



Recall Notifications

Stay up to date for safety, system updates, and recall notifications



Special Promotions

Opt-in for NewAir promotions and offers

Registering your product information online is safe & secure and takes less than 2 minutes to complete:

newair.com/register

Alternatively, we recommend you attach a copy of your sales receipt below and record the following information, which is located on the manufacturer's nameplate on the rear of the unit. You will need this information if it becomes necessary to contact the manufacturer for service inquiries.

Date of Purchase: _____

Serial Number: _____

Model Number: _____

SAFETY INFORMATION & WARNINGS

PLEASE READ AND SAVE THESE IMPORTANT SAFETY INSTRUCTIONS



When using electrical appliances, basic precautions should always be followed to reduce the risk of fire, electric shock, and injury to persons, including the following:

- Read all instructions before using the heater.
- This heater is hot when in use. To avoid burns, do not let bare skin touch hot surface. If provided, always use handles when moving this heater. Keep combustible materials such as furniture, pillows, bedding, papers, clothes, and curtains at least 3 feet (0.9m) from the front of the heater and keep them away from the sides and rear.
- Extreme caution is necessary when any heater is used by or near children or those with reduced mental capacity, and whenever the heater is left operating and/or unattended.
- Always unplug the heater when not in use.
- Do not operate any heater with a damaged cord or plug or after the heater malfunctions, has been dropped or been damaged in any manner. Discard heater or contact customer service if any issues arise.
- Do not use the heater outdoors.
- This heater is not intended for use in bathrooms, laundry areas or similar locations in which the heater could get wet. Never locate heater where it may fall into a bathtub or sink. Do not submerge in water.
- Do not run the power cord under carpeting. Do not cover the cord with throw rugs, runners, or similar coverings. Do not route the cord under furniture or appliances. Arrange the cord away from traffic areas where it will not be tripped over.
- **CAUTION:** This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of shock, this plug is intended to fit only one way in a polarized outlet. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. DO NOT attempt to avoid this safety feature. To do so could result in an electric shock hazard.
- This heater draws 12.5 amps during operation. To prevent overloading a circuit, do not plug the heater into a circuit that already has other appliances running.
- **CAUTION:** It is normal for the plug to feel warm to the touch; however, a loose fit between the AC outlet (receptacle) and plug may cause overheating and distortion of the plug. Contact a qualified electrician to replace a loose or worn outlet. If it's an issue with the plug itself, contact customer service.

- To disconnect the heater, first turn the controls off, then remove the plug from the outlet. Never pull by the cord.
- Do not insert or allow foreign objects to enter any ventilation or exhaust opening as this may cause an electric shock or fire, or damage the heater.
- To prevent a possible fire, do not block air intakes or exhaust in any manner. Do not use on a soft surface, like a bed, where openings may become blocked.
- This heater has hot, arcing and/or sparking parts inside its electronics. Do not use it in areas where gasoline, paint, or flammable liquids are used or stored.
- Use this heater only as described in this manual. Any other use is not recommended by the manufacturer and may cause fire, electric shock, or injury.
- **CAUTION:** Always plug heaters directly into a wall outlet/receptacle. Never use with an extension cord or reloadable power tap (outlet/power strip).
- The output of this heater may vary, and its temperature may become intense enough to burn exposed skin. Use of this heater is not recommended for persons with reduced sensitivity to heat or an inability to react to avoid burns.
- **CAUTION:** TO PREVENT ELECTRIC SHOCK, MATCH WIDE BLADE OF PLUG TO WIDE SLOT OF AN OUTLET AND FULLY INSERT.

SAVE THESE INSTRUCTIONS

OPERATING INSTRUCTIONS

Before turning on the heater:

1. Check if the power cord is in good condition.
2. This heater runs on 120V AC and the bearing capacity of the product socket is no lower than 12.5A; otherwise, issues could arise that result in injury.

Pilot Light

The Pilot Light will light up if the machine is powered on.

Temperature Control Knob

Insert the plug into the power socket, then turn the Temperature Control knob clockwise until you hear a click, indicating that the temperature controller is on. Then, adjust the dial to your desired temperature level. The temperature options range from 41 to 95 degrees.

Power Selection Knob

Use the Power Selection knob to select between 4 functions: Low (800 Watts), High (1,500 Watts), Low Oscillation (800 Watts with oscillation) and High Oscillation (1,500 Watts with oscillation).

Turning off the Heater

- A. Turn the Power Selection knob to the OFF position.
- B. Turn the Temperature Control Knob all the way to MIN.
- C. Unplug the power cord, and refrain from storing the heater until the unit has fully cooled.

CLEANING & MAINTENANCE

CLEANING AND STORAGE

It is recommended that the heater be cleaned at least once every few months in order to provide the optimum level of performance. Always turn the power switch off and unplug the heater before cleaning. Be sure to save the box for off-season storage.

1. Turn the heater off, unplug it, and wait for the heater to cool down.
2. Use a dry cloth to clean only the external surfaces of the heater (Do not use any cleaning agents or detergents, and never immerse the heater in water).
3. Remove the dust filter and pad, using a vacuum or cloth to clean off the dust, or rinsing with water and drying completely before placing back onto the heater.
4. Pack the heater in the original box and store it in a cool and dry place.

SAFETY PROTECTION

Overheat protection: This heater includes an Overheat Protection System that shuts the unit off if it overheats due to abnormal conditions (the inside of the unit reaching 185 degrees Fahrenheit). If this occurs, the heater will shut itself off. You should then unplug it, and inspect and remove any objects on or adjacent to the heater. Allow it to cool for a few minutes, plug it back in, and resume normal operation. If the issue persists, contact customer service immediately.

READ AND SAVE THESE INSTRUCTIONS

TROUBLESHOOTING

If the product does not operate properly or at all, first check the following list to troubleshoot the issue. If no solution is provided below, contact customer service.

| Problem | Possible Causes | Solution |
|------------------------------------------------|------------------------------------------------------|-------------------------------------------------------------------------------|
| The heater does nothing when turned on. | The plug may not be plugged in well to the outlet. | Check whether the plug is properly inserted into the outlet. |
| | The temperature control knob is not turned from MIN. | Check whether the temperature control knob is turned toward the MAX position. |
| The heater is still on but not heating. | The overheating safety feature has been triggered. | Allow the machine to cool down before next use. |

LIMITED MANUFACTURER'S WARRANTY

This appliance is covered by a limited manufacturer's warranty. For one year from the original date of purchase, the manufacturer will repair or replace any parts of this appliance that prove to be defective in materials and workmanship, provided the appliance has been used under normal operating conditions as intended by the manufacturer.

Warranty Terms:

During the first year, any components of this appliance found to be defective due to materials or workmanship will be repaired or replaced, at the manufacturer's discretion, at no charge to the original purchaser. The purchaser will be responsible for any removal or transportation costs.

Warranty Exclusions:

The warranty will not apply if the damage is caused by any of the following:

- Power failure
- Damage in transit or when moving the appliance
- Improper power supply such as low voltage, defective household wiring or inadequate fuses
- Accident, alteration, misuse, or abuse of the appliance such as using non-approved accessories, inadequate air circulation in the room or abnormal operating conditions (extreme temperatures)
- Use in commercial or industrial applications
- Fire, water damage, theft, war, riot, hostility or acts of God such as hurricanes, floods, etc.
- Use of force or damage caused by external influences
- Partially or completely dismantled appliances
- Excess wear and tear by the user

Obtaining Service:

When making a warranty claim, please have the original bill of purchase with the purchase date available. Once confirmed that your appliance is eligible for warranty service, all repairs will be performed by a NewAir™ authorized repair facility. The purchaser will be responsible for any removal or transportation costs. Replacement parts and/or units will be new, remanufactured or refurbished and is subject to the manufacturer's discretion. For technical support and warranty service, please email support@newair.com