


Right Side Panel for MNG2

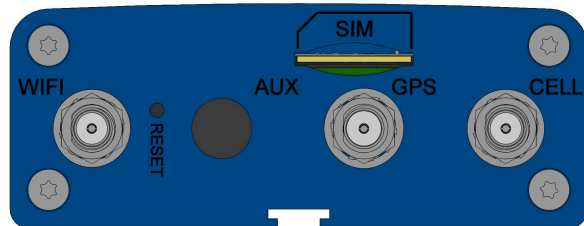

Side Panels

The device has connectors on both sides of the housing.

The right side of the device contains a reset button, Wi-Fi, GPS and Cellular connectors. Depending on the model, the GPS and the WiFi connectors may or may not be present.

The left side of the device includes an RS-232 connector, an Ethernet connector, and the power receptacle.

Installing the Device

1. To use the device's cellular features, connect the suitable antenna to the **CELL** connector.
2. Using an Ethernet cable, connect one end of the cable to the **E-NET** connector on the back of the device and the other end to your computer, either directly or through a switch or hub.
3. If you are connecting to a serial interface, connect the DE-9 connector (9-pin) of the RS-232 cable to the **RS-232** connector on the device. Then connect the other end to the serial port on the desired device.
4. Some devices support the use of a GPS receiver (varies with model). If you are using a GPS receiver with the device, attach the GPS cable to the **GPS** connector on the device.

Quick Start

5. Some models support the use of WiFi or Bluetooth. If you are using WiFi or Bluetooth with the device, attach the WiFi/Bluetooth antenna to the WIFI connector on the device.
6. Screw on the power lead from the power supply module into the power connection on the device. Plug the power supply into your power source.
 - The **POWER LED** lights after the device powers up.
 - When the **STATUS LED** begins to blink, the device is ready for use.
7. You can configure your device by using your device's web management interface. You might need to change the IP address of your computer to be in the same IP and subnet mask range as the device.

- a. Open a web browser. In the browser's address field, type the default address for the device:
http://192.168.2.1. (If the browser displays a message about a problem with the security certificate, ignore and click **Continue**).
- b. When logging in for the first time, the device enters commissioning mode requiring a username and password for an admin user account. Enter and submit your desired username and password. Confirm the password.
- c. Refer to the appropriate user guide for further details on first-time setup.

Mounting Device

1. Locate the groove on the bottom of the modem.
2. Slide the mounting tab through the groove.
3. To secure the tab to the desired surface, place and tighten two screws in the holes on either end of the mounting tab. Refer to the user guide for an illustration of the mounting tab, as well as the dimensions for placement of the screws.

Quick Start

MultiConnect® rCell 100 Series Router MTR-Cat M1/NB-LoT

Part Number: 82102960L

Copyright and Trademarks

This publication may not be reproduced, in whole or in part, without the specific and express prior written permission signed by an executive officer of Multi-Tech Systems, Inc. All rights reserved. Copyright © 2019 by Multi-Tech Systems, Inc.

Multi-Tech Systems, Inc. makes no representations or warranties, whether express, implied or by estoppels, with respect to the content, information, material and recommendations herein and specifically disclaims any implied warranties of merchantability, fitness for any particular purpose and non-infringement. Multi-Tech Systems, Inc. reserves the right to revise this publication without obligation to notify any person or organization of such revisions or changes.

MultiConnect, MultiTech and the MultiTech logo are registered trademarks of Multi-Tech Systems, Inc. All other brand and product names are trademarks or registered trademarks of their respective companies.

Multi-Tech Systems, Inc

2205 Woodale Drive,
Mounds View, Minnesota 55112 U.S.A.

Phone: 763-785-3500 or 800-328-9717
Fax: 763-785-9874

Support

Support Portal
<https://support.multitech.com>

Europe, Middle East, Africa:
support@multitech.co.uk
+(44) 118 959 7774



Knowledge Base
<http://www.multitech.com/kb.go>


U.S., Canada, all others:
support@multitech.com
(800) 972-2439 or (763) 717-5863

Business Hours: M-F, 8am to 5pm CT

Quick Start



MultiConnect® rCell 100 Series Router MTR-Cat M1/NB-LoT MTR-MNG2 Quick Start

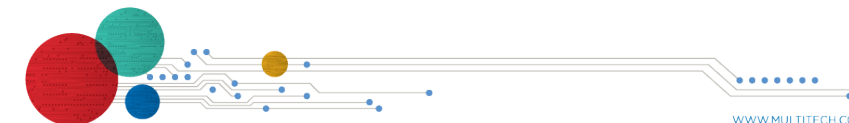

Overview

The MultiConnect® rCell 100 Series Router MTR-Cat M1/NB-IoT provides secure data communication between many types of devices that use legacy and the latest communication technologies.

Package Contents

Your MultiConnect® rCell 100 Series Router MTR-Cat M1/NB-IoT typically includes the following (varies with model):

Power Supply	1 - 9 VDC power supply with removable blades, 1 - NAM blade/plug, 1 - EURO blade/plug, 1 - UK blade/plug, 1-AU/NZ blade/plug
Cables	1 - Ethernet cable with RJ-45 connector, 1 - Power cable from power supply
Antennas	1- CELL, LTE Cat. M external antenna, 1- Wi-Fi/Bluetooth antenna (B10 models), 1 - GPS antenna (B10 models)
Documents	1 - Quick Start Guide, 1 - Warranty Plans, 1 - Activation, Support & Regulatory Information
Other Items	1 - Mounting tab, 4 - Clear adhesive bumpers or mounting feet
Device	1- MultiConnect® rCell 100 Series Router (Cat M1) 4.169" x 3.00" x 1.163" Blue enclosure includes: <ul style="list-style-type: none"> ■ 7-32 VDC power connector ■ RS-232 (DE 9-pin, female-D) connector ■ E-NET RJ-45 receptacle for standard Ethernet 10/100 Base-T ■ WIFI Wi-Fi/Bluetooth SMA connector ■ GPS GPS female SMA connector ■ CELL Cellular female SMA connector

EMC, Safety, and Radio Equipment Directive (RED)

MultiTech declares that this device is in compliance with the essential requirements and other relevant provisions of Directive 2014/53/EU. The declaration of conformity may be requested at <https://support.multitech.com>.

47 CFR Part 15 Regulation Class B Devices

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Additional Information

For the latest information on your device including operation, regulatory, and safety topics, refer to the appropriate user guide online:

<http://www.multitech.com/brands/multiconnect-rcell-100-series>



LED Descriptions

The top panel contains the following LEDs:

- **Power and Status LEDs** - The Power LED indicates that DC power is present and the Status LED blinks when the unit is functioning normally.
- **Modem LEDs** - Two modem LEDs indicate carrier detection and link status.
- **Signal LEDs** - Three signal LEDs display the signal strength level of the wireless connection.
- **Ethernet LEDs** - These LEDs are not on the top panel. The two Ethernet LEDs are physically on the RJ-45 connector.
- **Ethernet Link LED** - Located on the right on the Ethernet connector. This LED blinks when there is transmit and receive activity and is steady when there is a valid Ethernet connection.

- **Ethernet Speed LED** - Located on the left on the Ethernet connector. When lit the Ethernet is linked at 100Mbps. If it is not lit, the Ethernet is linked at 10 Mbps.

Installing a SIM Card

If you want to operate the device on a particular network, install a mini SIM (2FF) card. MultiTech recommends using a SIM card rated for industrial use.

To install the SIM:

1. Locate the SIM card slot on the side of the device. The slot is labeled SIM.
2. Push the SIM card into the slot until it snaps into place.

