

---

***Wireless Vibration Sensor(Spring Type)***

---

**Wireless Vibration Sensor  
(Spring Type)  
R718DB  
User Manual**

## Table of Content

1. Introduction.....	2
2. Appearance.....	3
3. Main Features.....	3
4.Set up Instruction.....	4
4.1 Power on and Turn on / off.....	4
4.2 Join Into Lora Network.....	4
4.3 Function Key.....	4
4.4 Data Report.....	5
5. Restore to Factory Setting.....	5
6. Sleeping Mode.....	6
7. Low Voltage Alarming.....	6
8. Installation.....	6
9. Important Maintenance Instruction.....	6

## 1. Introduction

R718DB is a long-range wireless spring-loaded vibration device for Netvox ClassA-type devices based on the LoRaWAN open protocol and is compatible with the LoRaWAN protocol.

LoRa Wireless Technology:

LoRa is a wireless communication technology dedicated to long distance and low power consumption. Compared with other communication methods, LoRa spread spectrum modulation method greatly increases to expand the communication distance. Widely used in long-distance, low-data wireless communications. For example, automatic meter reading, building automation equipment, wireless security systems, industrial monitoring. Main features include small size, low power consumption, transmission distance, anti-interference ability and so on.

LoRaWAN:

LoRaWAN uses LoRa technology to define end-to-end standard specifications to ensure interoperability between devices and gateways from different manufacturers.

## 2. Appearance

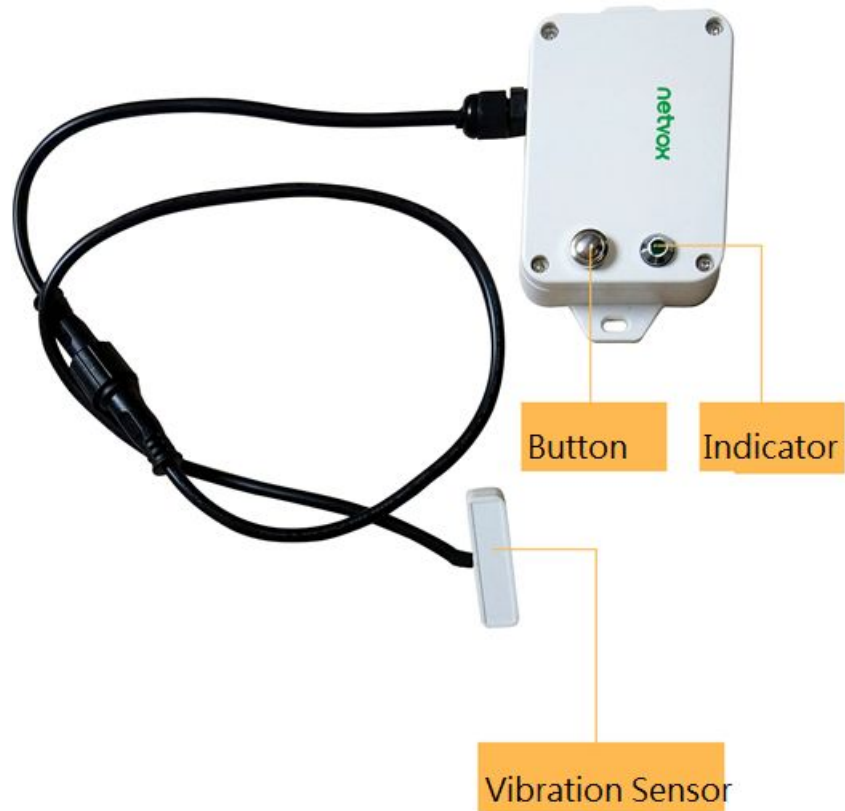


Fig.1 R718DB Appearance

## 3. Main Features

- Compatible with LoRa protocol.
- 2 x 3.6V ER14505 AA lithium batteries (3.6V, 2400mah/section)
- Detectable Object Vibration
- Simple Setting and Installation

## 4.Set up Instruction

### 4.1 Power on and Turn on / off

- (1) **Power on:** insert batteries; open the battery cover; insert batteries and close the battery cover.
- (2) **Turn on:** if the device had never joined in any network or at factory setting mode, after powering on, the device is at off mode by default setting. Press and hold function key for 3 seconds and release to turn on the device. The green indicator will flash once to show that the device is turned on.
- (3) **Turn off:** press and hold function key for 5 seconds till the green indicator flashes quickly and release. The green indicator will flash 20 times to show that the device is turned off.

Note:

1. The interval between shutting down twice or power off/on is suggested to be about 10 seconds to avoid the interference of capacitor inductance and other energy storage components.
2. Do not press function key and insert batteries in the same time, otherwise, it will enter engineer testing mode.

### 4.2 Join Into Lora Network

To join the device into LoRa network to communicate with LoRa gateway.

The network operation is as following:

- (1) If R718DB had never joined any network, turn on the device; it will search an available LoRa network to join. The green indicator will stay on for 5 seconds to show that it joins into the network, otherwise, the green indicator does not work.
- (2) If the device had been joined into a LoRa network, remove and insert the batteries; it will repeat step (1).

### 4.3 Function Key

- (1) Press and hold function key for 5 seconds to reset to factory setting. After restoring to factory setting successfully, the green indicator will flashes quickly 20 times.
- (2) Press function key to turn on the device which is in the network and the green indicator will flash once and the device will send a data report.
- (3) Trigger ball sensor: as long as the equipment detects vibration, the ball will shake and an alarm message will be issued.  
The vibration alarm bit is "1"; the stationary, unshaken alarm bit is "0".

## 4.4 Data Report

When the device is powered on, it will immediately send a version package Report and a report data with spring trigger status and battery voltage value.

The device sends data in the default configuration before any configuration is done.

Spring Trigger (One way): as long as the device feels vibration and the spring is deformed, an alarm message will be issued.

The vibration alarm bit is "1"; the stationary, unshaken alarm bit is "0".

Battery voltage default report value: mintime = maxtime = 3600s, reportchange = 0x01 (0.1V).

Note: MinInterval is the sampling period for the Sensor. Sampling period  $\geq$  MinInterval.

Remarks:

1. The following single write configuration report time is used for the data sending cycle.
2. The interval between two reports must be the minimum time.

data report configuration and sending period are as following:

Min Interval (Unit:second)	Max Interval (Unit:second)	Reportable Change	Current Change $\geq$ Reportable Change	Current Change $<$ Reportable Change
Any number between 1~65535	Any number between 1~65535	Can not be 0.	Report per Min Interval	Report per Max Interval

Remarks: Min Interval depends on the real order.

## 5. Restore to Factory Setting

R718DB saves data including network key information, configuration information, etc. To restore to factory setting, users need to execute below operations.

1. Press and hold function key for 5 seconds till the green indicator flashes and then release; LED flashes quickly 20 times.
2. R718DB will be at off mode by default setting after restoring to factory setting. Press function key to turn on R718DB and to join a new LoRa network.

Note: The device operation of turning off is the same as restoring to factory settings.

## 6. Sleeping Mode

The device is designed to enter sleeping mode for power-saving in some situations:

- (A) While the device is in the network → the sleeping period is Min Interval. (During this period, if the reportchange is larger than setting value, it will wake up and send a data report).
- (B) When it is not in the network → the device will enter sleeping mode and wake up every 15 seconds to search a network to join in the first two minutes. After two minutes, it will wake up every 15 minutes to request to join the network.

If it's at (B) status, to prevent this unwanted power consumption, we recommend that users remove the batteries to power off the device.

## 7. Low Voltage Alarming

The operating voltage threshold is 3.2V. If the voltage is lower than 3.2V, R718DB will send a low-power report to the Lora network.

## 8. Installation

This product comes with waterproof function. It can be attached to the iron surface, or the two ends can be fixed to the wall with screws.

Note: To install the battery, use a screwdriver or similar tool to assist in opening the battery cover.

## 9. Important Maintenance Instruction

Your device is a product of superior design and craftsmanship and should be used with care. The following suggestions will help you use the warranty service effectively.

- Keep the equipment dry. Rain, moisture, and various liquids or moisture may contain minerals that can corrode electronic circuits. In case the device is wet, please dry it completely.
- Do not use or store in dusty or dirty areas. This can damage its detachable parts and electronic components.
- Do not store in excessive heat. High temperatures can shorten the life of electronic devices, destroy batteries, and deform or melt some plastic parts.
- Do not store in a cold place. Otherwise, when the temperature rises to normal temperature, moisture will form inside, which will destroy the board.
- Do not throw, knock or shake the device. Rough handling of equipment can destroy internal circuit boards and delicate structures.
- Do not wash with strong chemicals, detergents or strong detergents.
- Do not apply with paint. Smudges can block debris in detachable parts and affect normal operation.

- Do not throw the battery into a fire to prevent the battery from exploding. Damaged batteries may also explode.

All of the above suggestions apply equally to your device, battery and accessories. If any device is not working properly.

Please take it to the nearest authorized service facility for repair.