

Technical Specifications

Materials	Steel
Connections	½" flow and return.
Test pressure	10 Bar
Testing authority	EN442
Maximum operating pressure	8 Bar
Maximum working temperature	95°C
Packaging	Encased in polystyrene, seated within a cardboard box

PLEASE NOTE: Systems using micro bore pipework must have adequate pressure and flow rates for the number and style of radiators on the system.

Terms & Conditions

All products must be inspected once removed from the packaging and The Radiator Company notified within 28 days of delivery of any scratches, blemishes or other damage. The Radiator Company will then replace the radiator.

Imperfect radiators should therefore not be fitted and The Radiator Company will not accept responsibility for replacement of scratched or damaged radiators once they have been fitted. This includes any consequential loss or cost of fitting.

If The Radiator Company are not notified within 28 days of the date on the signed delivery note then it will be deemed that The Radiator Company have fully complied with its obligations and claims will not be considered.

Failure to comply with any of the above may invalidate any claims. We recommend that after you check the product on delivery that it is stored in its packaging to prevent damage prior to installation. The Radiator Company cannot accept responsibility for items damaged after delivery.

Guarantees & Liabilities

As we are not the manufacturers of this product we will take all reasonable endeavours to make over to you the benefit of any warranty or guarantee given by the manufacturer, which is usually five years on most of our range. (Copies of specific guarantees for any of our products are available on request).

The guarantees in all cases are subject to the products being installed in accordance with British and or European standards as well as these fitting instructions. The guarantees in all cases are restricted to the free of charge replacement or repair of the failed product only. Our liability will under no circumstances extend beyond the repair or replacement of the product supplied by us. Claims for either labour in replacement or damage to property are not admissible. Any goods that are returned, in the event of a problem, will belong to The Radiator Company.



Seta Groove & Line

Fittings Instructions



Seta is a revolutionary new range of radiators designed to be both practical and energy efficient. Secondary internal tubing is used to increase surface area, producing both lower water content and higher outputs.

Please read these instructions and terms and conditions carefully prior to installation.

Failure to do so may invalidate the warranty

The Radiator Company
Units 13 - 14 Charlwoods Road
East Grinstead
West Sussex
RH19 2HU




SETAGL1.4

If you have any questions please contact us on 01342 302250
www.theradiatorcompany.co.uk

If you have any questions please contact us on 01342 302250
www.theradiatorcompany.co.uk

 Technical Data

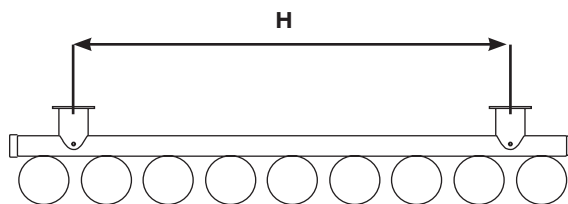

Fixing Centres

Seta Groove

Horizontal (H) = Length (mm) minus 135mm
Vertical (V) = Height (mm) minus 70mm

Seta Line

Horizontal (H) = Length (mm) minus 115mm
Vertical (V) = Height (mm) minus 90mm



PLEASE NOTE :

Seta Line and Seta Groove are very heavy, therefore they should only be hung on solid walls.

Pipe Centres

 
Pipe centres left to right = width plus valves

Pipe centres from wall = 50mm

Depth from wall = 120mm

1 Unpack & Inspect

The Radiator Company prides itself on selecting products from manufacturers who exercise tight quality control measures. We only select models with excellent standards of welding and brazing, as well as high quality finishes. All of our products are well packaged and should reach you in perfect condition. Just in case however, we offer a minimum 5-year no quibble guarantee for all radiators and towel rails.

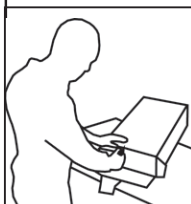

The Radiator Company must be notified of any shortages or damage within 28 days of delivery. For further information please see terms and conditions on back page.

2 Contents

You should have:

 
- 1 Radiator
- 1 Air Vent (1/2")
- 1 Blanking Plug
- 1 Plastic Diverter
- 1 Plastic Diverter Key
- 4 Wall Plugs
- 4 Brackets
- 4 Backing Plates
- 4 Hex Bolts
- 4 Grub Screws

You will need:

- Suitable Valves
- Tape Measure
- Spanner - 22mm
- Screwdriver - large flathead
- Electric drill
- Masonry drill bit - 10mm diameter
- Spirit level
- Stepladder (for taller radiators)

3 Bracket Positions

Accurately mark out bracket holes on wall using spirit level, to dimensions shown within the Technical Data section (see left). Once brackets positions have been marked out on the wall and checked with a spirit level, drill four 10mm holes to a minimum depth of 65mm and insert supplied wall plugs.

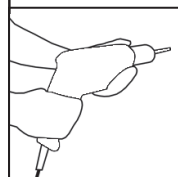



PLEASE NOTE :

It is essential that all brackets are level to ensure a vertical alignment for connecting the pipework.

Seta Line and Seta Groove are very heavy, therefore they should only be hung on solid walls.

4 Fix Brackets

  Using a suitable drill bit, screws and plugs, fix the brackets (F) to the wall using the supplied backing plates (G), then level with a spirit level.

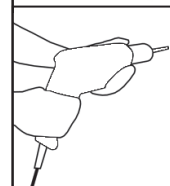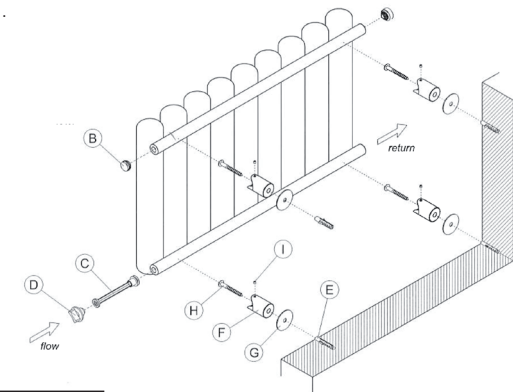


PLEASE NOTE :

It is essential that all brackets are level to ensure a vertical alignment for connecting the pipe work.

5 Identifying the Diverter

 Insert the diverter into the flow-side of the collector. Using the supplied key (D), screw the diverter (C) in fully.

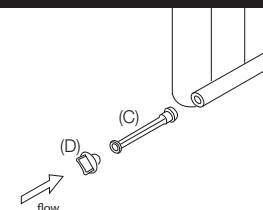

6 Hang Radiator & Commission

With the brackets (F) firmly fixed to the wall and the diverter (C) in place, undo the grub screws (I) on the brackets (F) with an allen key. Hang the radiator onto the brackets ensuring the radiator is fully seated onto all four brackets. Adjust brackets if necessary and tighten the grub screws. Before commissioning, remember to install the supplied Blanking Plug (B) and Airvent into opposite ends of the upper collector.

Please Note: In accordance with Part L1 2006 of the Building Regulations and BS7593:1992 code of practice for the treatment of hot water and central heating systems, we strongly recommend flushing the heating system post installation of new radiators and then adding the correct quantity and type of inhibitor for use with your radiator and system to prevent corrosion. Damage caused to systems not protected by a suitable inhibitor will not be covered by manufacturer's guarantee.