

Technical Specifications

Materials	Steel
Connections	½" flow and return.
Test pressure	8 Bar
Testing authority	EN442
Maximum operating pressure	6 Bar
Maximum working temperature	95 °C
Packaging	Polystyrene protection in cardboard box

PLEASE NOTE: Systems using micro bore pipework must have adequate pressure and flow rates for the number and style of radiators on the system.

Terms & Conditions

All products must be inspected once removed from the packaging and The Radiator Company notified within 28 days of delivery of any scratches, blemishes or other damage. The Radiator Company will then replace the radiator.

Imperfect radiators should therefore not be fitted and The Radiator Company will not accept responsibility for replacement of scratched or damaged radiators once they have been fitted. This includes any consequential loss or cost of fitting.

If The Radiator Company are not notified within 28 days of the date on the signed delivery note then it will be deemed that The Radiator Company have fully complied with its obligations and claims will not be considered.

Failure to comply with any of the above may invalidate any claims.

We recommend that after you check the product on delivery that it is stored in its packaging to prevent damage prior to installation. The Radiator Company cannot accept responsibility for items damaged after delivery.

Guarantees & Liabilities

As we are not the manufacturers of this product we will take all reasonable endeavours to make over to you the benefit of any warranty or guarantee given by the manufacturer, which is usually five years on most of our range. (Copies of specific guarantees for any of our products are available on request).

The guarantees in all cases are subject to the products being installed in accordance with British and or European standards as well as these fitting instructions. The guarantees in all cases are restricted to the free of charge replacement or repair of the failed product only. Our liability will under no circumstances extend beyond the repair or replacement of the product supplied by us. Claims for either labour in replacement or damage to property are not admissible. Any goods that are returned, in the event of a problem, will belong to The Radiator Company.

Fittings Instructions



Please read these instructions and terms and conditions carefully prior to installation. Failure to do so may invalidate the warranty


The Radiator Company
Units 13 - 14 Charlwoods Road
East Grinstead
West Sussex
RH19 2HU




TRIA1.2

Diagrams of Triarc

 
790 height

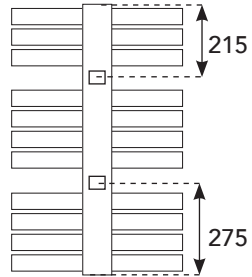


All Models

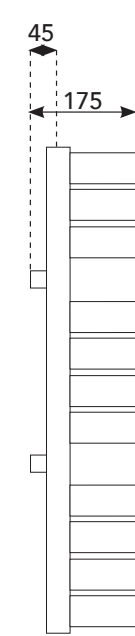 


1150 height

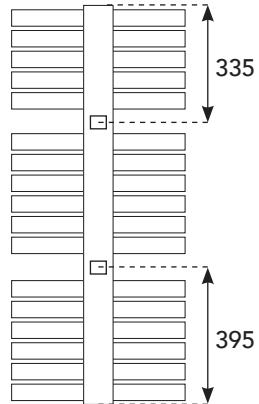 

1810 height

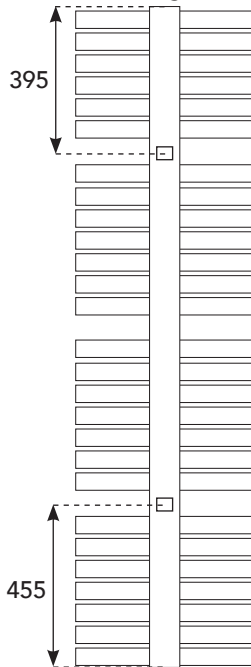 

1570 height

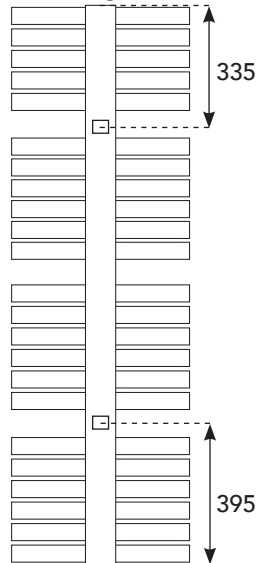 


Pipe Centres

Pipe centres left to right	50 mm
Pipe centres from wall	45 mm
Depth from wall	175 mm

1 Unpack & Inspect

 The Radiator Company prides itself on selecting products from manufacturers who exercise tight quality control measures. We only select models with excellent standards of welding and brazing, as well as high quality finishes. All of our products are well packaged and should reach you in perfect condition. Just in case however, we offer a minimum 5-year no quibble guarantee for all radiators and towel rails.

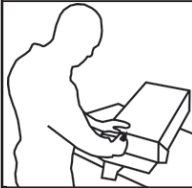

The Radiator Company must be notified of any shortages or damage within 28 days of delivery. For further information please see terms and conditions on back page.

2 Contents

You should have:

- 1 Towel Rail
- 1 Back Plate Cover
- 1 airvent
- 2 washers
- 2 hex bolts

You will need:

- Tape Measure
- Electric Drill
- Spirit Level
- Suitable drill bits and plugs

Please Note: The supplied wall plugs and screws may not be suitable for your wall type. Please ensure appropriate fittings are used dependant on your wall type.

 
3 Hanging

The brackets for the Triarc are all fixed onto the back of the towel rail.

1. Using the diagrams overleaf for your model, mark the position of the top bracket, then using suitable drill bits and plugs insert the provided bolt and washer loosely into the wall.

2. Offer up the radiator to the wall and check the position, if correct, secure the bolt and washer securely. Then mark and fix the bottom bolt and washer to the wall.


3. Lift the radiator to the wall and slide down so the bracket sits on top of the bolt, (with the washer in front of the bracket)

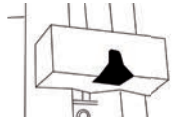

Bracket view

4. Using a spirit level, check the radiator is in a horizontally and vertically level position then using a screwdriver through the front of the radiator, tighten the bolts to secure the towel rail.

 5. Insert the cover plate down through the towel rail, and secure onto the back plate by firmly pressing into the white rubber lugs.

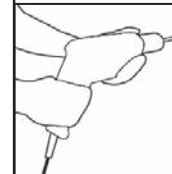

PLEASE NOTE :

It is essential that all brackets are level to ensure a vertical alignment for connecting the pipework.

4 Commission

Please Note:

In accordance with Part L1 2006 of the Building Regulations and BS7593:1992 code of practice for the treatment of hot water and central heating systems, we strongly recommend flushing the heating system post installation of new radiators and then adding the correct quantity and type of inhibitor for use with your radiator and system to prevent corrosion. Damage caused to systems not protected by a suitable inhibitor will not be covered by manufacturer's guarantee.