


PARTS

 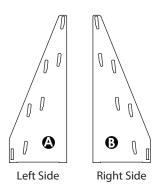


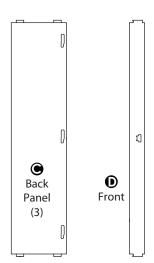

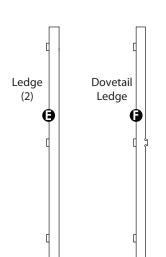


BEFORE YOU START

When inserting tabs into slots make sure the side with the wider lip on the tab faces the same direction as the notch in the slot.




ASSEMBLY INSTRUCTIONS

 
Insert all Ledges (() into the slots on a Back Panel (). Push down until flush on end to tighten.



Insert the Back Panel with Dovetail Ledge (a) into its slots on Side (a) as shown, and push sideways to tighten. Repeat process with the two Back Panels with Ledge (a), one after the other.

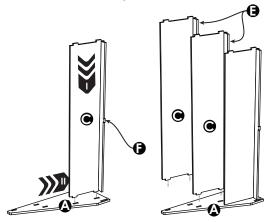

Insert the Front ① into its slot on Side ② in the orientation shown. Carefully slide the Dovetail on Ledge ③ into the slot on Front ①.

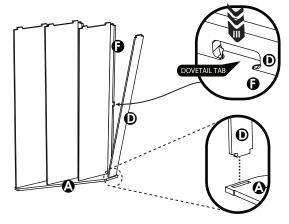

Carefully place Right Side (3) over tabs of Back Panels. Tabs should easily pop into the large side of the slots.






▲ Adult assembly only

Assemble completely before use





Carefully lay unit flat on ground, then tighten each Back Panel.

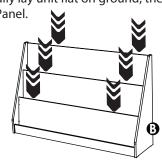



Talk to our customer service agent at:
+1 (833) 530-0033

Or watch our assembly video at:

sprout-kids.com/bds