



Ø (2) Dowels

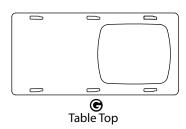







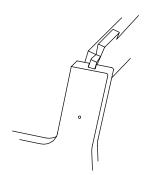


Grooves on Support Panels should be oriented inwards as pictured above.

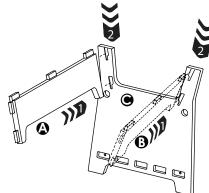


Insert tabs on Braces (A&B) into slots on **Side Panel** press down to lock.

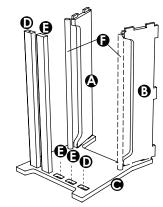

Insert Slats with holes into outer most slots on **Side Panel** (a). Insert remaining **Slats** (a) and **Dowels** (a) into designated places.

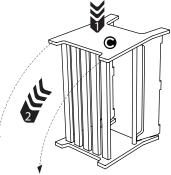


Set second **Side Panel** into position. It helps to start at one side fitting the dowels into the holes and work your way across one at a time. Carefully set upright.

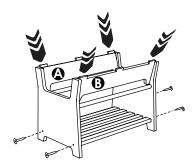

Press down on Braces 5 **A**& **B** to lock into place. Thread screws into slats with hex wrench.




Align up slots on **Table Top** with tabs on **Braces (3)**. Push down until flush with top of Side Panels.

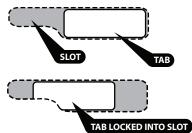


**Sprout Simple. Modern. American Made.

Using a rubber mallet, push the **Table Top** sideways so the tabs lock in with the notch as pictured above.

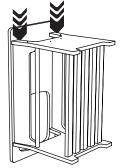

If necessary, carefully place unit on its end, and push down on top edge of **Side** Panels to tighten.

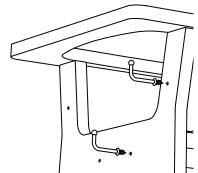


As desired, insert screw-in hooks into holes on outside of Side Panels. If necessary, tighten with pliers with support@sprout-kids.com jaws wrapped with cloth.

Dish and Hand Washing Station



 - ▲ Adult assembly only
- **A** Assemble completely before use
- Assemble on a hard floor
- ▲ Do not use this product without Adult Supervision



Talk to our customer service agent at:

+1 (833) 530-0033 Or email us at: