



Parts

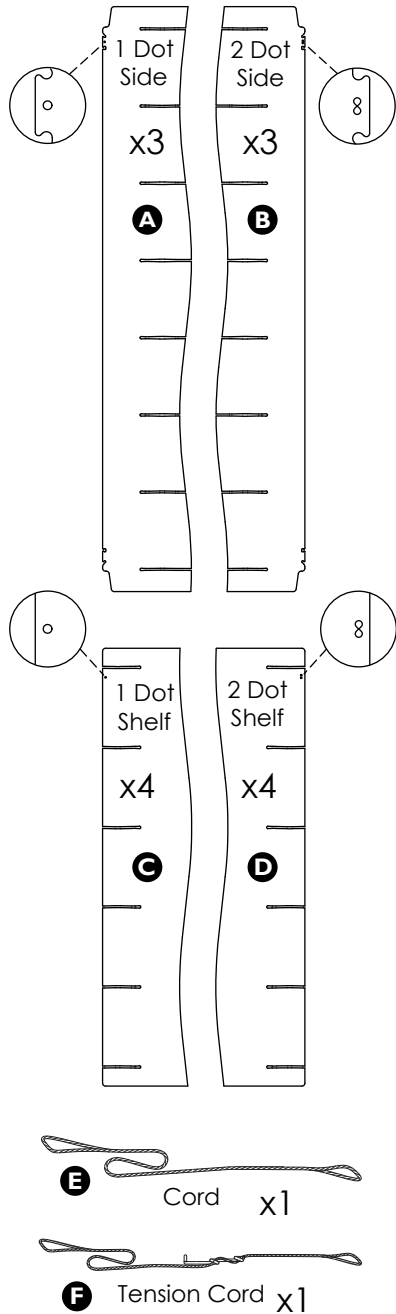

1


The Diagram to the right indicates both **location of parts** and their **orientation**. Arrange **A** and **B** so that the dot(s) are on the end indicated.

With the help of another person, insert **C** and **D** in the indicated order. Push down shelves evenly until flush with **A** and **B**.

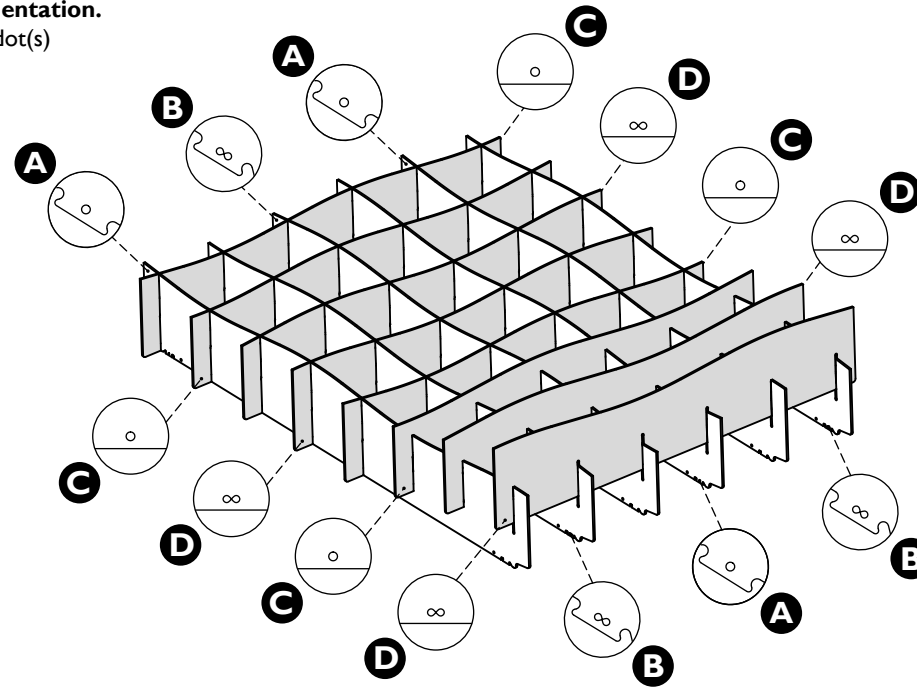


2

Loop ends of tension cord **E** around tabs of outermost vertical sides. Repeat process for tension cord **F** as shown.

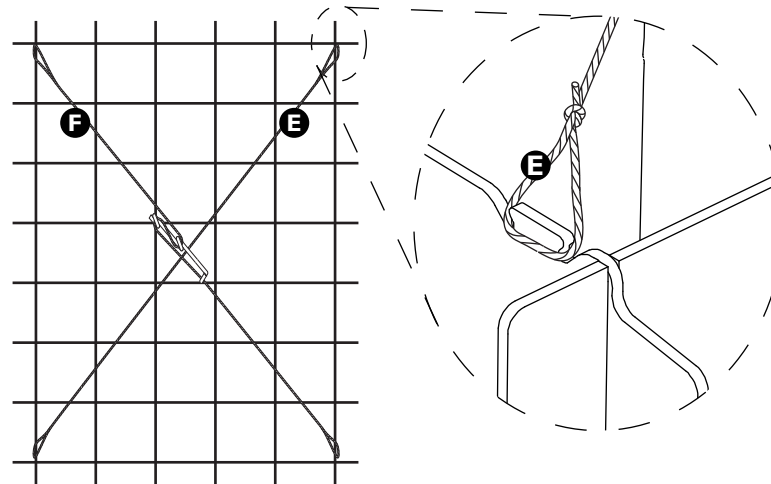


3

Twist **X** to tighten **F**. Loop tip of **X** around **F** to hold in place.

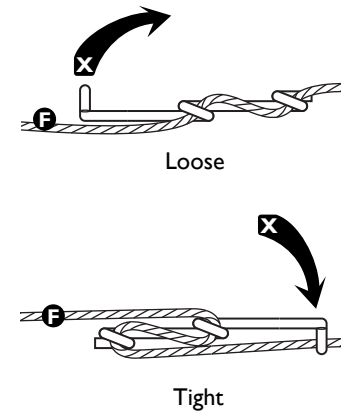

Instructions

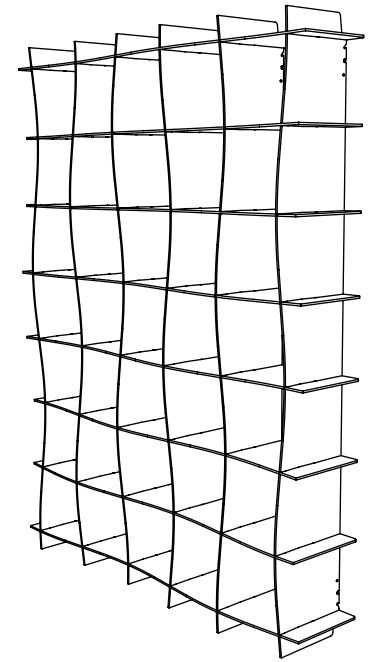

! If the furniture seems unstable, ensure that the Tension Lock tabs are completely pressed into place. If you have any concerns, contact us at:
www.sprout-kids.com/contact

X Disassembly

To disassemble, remove tensioner cords and lay the cubby shelf face up on the ground. Pull up on one of the shelves to separate from the rest, alternately lifting from one side to the other. Do the same for each shelf.

Need More Help?



Scan the QR Code or visit us online at www.sprout-kids.com for more ideas, assembly instructions, videos, to request replacement parts, and to see what's new at Sprout.

sprout-kids.com/gr7wa