
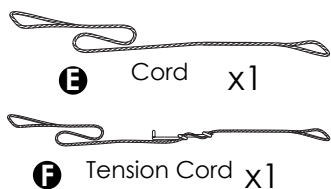
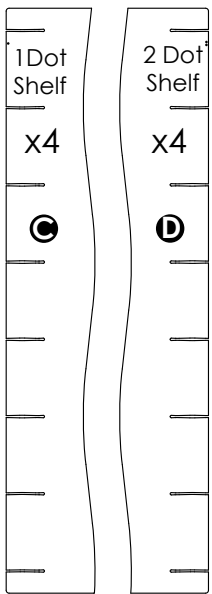




Parts

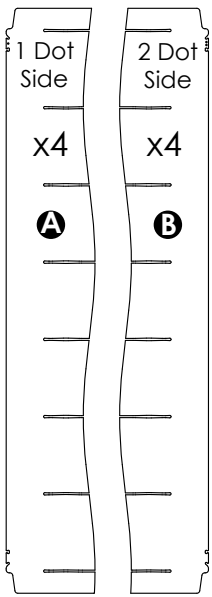


1 Follow the dot diagram below to:

Arrange (A) and (B).


Slide (C) and (D) in the corresponding order until flush with (A) and (B).

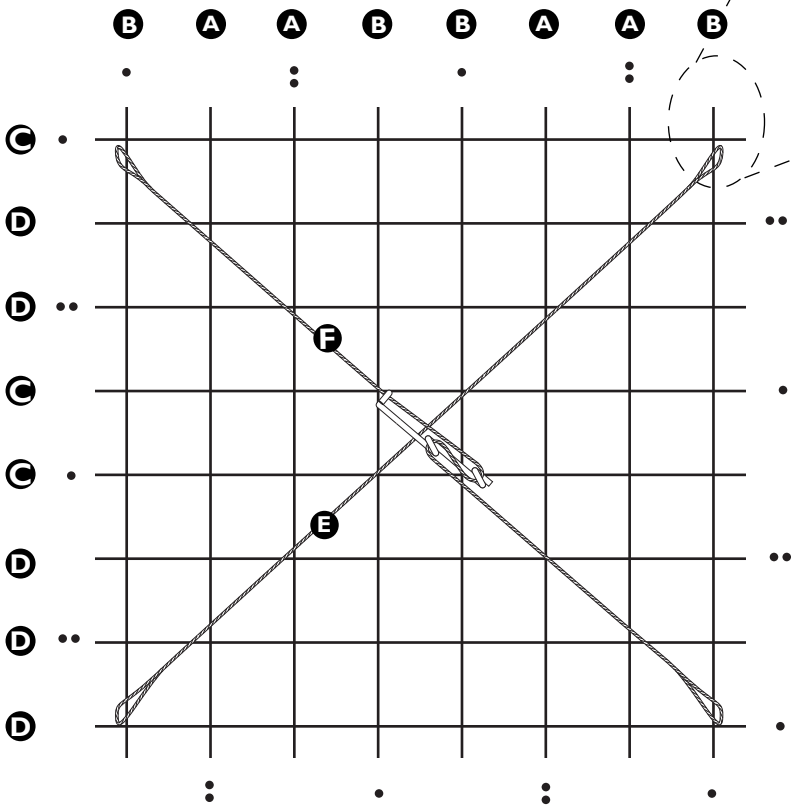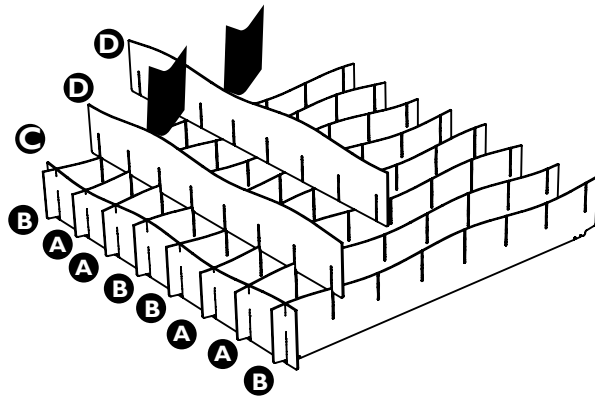


2 Loop ends of (E) to tabs on (B). Repeat on all 4 corners of the cubby.

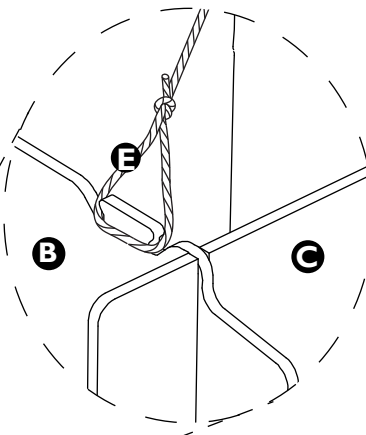

3 Twist (X) to tighten (F). Loop tip of (X) around (F) to hold in place.

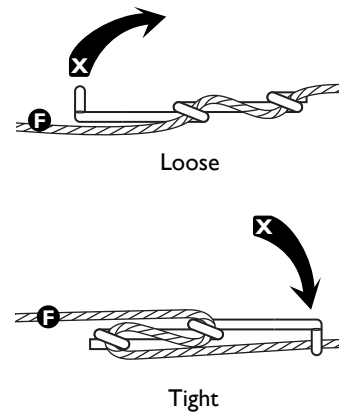

Instructions

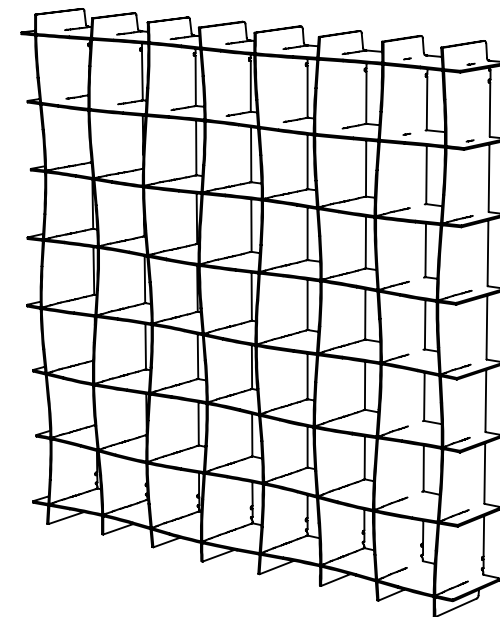

! If the furniture seems unstable, ensure that the Tension Lock tabs are completely pressed into place. If you have any concerns, contact us at: www.sprout-kids.com/contact

X Disassembly

To disassemble, remove tensioner cords and lay the cubby shelf face up on the ground. Pull up on one of the shelves to separate from the rest, alternately lifting from one side to the other. Do the same for each shelf.

Need More Help?



sqo.so/gra