

## **PARTS**

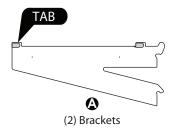

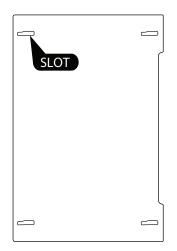


0


Desktop

## **ASSEMBLY INSTRUCTIONS**

Insert Brackets (a) into slotboard at desired height.
Ensure there are 4 empty slots between the two bracket locations.

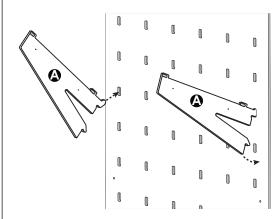


**2** Gently set Desktop **3** on top of brackets with the indented side facing back towards the slotboard, and the shelf slots facing down.

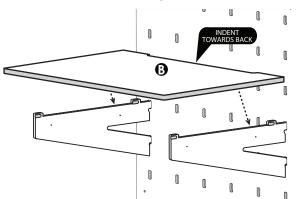


Place tabs into open slot.




Push desktop tight against slotboard to tighten the joints.

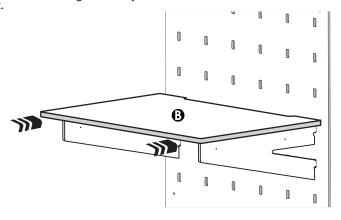

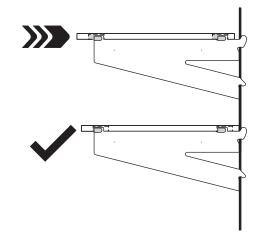

For disassembly, loosen tabs and remove desktop from brackets before removing brackets from slotboard.

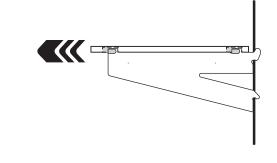



## MakerWall Desk

- ▲ Adult assembly only
- Assemble completely before use



Talk to our customer service agent at: +1 (833) 530-0033