 
 

PARTS






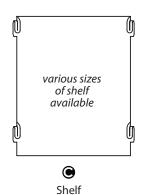


ASSEMBLY INSTRUCTIONS


Put Shelf (into Left Side (in orientation shown, with the grooves facing outward, and leading toward the front.

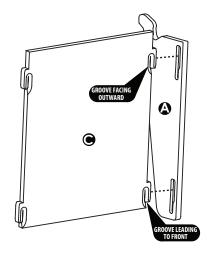


Push down on shelf to tighten. Is fully tight when back edge of shelf is flush with back edge of bracket.

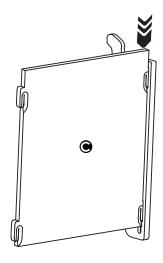


Repeat Steps 1 & 2 with Right Side **B**.

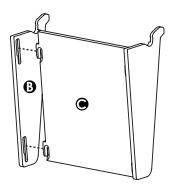

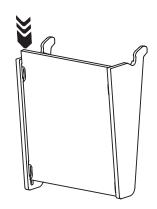


Position the Inclined Shelf on the slotboard as desired.

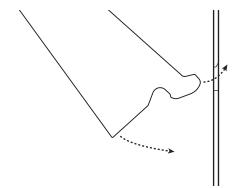



MakerWall Inclined Shelf

 - ▲ Adult assembly only
- Assemble completely before use



Talk to our customer service agent at: +1 (833) 530-0033