


 
## **PARTS**

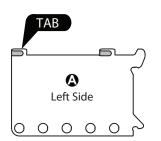


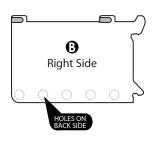

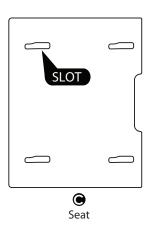




## **BEFORE YOU START**

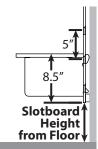


Install Slotboard so that the seat will be at the correct height for the intended user.

User	Slotboard Position	Seat Height	Slotboard Height from Floor
Child	Bottom Row	13"	4.5"
Child	1 Row Up	13"	0"
Adult	Bottom Row	18"	9.5"
Adult	1 Row Up	18"	4.5"


Holding both sides together, put into Slotboard at desired height per 1.

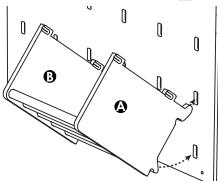

Gently set Seat on top of sides with the indented side facing back towards the slotboard, and the shelf slots facing down.

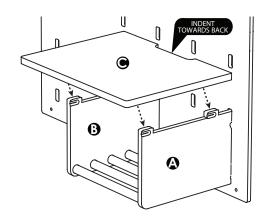


Push Seat @tight against slotboard to tighten the joints.

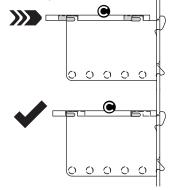




## MakerWall Seat

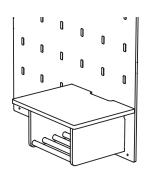

 - Adult assembly only
- Assemble completely before use




Talk to our customer service agent at: +1 (833) 530-0033




For disassembly,

loosen tabs and remove Seat from sides before removing sides from slotboard.

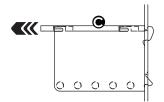

## **ASSEMBLY INSTRUCTIONS**

Press (5) Dowels **()** into Left Side **(4)**. They will crush on the nub as they go in. This will prevent the dowels from rotating.

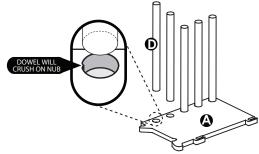

Lift Left Side  $oldsymbol{oldsymbol{A}}$  with the (5) Dowels  $oldsymbol{oldsymbol{0}}$  above Right Side  $oldsymbol{oldsymbol{G}}$ , and carefully press in one dowel at a time, moving from left to right.

Once all the dowels have **started** entering their holes, **finish** pressing them in completely by pushing firmly or using a rubber mallet.

