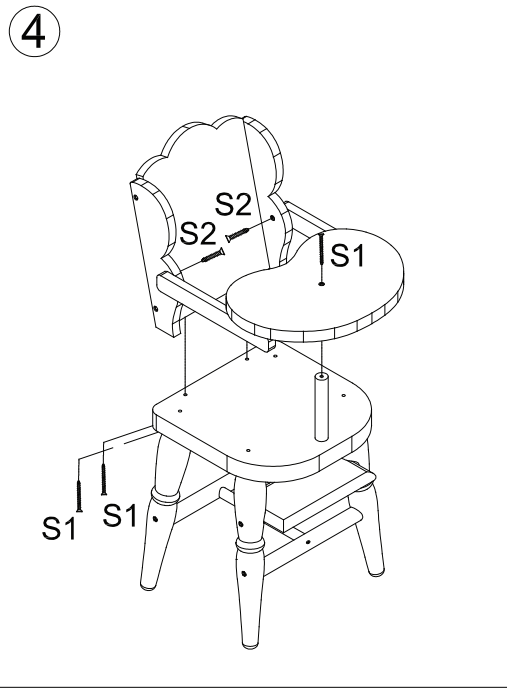 
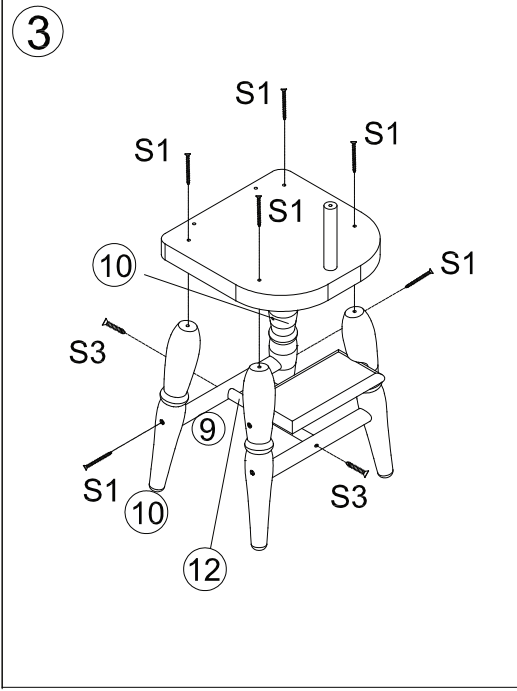 
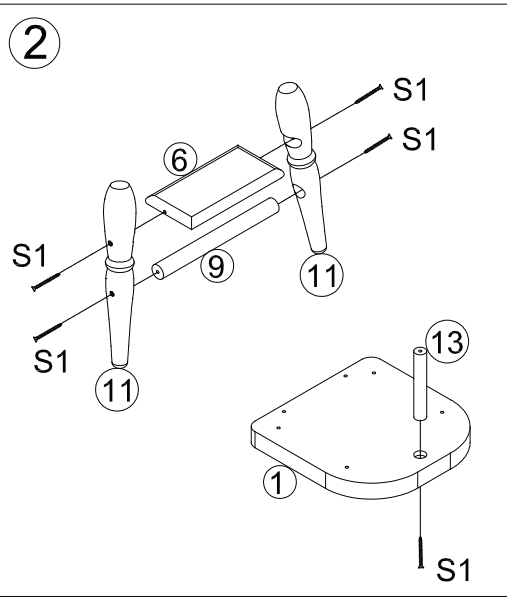 
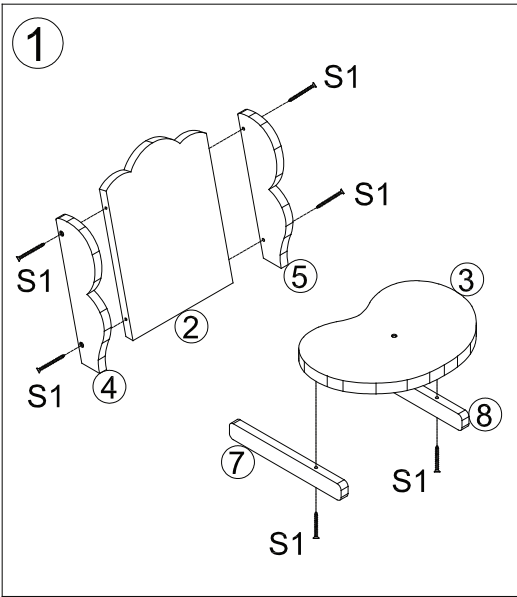 
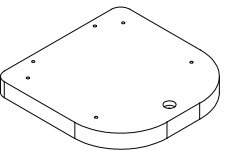 
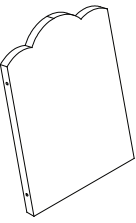 
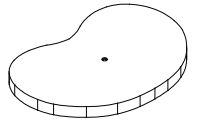 


 
 
 
 
 

 






ASSEMBLY INSTRUCTION TV601



PART LIST

1	 x 1	2	 x 1	3	 x 1
4	 x 1	5	 x 1	6	 x 1
7	 x 1	8	 x 1	9	 x 2
10	 x 2	11	 x 2	12	 x 1
13	 x 1	S1	 30 MM x 20	S2	 14 MM x 2
		S3		S3	 24 MM x 2

ADULT ASSEMBLE