

Depend on the right or left opening door, you should change the gear and spring accordingly the drawing.



