





DESCRIPTION

Coffee powder accessories

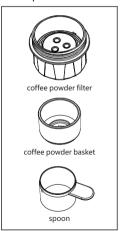

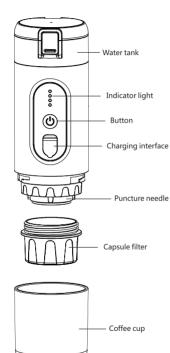

A:

SECURITY WARNING

Please careful reading the following instruction manual before use to avoid personal injury or damage of the machine.

- This product is for personal use only.
- After opening the package, confirm that the product intact and whether all accessories are complete.
- This product include packaging bags and other tiny accessories, please keep out of reach of children.
- Do not drink directly to avoid empyrosis..
- Do not place the coffee maker in gas or electric burners, ovens, microwave ovens or dishwashers.
- Please do not add any other liquid, such as milk, except water.
- Added water in cup. Please don't exceed the maximum tick mark.
- Please clean the machine after every use. The main body of the machine is not recommended to be washed directly.
- Do not use non-company recommended accessories.

 Maybe cause damage.
- Please do not continue using, if the coffee machine has broken down.

COFFEE MACHINE BUTTON OPERATION INSTRUCTIONS


- Power display mode: press the button once in 1 second and the indicator will be off after 3 seconds.
- Heating mode: press the button twice within 1 second to start heating.
 Shout off automatically after extraction.
- Direct extraction mode: pour hot water into water tank, press the button longer than 2 seconds to start extraction.

PRODUCT PARAMETERS

Voltage	12V、10A	Power	38W
Battery capacity	2500mAh x3	Pump pressure	18Bar
Capsule	Nespresso Capsule (standard size)	coffee ground capacity	8g
Tank Capacity	60ml(max)	Net Weight	780g
size	ф72x220mm	Application	Coffee capsule/ coffee powder

INSTRUCTION

Powder extraction

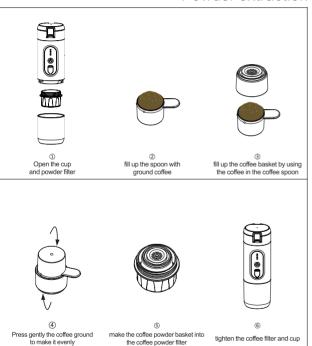

INSTRUCTION

Capsule extraction

