

LASER CARTRIDGES

Never point the laser cartridge at anyone. The laser can damage the eye from exposure.

To use the laser cartridge, you will need to manually put the batteries into the cartridge. Screw the cap off the back of the laser cartridge to insert the batteries. The engraved side of all 3 batteries need to be facing down into the laser cartridge.



The laser cartridge needs to be directly loaded into the chamber. DO NOT load the laser cartridge from a magazine. Loading the laser cartridge in a magazine may result in damage to your firearm and the laser cartridge.

If you find that the laser cartridge won't load fully into the chamber, you can lubricate the laser cartridge's O rings with a small amount of gun oil.

When you're finished using the laser cartridge in your firearm, you can remove it by pushing it out with a cleaning rod, eraser end of a pencil, or a screw driver.

The Strikeman Laser Cartridge has a soft rubber button at the back that absorbs the impact of the firing pin so the firing pin doesn't get damaged. The laser cartridge will not damage your firearm.

The laser cartridge takes 3 LR626 batteries. Batteries are included in every Strikeman Laser Cartridge purchase. You should be able to get between 1500 to 2000 shots from 3 full LR626 batteries. If you need to replace them, they're widely available at any store that sells batteries.

All firearms work properly with the Strikeman Laser Cartridge with the exception of the firearms listed below:

Ruger SR series, Ruger P95, Walther PPS, Walther CCP and Beretta AX100