

## TARGET & PHONE MOUNT

The target is designed to be visible above your phone, so you can see the entire target while shooting. If the view of the target is being covered by the phone, you can use the objects (such as books) to increase the height of the target over the phone.



To assemble the phone mount, unscrew the cylinder counter clockwise and pull it apart downwards from the middle piece.



Detach the tripod, turn the tripod on its legs, and screw in the phone mount piece.



The phone mount is a fully adjustable tripod that accommodates most smart phones. The phone holder adjusts lengthwise to hold your phone. Press the phone holder lengthwise to open it and place your phone in the holder.



Once the phone is in the holder, you can adjust the rotation of the phone and angle to get your phone camera pointed at the target correctly. Ensure that the phone is within 2 to 10 feet from the target.