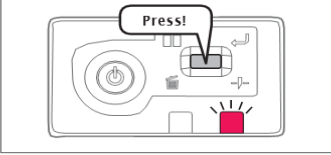


Replacing ink cartridge


When ink level becomes low, the error LED of the operation panel flashes and a buzzer sounds. Printing pauses temporarily. It restarts after changed with a new ink cartridge.

Steps

- [1]  Short press the operation key on the operation panel.
- The buzzer stops.

- [2] Check the ink cartridge that needs to be replaced.


- Check [Status Information] also.

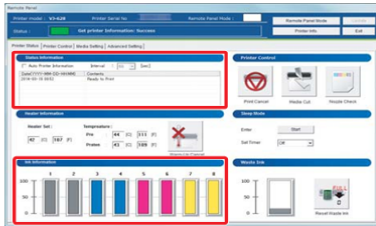

When it becomes time to replace ink cartridge


When the ink level becomes low, the error LED of the operation panel flashes and a buzzer sounds.

Steps

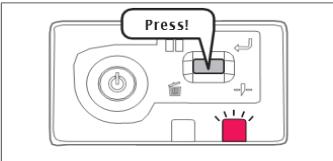- [1]  Short press the operation key on the operation panel.
- The buzzer stops.



- [2] Check the ink cartridge that needs to be replaced.

- Check [Status Information] also.

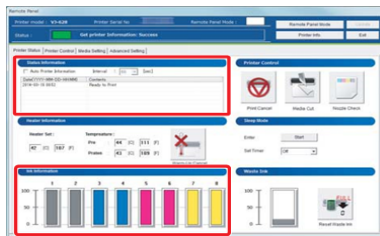


- [3] Prepare an ink cartridge to replace.

- Check [Status Information] also.

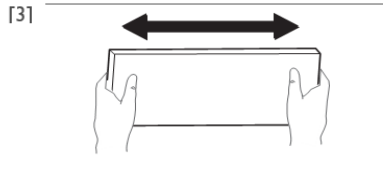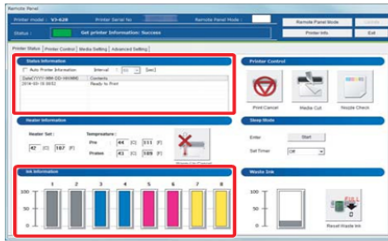

Shake the ink cartridge 2 or 3 times lightly.

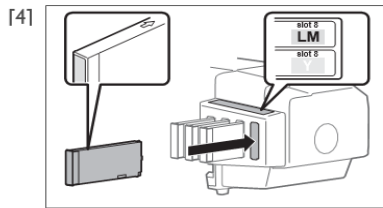


Remove the empty ink cartridge and insert the new one.

- Make sure to match the ink cartridge color with the label of this product.
- The arrow should face up.
- Insert all the way to the end.

Important!

- Do not replace ink cartridge when the power of this product is OFF. Ink level cannot be detected correctly.
- If ink cartridge is moved from cold to warm place, leave it at least 3 hours.

WARNING

-  Leave ink cartridges away from fire or high temperature objects. It may cause fire.